

CITIZEN

***Command Reference***

---

**LINE THERMAL PRINTER**

**MODEL CT-S2000**

Rev. 0.03 Issued on July 21, 2006

**CITIZEN SYSTEMS JAPAN CO.,LTD.**



# TABLE OF CONTENTS

<b>1. OUTLINE</b> .....	<b>5</b>
<b>1.1 Operation Mode</b> .....	<b>5</b>
<b>1.2 Character Set</b> .....	<b>5</b>
<b>1.3 Control Commands</b> .....	<b>5</b>
<b>1.3.1 Control Command Details</b> .....	<b>5</b>
<b>1.3.2 How to Send Control Commands</b> .....	<b>5</b>
<b>2. CONTROL COMMANDS</b> .....	<b>6</b>
<b>2.1 ESC/POS Command List</b> .....	<b>6</b>
<b>2.1.1 Description of Items</b> .....	<b>9</b>
<b>2.2 Command Details</b> .....	<b>10</b>
<b>2.2.1 Print Control Commands</b> .....	<b>10</b>
<b>LF</b> (Printing and paper feed) .....	<b>10</b>
<b>CR</b> (Back to printing) .....	<b>10</b>
<b>FF</b> (Printing in PAGE MODE and returning to STANDARD MODE).....	<b>11</b>
<b>ESC FF</b> (Printing data in PAGE MODE).....	<b>12</b>
<b>ESC J n</b> (Printing and feeding paper in minimum pitch) .....	<b>12</b>
<b>ESC d n</b> (Printing and feeding the paper by "n" lines).....	<b>13</b>
<b>2.2.2 Print Character Commands</b> .....	<b>14</b>
<b>CAN</b> (Canceling print data in PAGE MODE).....	<b>14</b>
<b>ESC SP n</b> (Setting the right spacing of the character).....	<b>15</b>
<b>ESC ! n</b> (Collectively specifying the printing mode) .....	<b>16</b>
<b>ESC % n</b> (Specifying/Canceling download character set).....	<b>18</b>
<b>ESC &amp; s n m [a [p] s x a] m-n+1</b> (Defining the download characters).....	<b>19</b>
<b>ESC - n</b> (Specifying/canceling underline).....	<b>20</b>
<b>ESC ? n</b> (Deleting download characters) .....	<b>21</b>
<b>ESC E n</b> (Specifying/canceling emphasis printing).....	<b>22</b>
<b>ESC G n</b> (Specifying/canceling double strike printing).....	<b>23</b>
<b>ESC M n</b> (Selection of character fonts).....	<b>24</b>
<b>ESC R n</b> (Selecting the international character set).....	<b>24</b>
<b>ESC V n</b> (Specifying/canceling 90°-right-turned characters) .....	<b>25</b>
<b>ESC t n</b> (Selecting the character code table) .....	<b>26</b>
<b>ESC { n</b> (Specifying/canceling the inverted characters) .....	<b>27</b>
<b>ESC ~ J n (Valid in CBM1000II-Compatible Mode)</b> (Specifies/cancels printing in red).....	<b>28</b>
<b>DC3 n (Valid in CBM1000II-Compatible Mode)</b> (Specifies/cancels printing in red) .....	<b>29</b>
<b>GS ! n</b> (Specifying the character size).....	<b>30</b>
<b>GS B n</b> (Specifying/canceling the black/white inverted printing) .....	<b>31</b>
<b>GS b n</b> (Specifying/canceling the smoothing).....	<b>32</b>
<b>2.2.3 Print Position Commands</b> .....	<b>33</b>
<b>HT</b> (Horizontal tab) .....	<b>33</b>
<b>ESC \$ n1 n2</b> (Specifying the absolute positions) .....	<b>34</b>
<b>ESC D [ n ] k NULL</b> (Setting horizontal tab position) .....	<b>35</b>
<b>ESC T n</b> (Selecting the character printing direction in PAGE MODE).....	<b>36</b>
<b>ESC W xL xH yL yH dxL dxH dyL dyH</b> (Defining the print area in PAGE MODE).....	<b>37</b>
<b>ESC \ nL nH</b> (Specifying the relative position) .....	<b>38</b>
<b>ESC a n</b> (Aligning the characters).....	<b>39</b>
<b>GS \$ nL nH</b> (Specifying the absolute vertical position of characters in PAGE MODE).....	<b>40</b>
<b>GS L nL nH</b> (Setting the left margin) .....	<b>41</b>
<b>GS W nL nH</b> (Setting the print area width) .....	<b>42</b>
<b>GS \ nL nH</b> (Specifying the relative vertical position of a character in PAGE MODE).....	<b>44</b>

<b>2.2.4 Line Feed Span Commands</b> .....	45
<b>ESC 2</b> (Specifying 1/6-inch line feed rate).....	45
<b>ESC 3 n</b> (Setting line feed rate of minimum pitch).....	46
<b>2.2.5 Bit Image Commands</b> .....	47
<b>ESC * m n1 n2 [ d ] k</b> (Specifying the bit image mode).....	47
<b>GS * n1 n2 [ d ] n1 x n2 x 8</b> (Defining the download bit image).....	49
<b>GS / m</b> (Printing the downloaded bit image).....	51
<b>GS v 0 m xL xH yL yH d1...dk</b> (Printing of raster bit image).....	52
<b>2.2.6 Status Commands</b> .....	54
<b>DLE EOT n</b> (Sending status in real-time).....	54
<b>ESC u n (Serial Model Only)</b> (Transmitting the status of peripheral equipment).....	57
<b>ESC v n (Serial Model Only)</b> (Sending Printer status).....	58
<b>GS a n</b> (Enabling/disabling ASB).....	59
<b>GS r n</b> (Sending status).....	62
<b>2.2.7 Paper Detecting Commands</b> .....	64
<b>ESC c 3 n</b> (Selecting the Paper Sensor valid for Paper-end signal output).....	64
<b>ESC c 4 n</b> (Selecting the Paper Near-end Sensor valid for print stop).....	65
<b>2.2.8 Panel Switch Commands</b> .....	66
<b>ESC c 5 n</b> (Enabling/disabling the panel switches).....	66
<b>2.2.9 Macro Commands</b> .....	67
<b>GS :</b> (Starting/ending macro definition).....	67
<b>GS ^ n1 n2 n3</b> (Executing the macro).....	68
<b>2.2.10 Cutter Commands</b> .....	69
<b>ESC i</b> (Full cut).....	69
<b>ESC m</b> (Partial cut).....	70
<b>GS V m</b> ..... <b>(1)</b> (Cutting the paper).....	71
<b>GS V m n</b> ..... <b>(2)</b> (Cutting the paper).....	71
<b>2.2.11 Bar Code Commands</b> .....	72
<b>GS H n</b> (Selecting of printing position of HRI characters).....	72
<b>GS f n</b> (Selecting the font of HRI characters).....	74
<b>GS h n</b> (Specifying the height of the bar code).....	75
<b>GS k m [d1 ..... dk] NULL</b> ..... <b>(1)</b> (Printing the bar code).....	76
<b>GS k m n [d1 ..... dn]</b> ..... <b>(2)</b> (Printing the bar code).....	76
<b>GS w n</b> (Specifying the horizontal size (magnification) of bar code).....	82
<b>2.2.12 Commands for Non-volatile Memory</b> .....	83
<b>GS ( C pL pH m fn b[c1 c2][d1...dk]</b> (Editing user NV memory).....	83
fn = 0, 48: Function 0 Erasing Specified Record.....	84
fn = 1, 49: Function 1 Storing Data to Specified Record.....	84
fn = 2, 50: Function 2 Sending Data Stored in Specified Record.....	85
fn = 3, 51: Function 3 Sending Use Amount.....	86
fn = 4, 52: Function 4 Sending Remaining Capacity.....	86
fn = 5, 53: Function 5 Sending Key Code List of Stored Record.....	87
fn = 6, 54: Function 6 Erasing All User NV Memory Area in a Lump.....	88

<b>GS ( L pL pH m fn [parameter]</b> (Specifying graphics data).....	89
<b>GS 8 L p1 p2 p3 p4 m fn [parameter]</b> (Specifying graphics data) .....	89
fn = 0, 48: Function 48 Sending NV Graphics Memory Capacity.....	90
fn = 2, 50: Function 50 Printing Graphics Data Stored in Print Buffer .....	90
fn = 3, 51: Function 51 Sending the Remaining Amount of NV Graphics Memory .....	90
fn = 64: Function 64 Sending Key Code List of Defined NV Graphics.....	91
fn = 65: Function 65 Erasing All Data of NV Graphics in a Lump.....	92
fn = 66: Function 66 Erasing Specified NV Graphics Data .....	92
fn = 67: Function 67 Defining Raster Type Graphics Data to NV Memory .....	93
fn = 69: Function 69 Printing Specified Graphics.....	94
fn = 112: Function 112 Storing Raster Type Graphics Data to Print Buffer.....	95
<b>GS g 0 m nL nH</b> (Initializing maintenance counter).....	96
<b>GS g 2 m nL nH</b> (Sending maintenance counter).....	97
<b>F S p n m</b> (Printing the download NV bit images) .....	98
<b>F S q n [xL xH yL yH d1...dk] 1... [xL xH yL yH d1...dk] n</b> (Defining the download NV bit image) .....	99
<b>2.2.13 Black Mark Control Commands</b> .....	101
<b>GS FF (Valid Only at B.M Model)</b> (Printing and ejecting Black mark paper).....	101
<b>GS &lt; (Valid Only at B.M Model)</b> (Initializing the printer mechanism) .....	101
<b>GS A m n (Valid Only at B.M Model)</b> (Correcting the leader position of Black mark paper) .....	102
<b>GS C 0 m n</b> (Setting the numbering print mode) .....	103
<b>GS C 1 n1 n2 n3 n4 n5 n6</b> (Setting the numbering counter mode (A)).....	104
<b>GS C 2 n1 n2</b> (Setting the numbering counter).....	105
<b>GS C ; n1 ; n2 ; n3 ; n4 ; n5 ;</b> (Setting the numbering counter mode (B)) .....	106
<b>GS c</b> (Print the counter).....	107
<b>GS l n1L n1H n2L n2H</b> (Setting the Black mark length).....	108
<b>2.2.14 Printer Function Setting Commands</b> .....	109
<b>GS ( D pL pH m [a1 b1] ... [ak bk]</b> (Enabling or disabling real-time command).....	109
<b>GS ( E pL pH fn [ ... ]</b> (Printer function setting command).....	110
fn = 1: Function 1 Transferring to Printer Function Setting Mode.....	111
fn = 2: Function 2 End of Printer Function Setting Mode.....	111
fn = 3: Function 3 Setting Memory Switch Value.....	112
fn = 4: Function 4 Sending the Set Memory Switch Value .....	115
fn = 5: Function 5 Setting Customized Value .....	116
fn = 6: Function 6 Sending the Set Customized Value .....	119
fn = 7: Function 7 Copying User-defined Page .....	122
fn = 8: Function 8 Defining Data by the Column Format to Character Code Page of Work Area..	123
fn = 9: Function 9 Defining Data in the Raster Format to the Character Code Page of Work Area .....	124
fn = 10: Function 10 Erasing Data of Character Code Page Data in Work Area .....	125
fn = 11: Function 11 Setting Communication Conditions.....	126
fn = 12: Function 12 Sending the Set Communication Conditions .....	128
fn = 255: Function 255 Setting All Contents Set by Printer Function Setting Mode to the State at Shipment.....	129
<b>GS ( K pL pH fn m</b> (Selecting print control method).....	130
fn = 48: Function 48 Setting Print Control Mode .....	130
fn = 49: Function 49 Setting Printing Density .....	131
fn = 50: Function 50 Setting Printing Speed .....	132
<b>GS ( M pL pH fn m</b> (Customizing the printer) .....	133
fn = 1, 49: Function 1 : Copies the set value stored in work area to the storage area .....	134
fn = 2, 50: Function 2 : Copies the set value stored in storage area to the work area .....	134
fn = 3, 51: Function 3 : Specifies the auto loading function of the set value at initialization to be valid or invalid ..	135
<b>GS ( N pL pH fn m</b> (Designating font attribute).....	136
fn = 48: Function 48: Selects character color.....	136

<b>2.2.15 Other Commands</b> .....	<b>137</b>
<b>DLE ENQ n</b> (Real-time request to printer) .....	137
<b>DLE DC4 fn m t (Specification of fn = 1)</b> (Outputting specified pulse in real-time) .....	138
<b>DLE DC4 fn d1...d7 (Specification of fn = 8)</b> (Buffer clear).....	139
<b>ESC = n (CBM1000 compatible mode)</b> (Data input control).....	140
<b>ESC = n (CBM1000 non-compatible mode)</b> (Data input control) .....	141
<b>ESC @</b> (Initializing the printer) .....	142
<b>ESC L</b> (Selecting PAGE MODE) .....	143
<b>ESC S</b> (Selecting STANDARD MODE).....	144
<b>ESC p m n1 n2</b> (Generating the specified pulses) .....	145
<b>ESC RS</b> (Sound buzzer).....	146
<b>GS ( A pL pH n m</b> (Execution of test printing) .....	147
<b>GS I n</b> (Sending the printer ID).....	148
<b>GS P x y</b> (Specifying the basic calculation pitch).....	150
<b>3. CHARACTER CODE TABLE</b> .....	<b>151</b>
<b>3.1 Code Page</b> .....	<b>151</b>
<b>3.1.1 Codepage 00H to 7FH &amp; PC437 (USA, Europe Standard)</b> .....	151
<b>3.1.2 Codepage 00H to 7FH &amp; Katakana</b> .....	152
<b>3.1.3 Codepage 00H to 7FH &amp; PC850 (Multilingual)</b> .....	153
<b>3.1.4 Codepage 00H to 7FH &amp; PC860 (Portuguese)</b> .....	154
<b>3.1.5 Codepage 00H to 7FH &amp; PC863 (Canadian-French)</b> .....	155
<b>3.1.6 Codepage 00H to 7FH &amp; PC865 (Nordic)</b> .....	156
<b>3.1.7 Codepage 00H to 7FH &amp; PC852 (Eastern Europe)</b> .....	157
<b>3.1.8 Codepage 00H to 7FH &amp; PC866 (Russian)</b> .....	158
<b>3.1.9 Codepage 00H to 7FH &amp; PC857 (Turkish)</b> .....	159
<b>3.1.10 Codepage 00H to 7FH &amp; PC864 (Arabic)</b> .....	160
<b>3.1.11 Codepage 00H to 7FH &amp; WPC1252</b> .....	161
<b>3.1.12 Codepage 00H to 7FH &amp; Thai Code 18</b> .....	162
<b>3.2 International Character Code Table</b> .....	<b>163</b>
<b>4. APPENDIX</b> .....	<b>164</b>
<b>4.1 Explanation on PAGE MODE</b> .....	<b>164</b>
<b>4.1.1 Overview</b> .....	164
<b>4.1.2 Values Set by Each Command in STANDARD MODE and PAGE MODE</b> .....	164
<b>4.1.3 Mapping of Print Data in the Print Area</b> .....	165
<b>4.1.4 Example of Using PAGE MODE</b> .....	166
<b>4.2 Bidirectional Parallel Interface</b> .....	<b>169</b>
<b>4.2.1 Parallel Interface Communication Mode</b> .....	169
<b>4.2.2 Interfacing Phases</b> .....	169
<b>4.2.3 Negotiation</b> .....	170
<b>4.3 Identification of Send Status</b> .....	<b>175</b>
<b>4.4 Memory Switch</b> .....	<b>176</b>
<b>4.4.1 Memory Switches</b> .....	176
<b>4.4.2 Details of Memory Switches</b> .....	178
<b>MSW1</b> .....	178
<b>MSW2</b> .....	180
<b>MSW3</b> .....	182
<b>MSW4</b> .....	183
<b>MSW5</b> .....	184
<b>MSW7</b> .....	185
<b>MSW8</b> .....	187
<b>MSW9</b> .....	187
<b>MSW10</b> .....	188

# 1. OUTLINE

## 1.1 Operation Mode

CT-S2000 has ESC/POSTM as control commands.

## 1.2 Character Set

All print data sent from the host computer to the printer are automatically converted to one-byte alphanumeric or katakana characters (ANK) or two-byte Kanji corresponding to the characters and symbols.

**NOTE:** For the contents of character set, refer to Character Code Table of this document.

## 1.3 Control Commands

### 1.3.1 Control Command Details

Control Commands are used for controlling the operations of the printer such as starting/stopping of printing, line feeding, paper feeding, etc. They control all functions related to printing, such as type of characters, enlargement of characters or setting of format.

### 1.3.2 How to Send Control Commands

Some methods are available for sending Control Commands from the host computer to the printer. Here, a method of sending by BASIC programming is explained.

#### Example 1

Let's print a character string "CITIZEN" in enlarged (double-height, double-width) and in normal format.

#### Program coding

The Control Command shows that the command name for setting the size of a character is GS !. Let's make a program using this code. An example is shown below.

Program List

```
10 A$="CITIZEN"  
20 LPRINT CHR$(&H1D);"!"; CHR$(&H33);  
30 LPRINT A$;  
40 LPRINT CHR$(&HA); CHR$(&HA);  
50 LPRINT CHR$(&H1D);"!"; CHR$(&H00);  
60 LPRINT A$;  
70 END
```

Print Result

```
CITIZEN  
  
CITIZEN
```

In lines 20 and 50, setting and canceling of enlarging a character is sent. As a result, lines 30 and 60 print the same character string but line 30 prints enlarged characters and line 60 cancels the enlargement and prints in normal format.

\* In this document, sample programs are in BASIC. For details of BASIC programming, refer to the manual for BASIC.

## 2. CONTROL COMMANDS

### 2.1 ESC/POS Command List

#### Print Control Commands

Command	Function	MODE	GS P
LF	Printing and paper feed	S.P.	
CR	Back to printing	S.P.	
FF	Printing in PAGE MODE and returning to STANDARD MODE (at the selection of PAGE MODE)	P	
ESC FF	Printing data in PAGE MODE	P	
ESC J	Printing and feeding paper in minimum pitch	S.P.	○
ESC d	Printing and feeding the paper by "n" lines	S.P.	

#### Print Character Commands

Command	Function	MODE	GS P
CAN	Canceling print data in PAGE MODE	P	
ESC SP	Setting the right spacing of the character	S.P.	○
ESC !	Collectively specifying the printing mode	S.P.	
ESC %	Specifying/Canceling download character set	S.P.	
ESC &	Defining the download characters	S.P.	
ESC -	Specifying/canceling underline	S.P.	
ESC ?	Deleting download characters	S.P.	
ESC E	Specifying/canceling emphasis printing	S.P.	
ESC G	Specifying/canceling double strike printing	S.P.	
ESC M	Selection of character fonts	S.P.	
ESC R	Selecting the international character set	S.P.	
ESC V	Specifying/canceling 90°-right-turned characters	S	
ESC t	Selecting the character code table	S.P.	
ESC {	Specifying/canceling the inverted characters	S	
ESC ~ J	Specifies/cancels printing in red (black-based paper)	S.P.	
DC3	Specifies/cancels printing in red (black-based paper)	S	
GS !	Specifying the character size	S.P.	
GS B	Specifying/canceling the black/white inverted printing	S.P.	
GS b	Specifying/canceling the smoothing	S.P.	

#### Print Position Commands

Command	Function	MODE	GS P
HT	Horizontal tab	S.P.	
ESC \$	Specifying the absolute positions	S.P.	○
ESC D	Setting horizontal tab position	S.P.	
ESC T	Selecting the character printing direction in PAGE MODE	P	
ESC W	Defining the print area in PAGE MODE	P	○
ESC \	Specifying the relative position	S.P.	○
ESC a	Aligning the characters	S	
GS \$	Specifying the absolute vertical position of characters in PAGE MODE	P	○
GS L	Setting the left margin	S	○
GS W	Setting the print area width	S.P.	○
GS \	Specifying the relative vertical position of a character in PAGE MODE	S.P.	○



### Line Feed Span Commands

Command	Function	MODE	GS P
ESC 2	Specifying 1/6-inch line feed rate	S.P.	
ESC 3	Setting line feed rate of minimum pitch	S.P.	○

### Bit Image Commands

Commands	Function	MODE	GS P
ESC *	Specifying the bit image mode	S.P.	
GS *	Defining the download bit image	S.P.	
GS /	Printing the downloaded bit image	S.P.	
GS v 0	Printing of raster bit image	S	

### Status Commands

Command	Function	MODE	GS P
DLE EOT	Sending status in real-time	S.P.	
ESC u	Transmitting the status of peripheral equipment (Serial Mode Only)	S.P.	
ESC v	Sending Printer status	S.P.	
GS a	Enabling/disabling ASB (Automatic Status Back)	S.P.	
GS r	Sending status	S.P.	

### Paper Detecting Commands

Command	Function	MODE	GS P
ESC c 3	Selecting the Paper Sensor valid for Paper-end signal output	S.P.	
ESC c 4	Selecting the Paper Near-end Sensor valid for print stop	S.P.	

### Panel Switch Commands

Command	Function	MODE	GS P
ESC c 5	Enabling/disabling the panel switches	S.P.	

### Macro Commands

Command	Function	MODE	GS P
GS :	Starting/ending macro definition	S.P.	
GS ^	Executing the macro	S.P.	

### Cutter Commands

Command	Function	MODE	GS P
ESC i	Full cut		
ESC m	Partial cut		
GS V	Cutting the paper	S.P.	○

### Bar Code Commands

Command	Function	MODE	GS P
GS H	Selecting of printing position of HRI characters	S.P.	
GS f	Selecting the font of HRI characters	S.P.	
GS h	Specifying the height of the bar code	S.P.	
GS k	Printing the bar code	S.P.	
GS w	Specifying the horizontal size (magnification) of bar code	S.P.	

### Commands for Non-volatile Memory

Command	Function	MODE	GS P
GS ( C	Editing user NV memory	S	
GS ( L GS 8 L	Specifying graphics data	S	
GS g 0	Initializing maintenance counter	S	
GS g 2	Sending maintenance counter	S	
FS p	Printing the download NV bit images	S	
FS q	Defining the download NV bit image	S	

### Black Mark Control Commands

Command	Function	MODE	GS P
GS FF	Printing and ejecting Black mark paper	S.P.	
GS <	Initializing the printer mechanism	S.P.	
GS A	Correcting the leader position of Black mark paper	S.P.	
GS C 0	Setting the numbering print mode	S.P.	
GS C 1	Setting the numbering counter mode (A)	S.P.	
GS C 2	Setting the numbering counter	S.P.	
GS C ;	Setting the numbering counter mode (B)	S.P.	
GS c	Print the counter	S.P.	
GS l	Setting the Black mark length	S.P.	

### Printer Function Setting Commands

Command	Function	MODE	GS P
GS ( D	Enabling or disabling real-time command	S	
GS ( E	Printer function setting command	S	
GS ( K	Selecting print control method	S	
GS ( M	Customizing the printer	S	
GS ( N	Designating font attribute	S	

### Other Commands

Command	Function	MODE	GS P
DLE ENQ	Real-time request to printer	S.P.	
DLE DC4	Outputting specified pulse in real-time	S.P.	
ESC =	Data input control	S.P.	
ESC @	Initializing the printer	S.P.	
ESC L	Selecting PAGE MODE	S	
ESC S	Selecting STANDARD MODE	P	
ESC p	Generating the specified pulses	S.P.	
ESC RS	Sound buzzer	S.P.	
GS ( A	Execution of test printing	S	
GS I	Sending the printer ID	S.P.	
GS P	Specifying the basic calculation pitch	S.P.	

In the Mode column: S = STANDARD MODE, P = PAGE MODE  
O = shows the command affected by GS P.

## 2.1.1 Description of Items

### XXXX

---

<b>[Function]</b>	The name of a command.
<b>[Code]</b>	The string of codes comprising the command is represented by < >H for hexadecimal numbers, < >B for binary numbers, and < > for decimal numbers, [ ] k denotes the number of repetition of "k" times.
<b>[Range]</b>	Indicates the values (setting range) of arguments of the command. <b>Note:</b> If values outside the defined domain specified with control codes are used, malfunctions could possibly occur, so be sure to use the values within the defined domain.
<b>[Outline]</b>	Describes the functions of the command.
<b>[Caution]</b>	Describes important points and cautionary notes, as required.
<b>[Default]</b>	Initial values for the command if it has arguments.
<b>[See Also]</b>	Describes commands related to the command when it is used.
<b>[Sample Program]</b>	Describes examples of coding on Quick-Basic. * Examples are only for reference. They may vary depending on language and version. For details, please refer to a manual in your language.
<b>[Print Results]</b>	Describes the print results obtained by executing the above programs. However, the print results shown are different in scale from actual print results

## 2.2 Command Details

### 2.2.1 Print Control Commands

#### LF

---

- [Function]** Printing and paper feed
- [Code]** <0A>H
- [Outline]** Prints data inside the print buffer and feeds paper based on the line feed amount having been set.
- [Caution]** After this command is executed, the beginning of the line is taken as the start position for the next point.
- [See Also]** ESC 2, ESC 3

**[Sample Program]**

```
LPRINT "AAA"; CHR$(&HA);  
LPRINT "BBB"; CHR$(&HA); CHR$(&HA);  
LPRINT "CCC"; CHR$(&HA);
```

**[Print Results]**

```
AAA ← Print and line feed  
BBB ← Print and line feed  
    ← Line feed only  
    ← CCC Print and line feed
```

#### CR

---

- [Function]** Back to printing
- [Code]** <0D>H
- [Outline]** (1) When memory switch 1-5 is OFF:  
This command is ignored.  
(2) When memory switch 1-5 is ON:  
The same operation as LF is executed.
- [See Also]** LF

**[Sample Program]**

```
LPRINT "AAA"; CHR$(&HD);  
LPRINT "BBB"; CHR$(&HD);  
LPRINT CHR$(&HD);  
LPRINT "CCC"; CHR$(&HD);
```

**[Print Results]**

```
In case of (2)  
AAA ← Print and line feed  
BBB ← Print and line feed  
    ← Line feed only  
CCC ← Print and line feed
```

## FF

---

**[Function]** (1) Printing in PAGE MODE and returning to STANDARD MODE (at the selection of PAGE MODE)  
(2) Printing of Black mark and paper feeding to the top of the print position (with Black mark paper selected)

**[Code]** <0C>H

(1) At selection of PAGE MODE

**[Outline]** Executes a batch printout of the data mapped in the entire print area, and then returns to STANDARD MODE.

**[Caution]**

- All mapped data is erased after printout.
- The print area set up by ESC W is initialized.
- This command does not execute a paper cut.
- After this command is executed, the beginning of the line is taken as the start position for the next print.
- This command is only effective when the PAGE MODE is selected.

**[See Also]** Appendix 4.1.4 "Example of Using PAGE MODE"  
ESC FF, ESC L, ESC S

(2) At selection of Black mark paper (valid only for Black mark specification)

**[Outline]** This command prints the data in the printer buffer and searches for the head of the next Black mark (Black mark position)

**[Caution]**

- This command does not execute a paper cut.
- After this command is executed, the beginning of the line is taken as the start position for the next print.

**[See Also]** GS FF

## ESC FF

---

<b>[Function]</b>	Printing data in PAGE MODE
<b>[Code]</b>	<1B>H<0C>H
<b>[Outline]</b>	Executes a batch printout of the data mapped in the entire print area in PAGE MODE.
<b>[Caution]</b>	<ul style="list-style-type: none"><li>• This command is only effective when PAGE MODE is selected.</li><li>• Mapped data, as well as the ESC T and ESC W settings, and the character mapping position are held even after printing.</li></ul>
<b>[See Also]</b>	Appendix 4.1 "Explanation on PAGE MODE" FF, ESC L, ESC S


## ESC J n

---

<b>[Function]</b>	Printing and feeding paper in minimum pitch
<b>[Code]</b>	<1B>H<4A>H<n>
<b>[Range]</b>	0≤n≤255
<b>[Outline]</b>	Prints the data held in the print buffer and feeds paper by [n · basic calculation pitch] inches.
<b>[Caution]</b>	<ul style="list-style-type: none"><li>• After this command is executed, the beginning of the line is taken as the start position for the next print.</li><li>• The line feed width can be set separately for the STANDARD and PAGE MODES.</li><li>• This command does not affect the line feed width defined by ESC 2 or ESC 3.</li><li>• The basic calculation pitch is set by GS P.</li><li>• Fractions resulting from calculation are corrected with the minimum pitch of the mechanism, and the remainder is omitted.</li><li>• In STANDARD MODE, this command uses the vertical (paper feed direction) basic calculation pitch (y).</li><li>• In PAGE MODE, this command acts differently depending on the start point:<ol style="list-style-type: none"><li>(1) If the start point specified by ESC T is top left or bottom right, the command uses the vertical (Paper feed direction) basic calculation pitch (y).</li><li>(2) If the start point specified by ESC T is top right or bottom left, the command uses the horizontal (Perpendicular to the paper feed direction) basic calculation pitch (x).</li></ol></li><li>• The maximum settable line feed width is 1016 mm (40 inches). A setting greater than this maximum is trimmed to the maximum.</li></ul>
<b>[Default]</b>	The initial value is not defined.
<b>[Sample Program]</b>	Refer to Sample Program and Print Results for ESC 2.

## ESC d n

---
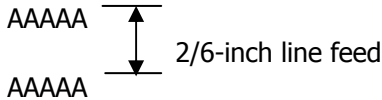
<b>[Function]</b>	Printing and feeding the paper by "n" lines
<b>[Code]</b>	<1B>H<64>H<n>
<b>[Range]</b>	0≤n≤255
<b>[Outline]</b>	Prints data in the print buffer and feeds paper by "n" lines. Specified lines do not remain.
<b>[Caution]</b>	<ul style="list-style-type: none"><li>• After this command is executed, the beginning of the line is taken as the start position for the next print.</li><li>• If [n x line feed width] exceeds approximately 1016 mm, this command feeds paper by approximately 1016 mm (40 inches).</li></ul>
<b>[Default]</b>	The initial value is not defined.
<b>[Sample Program]</b>	<pre>LPRINT "AAAAA"; LPRINT CHR\$(&amp;H1B);"d"; CHR\$(2); LPRINT "AAAAA"; CHR\$(&amp;HA);</pre>
<b>[Print Results]</b>	 <p>AAAAA AAAAA</p> <p>2/6-inch line feed</p>

## 2.2.2 Print Character Commands

### **CAN**

---

<b>[Function]</b>	Canceling print data in PAGE MODE
<b>[Code]</b>	<18>H
<b>[Outline]</b>	Erases all data contained in the currently effective print area in PAGE MODE.
<b>[Caution]</b>	<ul style="list-style-type: none"><li>• This command is only effective when PAGE MODE is selected.</li><li>• If the previously established print area overlaps the currently effective print area, the overlapped data in the previously established area will be erased.</li></ul>
<b>[See Also]</b>	Appendix 4.1 "Explanation on PAGE MODE" ESC L, ESC W



## ESC SP n

---

<b>[Function]</b>	Setting the right spacing of the character
<b>[Code]</b>	<1B>H<20>H<n>
<b>[Range]</b>	0≤n≤255
<b>[Outline]</b>	Sets the right spacing of character to [n x basic calculation pitch] inches.
<b>[Caution]</b>	<ul style="list-style-type: none"><li>• If the horizontal magnification of character is 2 or more, the right spacing increases with the magnification.</li><li>• Does not affect Kanji.</li><li>• The right spacing can be set separately for the STANDARD and PAGE MODES.</li><li>• The basic calculation pitch is set by GS P. Once defined, the right spacing is not changed if the basic calculation pitch is changed by GS P.</li><li>• Fractions resulting from calculation are corrected with the minimum pitch of the mechanism, and the remainder is omitted.</li><li>• In STANDARD MODE, this command uses the horizontal basic calculation pitch (x).</li><li>• In PAGE MODE, the basic calculation pitch used by this command depends on the start point:<ol style="list-style-type: none"><li>(1) If the start point specified by ESC T is top left or bottom right, the command uses the horizontal basic calculation pitch (x).</li><li>(2) If the start point specified by ESC T is top right or bottom left, the command uses the vertical basic calculation pitch (y).</li></ol></li><li>• The maximum right spacing is capable of approximately 31.906 mm (255/203 inches). A setting greater than this maximum is trimmed to the maximum.</li></ul>
<b>[Default]</b>	n = 0
<b>[See Also]</b>	GS P
<b>[Sample Program]</b>	<pre>LPRINT CHR\$(&amp;H1B);" "; CHR\$(0); LPRINT "AAAAA"; CHR\$(&amp;HA); LPRINT CHR\$(&amp;H1B);" "; CHR\$(1); LPRINT "AAAAA"; CHR\$(&amp;HA); LPRINT CHR\$(&amp;H1B);" "; CHR\$(12); LPRINT "AAAAA"; CHR\$(&amp;HA);</pre>
<b>[Print Results]</b>	<pre>AAAAA ← 0-dot space A A A A A ← 1-dot space A A A A A ← 12-dots space</pre>

## ESC ! n

**[Function]** Collectively specifying the printing mode

**[Code]** <1B>H<21>H<n>

**[Range]**  $0 \leq n \leq 255$

**[Outline]** Printing mode is assigned.

Bit	Function	Value	
		0	1
0	Character Font	Font A (12 x 24)	Font B (9 x 24)
1	Undefined	—	—
2	Undefined	—	—
3	Emphasis	Canceled	Specified
4	Double height	Canceled	Specified
5	Double width	Canceled	Specified
6	Undefined	—	—
7	Underline	Canceled	Specified

**[Caution]**

- With double height and double width being specified simultaneously, quadruple characters are created.
- An underline is attached to the full character width, which, however, is not attached to the part having been skipped by the horizontal tab (HT). Neither is it attached to 90°-right-turned characters.
- The underline width is as specified by the ESC – command. (The default setting is 1 dot width.)
- Setting by this command is invalid for Kanji except setting and canceling of enhanced printing.
- In case characters with different vertical magnification ratios coexist on the same line, they are printed on the same base line.
- ESC E, ESC M, ESC –, and GS ! can individually set or cancel the mode but the command processed last is valid.
- Setting or canceling of enhanced 3rd bit is valid for alphanumeric and kana and kanji. Other print mode is valid only for alphanumeric and kana characters.
- Setting memory SW 3-7 to ON allows the horizontal and vertical relations to be interchanged when 90°-right-turning of character is specified.


**[Default]** n = 0

**[See Also]** ESC E, ESC –, GS !

**[Sample Program]**

```
LPRINT CHR$(&H1B);"!"; CHR$(&H00);"H";  
LPRINT CHR$(&H1B);"!"; CHR$(&H01);"H";  
LPRINT CHR$(&H1B);"!"; CHR$(&H08);"H";  
LPRINT CHR$(&H1B);"!"; CHR$(&H10);"H";  
LPRINT CHR$(&H1B);"!"; CHR$(&H20);"H";  
LPRINT CHR$(&H1B);"!"; CHR$(&H80);"H";  
LPRINT CHR$(&H1B);"!"; CHR$(&HB9);"H";  
LPRINT CHR$(&HA);
```

**[Print Results]**

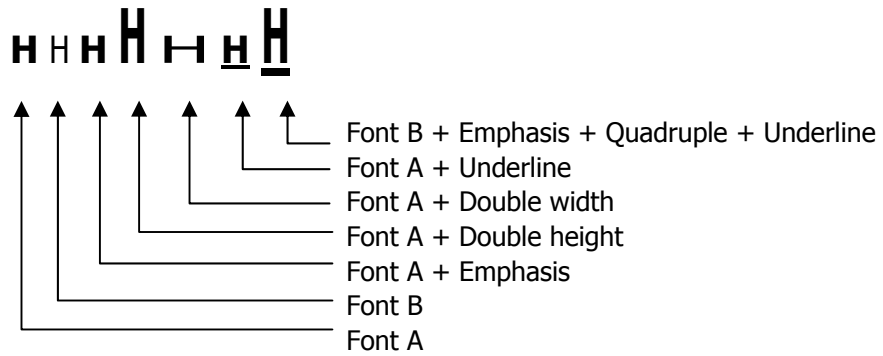

## ESC % n

**[Function]** Specifying/canceling download character set

**[Code]** <1B>H<25>H<n>

**[Range]** 0≤n≤255

**[Outline]** Specifying/canceling download characters.

- "n" is valid only for the lowest bit (n0).
- Control by the lowest bit (n0) is shown as follows:

n0	Function
0	Canceling download character set
1	Specifying download character set

**[Default]** n = 0

**[See Also]** ESC &

### [Sample Program]

```

GOSUB SETCHR
LPRINT CHR$(&H1B);"%" ; CHR$(0);
LPRINT "@A"; CHR$(&HA);
LPRINT CHR$(&H1B);"%" ; CHR$(1);
LPRINT "@A"; CHR$(&HA);
END
SETCHR:
LPRINT CHR$(&H1B);"&";
LPRINT CHR$(3);"@";"A";
FOR J=1 TO 2
  READ REP
  LPRINT CHR$(REP);
  FOR I=1 TO REP*3
    READ D
    LPRINT CHR$(D);
  NEXT I
NEXT J
RETURN
DATA 6
DATA &HFF, &H80, &H00
DATA &H80, &H80, &H00
DATA &H80, &H80, &H00
DATA &H80, &H80, &H00
DATA &HFF, &HFF, &HFF
DATA &HFF, &HFF, &HFF
DATA 12
DATA &HFF, &HFF, &HFF
DATA &H80, &H07, &HF9
DATA &H80, &HFF, &HF9
DATA &H87, &HFE, &H01
DATA &H9F, &H06, &H01
DATA &HF8, &H06, &H01
DATA &HF8, &H06, &H01
DATA &H9F, &H06, &H01
DATA &H87, &HFE, &H01
DATA &H80, &HFF, &HF9
DATA &H80, &H07, &HF9
DATA &HFF, &HFF, &HFF

```

### [Print Results]

@A ← Internal character set  
 □ A ← Download character

# ESC & s n m [a [p] s x a] m-n+1

**[Function]** Defining the download characters

**[Code]** <1B>H<26>H<s>H<n>H<m>H[<a>H<p1>H<p2>··<ps x a>]m - n + 1

**[Range]** s = 3 (Font A, B)  
s = 2 (Font C)  
32 ≤ n ≤ m ≤ 126  
0 ≤ a ≤ 12 (Font A)  
0 ≤ a ≤ 9 (Font B)  
0 ≤ a ≤ 8 (Font C)  
0 ≤ p1..ps x a ≤ 255

**[Outline]** Defines the font of download characters of alphanumeric characters.


- "s" indicates the number of bytes in vertical direction.
- "n" indicates the start character code and "m" the end character code. To define only one character, set n = m.
- Character codes definable includes 95 ASCII codes in total in the range of <20>H to <7E>H.
- "a" indicates the number of dots to be defined in horizontal direction.
- "p" is the data to be defined, which indicate a pattern equal to "a" dots in horizontal direction from the left end. The rest of the pattern on the right side is filled with space.
- The number of data to be defined is "s x a".
- Download characters thus defined remain valid until redefinition, execution of ESC @, GS \*, FS q, GS (A, deletion by ESC ?, or power OFF is performed.

**[Caution]** • Download characters and download bit images cannot be defined simultaneously.  
• Running this command clears the definition of the download bit image.

**[Default]** Same as the internal character set.

**[See Also]** ESC %, ESC ?

**[Example]**

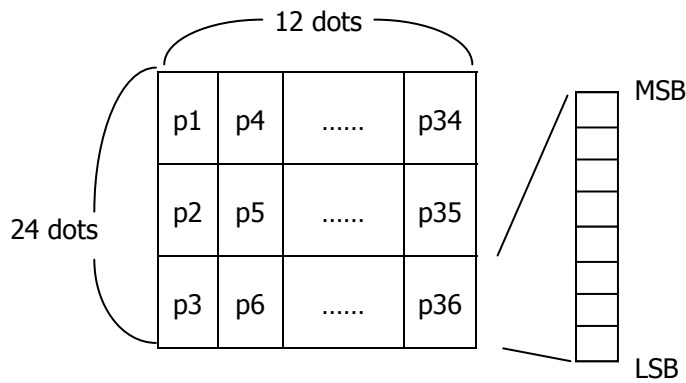

Font A

Create each data bit by setting "1" for a printed dot and "0" for an unprinted dot.

**[Sample Program]** Refer to Sample Program and Print Results for ESC %.

## ESC – n

---

**[Function]** Specifying /canceling underline

**[Code]** <1B>H<2D>H<n>

**[Range]**  $0 \leq n \leq 2$   
 $48 \leq n \leq 50$

**[Outline]** Specifying /canceling an underline.

n	Function
0, 48	Canceling underline
1, 49	Setting 1-dot width underline
2, 50	Setting 2-dot width underline

- [Caution]**
- An underline is attached to the full character width. It is, however, not attached to the part having been skipped by horizontal tab (HT) command.
  - An underline is not attached to 90°-right-turned characters and white-on-black character.
  - Underline can also be specified/canceled by ESC ! but the setting of command last processed is valid.
  - Specifying/canceling by this command is not valid for kanji.
  - Underline width is constant in the specified thickness regardless of the character size.

**[Default]** n = 0

**[See Also]** ESC !, FS –

**[Sample Program]**

```
LPRINT CHR$(&H1B);"-"; CHR$(0);  
LPRINT "AAAAA";  
LPRINT CHR$(&H1B);"-"; CHR$(1);  
LPRINT "AAAAA"; CHR$(&HA);
```

**[Print Results]**

Underline canceled  
    ↔  
    A A A A A A A A A A  
            ↔  
            Underline specified

## **ESC ? n**

---

<b>[Function]</b>	Deleting download characters
<b>[Code]</b>	<1B>H<3F>H<n>
<b>[Range]</b>	32≤n≤126
<b>[Outline]</b>	Deletes the downloaded characters of specified code.
<b>[Caution]</b>	<ul style="list-style-type: none"><li>• The character "n" indicates the character code used to delete the defined pattern. After the deletion, characters are printed in the same pattern as the internal characters.</li><li>• This command deletes the code-defined pattern of the character font selected by ESC !.</li><li>• This command is ignored if the specified character code is undefined.</li></ul>
<b>[See Also]</b>	ESC &, ESC %

## ESC E n

---

**[Function]** Specifying/canceling emphasis printing

**[Code]** <1B>H<45>H<n>

**[Range]** 0≤n≤255

**[Outline]** Specifying/canceling the emphasized characters.

- "n" is valid only for the lowest bit (n0).
- Control by the lowest bit (n0) is shown as follows:

n0	Function
0	Canceling emphasis printing
1	Specifying emphasis printing

**[Caution]**

- Emphasis printing can also be specified/canceled by ESC ! but the setting of command last processed is valid.
- Valid for all character types except HRI characters.

**[Default]** n = 0

**[See Also]** ESC !

**[Sample Program]**

```
LPRINT CHR$(&H1B);"E"; CHR$(0);  
LPRINT "AAABBB"; CHR$(&HA);  
LPRINT CHR$(&H1B);"E"; CHR$(1);  
LPRINT "AAABBB"; CHR$(&HA);
```

**[Print Results]**

```
AAABBB ← Emphasis canceled  
AAABBB ← Emphasis specified
```



## ESC G n

---

**[Function]** Specifying/canceling double strike printing

**[Code]** <1B>H<47>H<n>

**[Range]** 0≤n≤255

**[Outline]** Specifying /canceling the double strike printing.

- "n" is valid only for the lowest bit (n0).
- Control by the lowest bit (n0) is shown as follows:

n0	Function
0	Canceling double strike printing
1	Specifying double strike printing

**[Caution]**

- With this printer, double-strike printing and emphasis printing provide completely the same results.
- Valid for all character types except HRI characters.

**[Default]** n = 0

**[See Also]** ESC E

**[Sample Program]**

```
LPRINT CHR$(&H1B);"G"; CHR$(0);  
LPRINT "AAABBB"; CHR$(&HA);  
LPRINT CHR$(&H1B);"G"; CHR$(1);  
LPRINT "AAABBB"; CHR$(&HA);
```

**[Print Results]**

```
AAABBB ← Double strike printing canceled  
AAABBB ← Double strike printing specified
```

## ESC M n

---

**[Function]** Selection of character fonts

**[Code]** <1B>H<4D>H<n>

**[Range]**  $0 \leq n \leq 2$   
 $48 \leq n \leq 50$

**[Outline]** Selects character fonts.

n	Function
0, 48	Selection of font A (12 x 24)
1, 49	Selection of font B (9 x 24)
2, 50	Selection of font C (8 x 16)

**[Caution]** • ESC ! can also select fonts, but the setting made by the command that has last been processed becomes valid.

**[Default]** n = 0

**[See Also]** ESC !

## ESC R n

---

**[Function]** Selecting the international character set

**[Code]** <1B>H<52>H<n>

**[Range]**  $0 \leq n \leq 15$

**[Outline]** Depending on the value of "n", one of the following character sets is specified;

n	Character Set	n	Character Set
0	U.S.A.	8	Japan
1	France	9	Norway
2	Germany	10	Denmark II
3	U.K.	11	Spain II
4	Denmark I	12	Latin America
5	Sweden	13	Korea
6	Italy	14	Croatia
7	Spain I	15	China

**[Default]** n = 0 (Overseas), n = 8 (Domestic)

**[See Also]** 3.2 "International Character Code Table"

# ESC V n

**[Function]** Specifying/canceling 90°-right-turned characters

**[Code]** <1B>H<56>H<n>

**[Range]**  $0 \leq n \leq 1$   
 $48 \leq n \leq 49$

**[Outline]** Specifying/canceling 90°-right-turned characters.

n	Function
0, 48	Canceling 90°-right-turned characters
1, 49	Specifying 90°-right-turned characters

**[Caution]**


- No underlines are attached to 90°-right-turned characters.
- This command does not affect PAGE MODE but setting is maintained.

**[Default]** n = 0

**[Sample Program]**

```
LPRINT CHR$(&H1B);"V"; CHR$(0);  
LPRINT "AAAAA";  
LPRINT CHR$(&H1B);"V"; CHR$(1);  
LPRINT "AAAAA"; CHR$(&HA);
```

**[Print Results]**

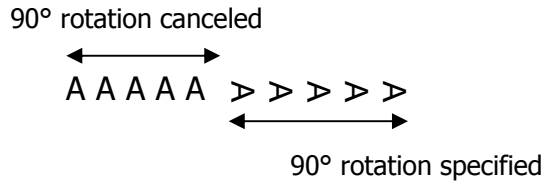

# ESC t n

**[Function]** Selecting the character code table

**[Code]** <1B>H<74>H<n>

**[Range]**  $0 \leq n \leq 9$   
 $16 \leq n \leq 19$   
 $n = 26, 40, 255$

**[Outline]** Selecting the character code table.  
 The character code table is selected based on the value of "n".

n	Character Code Table
0	Codepage PC437
1	Katakana
2	Codepage PC850
3	Codepage PC860
4	Codepage PC863
5	Codepage PC865
6, 18	Codepage PC852
7, 17	Codepage PC866
8	Codepage PC857
9, 16	WPC1252
19	Codepage PC858
26	Thai code 18
40	Codepage PC864
255	Space Page (For user setting)

**[Default]** This is a character code table specified with the value of "n".

**[Sample Program]**

```
LPRINT CHR$(&H1B);"t"; CHR$(0);
LPRINT "n=0 ";
LPRINT CHR$(C);
FOR C=&HB1 TO &HB5
NEXT C
LPRINT CHR$(&HA);
LPRINT CHR$(&H1B);"t"; CHR$(1);
LPRINT "n=1 ";
FOR C=&HB1 TO &HB5
  LPRINT CHR$(C);
NEXT C
LPRINT CHR$(&HA);
```

**[Print Results]**

n = 0      ☒    †  
 n = 9      アイ材

# ESC { n

**[Function]** Specifying/canceling the inverted characters

**[Code]** <1B>H<7B>H<n>

**[Range]** 0≤n≤255

**[Outline]** Specifying/canceling inverted characters.

- "n" is valid only for the lowest bit (n0).
- Rotate data in the line by 180 degrees and print it.
- Control by the lowest bit (n0) is shown as follows:

n0	Condition
0	Canceling inverted characters.
1	Specifying inverted characters.

**[Caution]**


- This command is valid only when it is specified at the beginning of a line.
- This command does not affect the PAGE MODE.

**[Default]** n = 0

**[Sample Program]**

```
LPRINT CHR$(&H1B); "{"; CHR$(0);
LPRINT "TEN"; CHR$(&HA);
LPRINT "ELEVEN"; CHR$(&HA);
LPRINT CHR$(&H1B); "{"; CHR$(1);
LPRINT "TEN"; CHR$(&HA);
LPRINT "ELEVEN"; CHR$(&HA);
```

**[Print Results]**

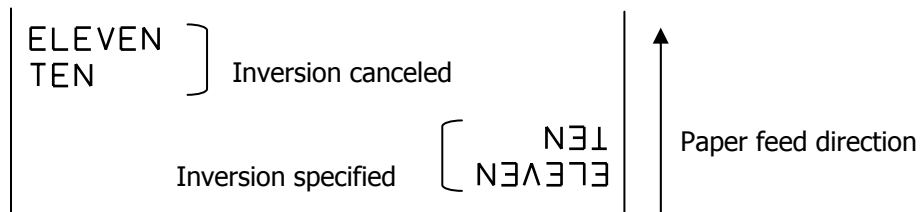

## ESC ~ J n (Valid in CBM1000II-Compatible Mode)

---

**[Function]** Specifies/cancels printing in red (black-based paper)

**[Code]** <1B>H<7E>H<4A>H<n>

**[Range]** 0≤n≤255

**[Outline]** Specifies or cancels printing in red.  
• "n" is valid only for the lowest bit (n0).  
• Control by the lowest bit (n0) is shown as follows:

n0	Function
0	High density print (2nd color print)
1	Low density print (1st color print)

**[Caution]**

- Valid when 2-color paper is specified by the ESC ( E command.
- Valid only when dedicated thermal paper is used.
- This command must not be used for normal thermal paper.
- Powering pulse count for high density print takes the standard value. For the low density print, powering pulse count decreases to change the color.

**[Default]** n = 0

**[Sample Program]**

```
LPRINT CHR$(&H1B);"~";"J"; CHR$(1);
LPRINT "AAAAA"; CHR$(&HA);
LPRINT CHR$(&H1B);"~";"J"; CHR$(0);
LPRINT "AAAAA"; CHR$(&HA);
```

**[Print Results]**

AAAAA ← Red printing  
AAAAA ← Black printing

\* When dedicated thermal paper (red-based paper) is used.

## DC3 n (Valid in CBM1000II-Compatible Mode)

---

**[Function]** Specifies/cancels printing in red (black-based paper)

**[Code]** <13>H<n>

**[Range]** 0≤n≤255

**[Outline]** Specifies or cancels printing in red.

- "n" is valid only for the lowest bit (n0).
- Control by the lowest bit (n0) is shown as follows:

n0	Function
0	High density print (2nd color print)
1	Low density print (1st color print)

**[Caution]**

- Valid when 2-color paper is specified by the ESC ( E command.
- Valid only at the top of a line.
- Valid only when dedicated thermal paper is used.
- This command must not be used for normal thermal paper.
- Powering pulse count for high density print takes the standard value. For the low density print, powering pulse count decreases to change the color.

**[Default]** n = 0

**[Sample Program]**

```
LPRINT CHR$(&H1B);"~";"J"; CHR$(0);  
LPRINT "AAAAA"; CHR$(&HA);  
LPRINT CHR$(&H1B);"~";"J"; CHR$(1);  
LPRINT "AAAAA"; CHR$(&HA);
```

**[Print Results]**

AAAAA ← Red printing  
AAAAA ← Black printing

\* When dedicated thermal paper (Black-based paper) is used.

# GS ! n

- [Function]** Specifying the character size
- [Code]** <1D>H<21>H<n>
- [Range]**  $0 \leq n \leq 255$ , where:  
 $1 \leq \text{vertical magnification} \leq 8$ ,  $1 \leq \text{horizontal magnification} \leq 8$
- [Outline]** Specifies the character size (Vertical and horizontal magnification).

Bit	Function	Value	
		Hex. Number	Decimal Number
0	Vertical magnification specification	Refer to Table 2, "Vertical Magnification".	
1			
2			
3			
4	Horizontal magnification specification	Refer to Table 1, "Horizontal Magnification".	
5			
6			
7			

**Table 1 Horizontal Magnification**

Hex.	Decimal	Magnification
00	0	1 x (Standard)
10	16	2 x (Double width)
20	32	3 x
30	48	4 x
40	64	5 x
50	80	6 x
60	96	7 x
70	112	8 x

**Table 2 Vertical Magnification**

Hex.	Decimal	Magnification
00	0	1 x (Standard)
01	1	2 x (Double )
02	2	3 x
03	3	4 x
04	4	5 x
05	5	6 x
06	6	7 x
07	7	8 x

- [Caution]**
- This command is valid for all characters (alphanumeric, kana, and kanji) except for HRI characters.
  - This command is ignored if either the vertical magnification or horizontal magnification is out of the defined range.
  - In STANDARD MODE, the vertical direction is defined as the paper feed direction, and the horizontal direction is defined as the direction perpendicular to the paper feed.
  - Setting memory SW 3-7 to ON allows the horizontal and vertical relations to be interchanged when 90°-right-turning of character is specified.
  - In PAGE MODE, the vertical direction means the top-bottom direction of each character. The horizontal direction means the side-to-side direction of each character. If characters of different vertical magnification are contained in a line, the baseline of each character is lined up.
  - Horizontal and vertical magnification can also be specified/canceled by ESC ! but the setting of command last processed is valid.

**[Default]** n = 0

**[See Also]** ESC !



## GS B n

---

**[Function]** Specifying/canceling the black/white inverted printing

**[Code]** <1D>H<42>H<n>

**[Range]**  $0 \leq n \leq 255$

**[Outline]** This command specifies or cancels the black/white inverted printing.

- "n" is valid only for the lowest bit (n0).
- Control by the lowest bit (n0) is shown as follows:

n0	Function
0	The black/white inverted printing is canceled.
1	The black/white inverted printing is specified.

**[Caution]**

- The black/white inversion works on internal and downloaded characters.
- The black/white inversion works also on the right spacing of characters defined by ESC SP.
- This command does not affect the bit image, downloaded bit image, bar code, HRI characters, or the skip area specified by HT, ESC \$, or ESC \.
- This command does not affect the space between lines.
- Black/white inversion specification takes precedence over underline specification. Underline printing specified is, therefore, nullified if black/white inversion is specified; the underline setting, however, remains unchanged.

**[Default]** n = 0

## GS b n

---

**[Function]** Specifying/canceling the smoothing

**[Code]** <1D>H<62>H<n>

**[Range]**  $0 \leq n \leq 255$

**[Outline]** This command specifies or cancels the smoothing.

- "n" is valid only for the lowest bit (n0).
- Control by the lowest bit (n0) is shown as follows:

n0	Function
0	The smoothing is canceled.
1	The smoothing is specified.

**[Caution]**

- Smoothing is effective to printer's internal characters, download characters, and non-standard characters.
- Smoothing is not effective to characters with either of their vertical or horizontal magnification is x1.

**[Default]** n = 0

**[See Also]** ESC !, GS !

## 2.2.3 Print Position Commands

### HT

---

- [Function]** Horizontal tab
- [Code]** <09>H
- [Outline]** Shifts the printing position to the next horizontal tab position.  
• Ignored when the next horizontal tab position has not been set.
- [Caution]** The horizontal tab position is set by ESC D.
- [Default]** At the selection of font A, tabs are set every 8 characters (at 9th, 17th, 25th, ...) with right space amount of a character set at 0 and horizontal enlargement rate of a character set at 1.
- [See Also]** ESC D

**[Sample Program]**

```
LPRINT "012345678901234567890"; CHR$(&HA);  
LPRINT CHR$(&H9);"AAA";  
LPRINT CHR$(&H9);"BBB"; CHR$(&HA);  
LPRINT CHR$(&H1B);"D";  
LPRINT CHR$(3); CHR$(7); CHR$(14);CHR$(0);  
LPRINT CHR$(&H9);"AAA";  
LPRINT CHR$(&H9);"BBB";  
LPRINT CHR$(&H9);"CCC"; CHR$(&HA);
```

**[Printing Result]**

```
12345678901234567890  
      AAA      BBB ← Initially set horizontal tab  
AAA   BBB     CCC ← When set to the 4th, 8th, and 15th columns
```

## ESC \$ n1 n2

**[Function]** Specifying the absolute positions

**[Code]** <1B>H<24>H<n1><n2>

**[Range]**  $0 \leq n1 \leq 255$   
 $0 \leq n2 \leq 255$

**[Outline]** The printing start position is specified by the absolute position from the left margin with the number of dots divided by 256 and quotient specified as "n2" and remainder as "n1". Therefore, the printing start position is designated as  $n1 + n2 \cdot 256$  basic calculation pitch from the left margin.

**[Caution]**


- The basic calculation pitch is set by GS P. After the line feed width is set, if the basic calculation by GS P leaves a fraction, the fraction is corrected with the minimum pitch of the mechanism, and the remainder is omitted.
- In STANDARD MODE, this command uses the horizontal (Paper feed direction) basic calculation pitch (x).
- In PAGE MODE, this command acts differently depending on the start point:
  - (1) If the start point specified by ESC T is top right or bottom left, the command uses the vertical (Paper feed direction) basic calculation pitch (y).
  - (2) If the start point specified by ESC T is top left or bottom right, the command uses the horizontal (Perpendicular to the paper feed direction) basic calculation pitch (x). Specification beyond the end of the line is ignored.

**[See Also]** ESC \, GS P, GS \, GS \$

### [Sample Program]

```
LPRINT CHR$(&H1B);"$";
LPRINT CHR$(0); CHR$(0);"A";
LPRINT CHR$(&H1B);"$";
LPRINT CHR$(50); CHR$(0);"B";
LPRINT CHR$(&H1B);"$";
LPRINT CHR$(0); CHR$(1);"C"; CHR$(&HA);
LPRINT CHR$(&H1B);"$";
LPRINT CHR$(100); CHR$(0);"A";
LPRINT CHR$(&H1B);" \";
LPRINT CHR$(&HC2); CHR$(&HFF);"B"; CHR$(&HA);
```

### [Print Results]

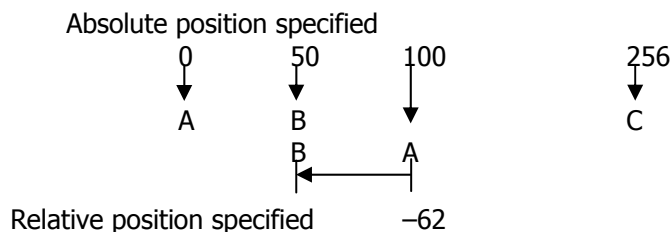

## ESC D [ n ] k NULL

---

<b>[Function]</b>	Setting horizontal tab position
<b>[Code]</b>	<1B>H<44>H [<n>] k<00>H
<b>[Range]</b>	1≤n≤255 0≤k≤32
<b>[Outline]</b>	<p>Specifying a horizontal tab position.</p> <ul style="list-style-type: none"><li>• “n” indicates the number of columns from the beginning to the horizontal tab position. Note, however, that “n = set position – 1”. For example, to set the position at 9th column, n = 8 is to be specified.</li><li>• “k” denotes the number of horizontal tab positions you want to set.</li><li>• The tab position is set at a position where it is “character width · n” from the beginning of a line. The character width, at this time, includes the space on the right. In double width characters, it is made double the ordinary case.</li><li>• Tab positions that can be specified are maximum 32. Specifying tab positions exceeding this limit is ignored.</li><li>• &lt;n&gt; k, which denotes a setting position, is input in the increasing order and ends at &lt;00&gt; H.</li><li>• ESC D &lt;NULL&gt; clears all the set tab positions. Following clearing, the horizontal tab command is ignored.</li></ul>
<b>[Caution]</b>	<ul style="list-style-type: none"><li>• When the data, &lt;n&gt; k, is equal to or smaller than its preceding data, &lt;n&gt; k-1, it is assumed that tab setting is finished. If this is the case, the next data onward will be processed as normal data.</li><li>• When the data, &lt;n&gt; k, exceeds a 1-line print area, set the horizontal tab position, as “Set column position = Maximum print columns + 1”.</li><li>• The horizontal tab position does not change even if the character width is altered after setting the horizontal tab position.</li></ul>
<b>[Default]</b>	<ul style="list-style-type: none"><li>• At the selection of font A, tabs are set every 8 characters (at 9th, 17th, 25th, ...) with right space amount of a character set at 0 and horizontal enlargement rate of a character set at 1.</li></ul>
<b>[See Also]</b>	HT
<b>[Sample Program]</b>	Refer to Sample Program and Print Results for HT.

# ESC T n


**[Function]** Selecting the character printing direction in PAGE MODE

**[Code]** <1B>H<54>H<n>

**[Range]**  $0 \leq n \leq 3$   
 $48 \leq n \leq 51$

**[Outline]** Selects the direction and start point of character printing in PAGE MODE.

n	Printing Direction	Start Point
0, 48	Left to right	Top left ("A" in the figure)
1, 49	Bottom to top	Bottom left ("B" in the figure)
2, 50	Right to left	Bottom right ("C" in the figure)
3, 51	Top to bottom	Top right ("D" in the figure)

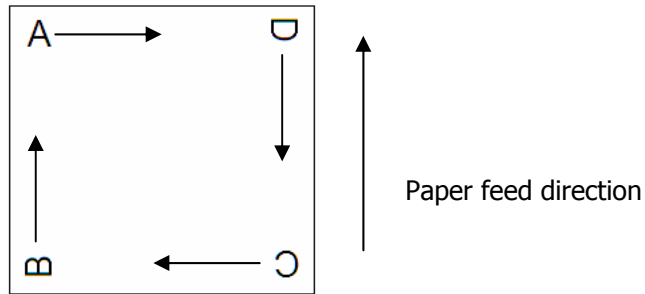


- [Caution]**
- When STANDARD MODE is selected, this command only executes the internal flagging of the printer without affecting the printing in STANDARD MODE.
  - The character mapping position will be the start point of the print area specified by ESC W.
  - The basic calculation pitch (x or y) used by the following commands varies with the start point.
    - (1) If the start point is the top left or bottom right (The characters are mapped in the direction perpendicular to the paper feed),
      - Commands using x: ESC SP, ESC S, ESC \
      - Commands using y: ESC 3, ESC J, GS \$, GS \
    - (2) If the start point is the top right or bottom left (The characters are mapped in the paper feed direction),
      - Commands using x: ESC 3, ESC J, GS \$, GS \
      - Commands using y: ESC SP, ESC S, ESC \

**[Default]** n = 0

**[See Also]** Appendix 4.1 "Explanation on PAGE MODE"  
 ESC \$, ESC L, ESC W, ESC \, GS \$, GS P, GS \

## ESC W xL xH yL yH dxL dxH dyL dyH

- [Function]** Defining the print area in PAGE MODE
- [Code]** <1B>H<57>H<xL><xH><yL><yH><dxL><dxH><dyL><dyH>
- [Range]**  $0 \leq xL, xH, yL, yH, dxL, dxH, dyL, dyH \leq 255$ ,  
except for  $dxL = dxH = 0$  or  $dyL = dyH = 0$
- [Outline]** Defines the location and size of the print area.
- Horizontal start point =  $[(xL + xH \times 256) \times \text{basic calculation pitch}]$  inches
  - Vertical start point =  $[(yL + yH \times 256) \times \text{basic calculation pitch}]$  inches
  - Horizontal length =  $[(dxL + dxH \times 256) \times \text{basic calculation pitch}]$  inches
  - Vertical length =  $[(dyL + dyH \times 256) \times \text{basic calculation pitch}]$  inches
- [Caution]**
- When STANDARD MODE is selected, this command only executes the internal flagging of the printer without affecting the printing in STANDARD MODE.
  - If the horizontal start point or vertical start point is out of the printable area, this command is canceled and the next data is handled as normal data.
  - If the horizontal length or vertical length is 0, this command is canceled and the next data is handled as normal data.
  - The character mapping position will be the start point specified by ESC T in the print area.
  - If the "horizontal start point + horizontal length" is greater than the horizontal printable area, the "horizontal printable area – horizontal start point" is taken as the horizontal length.
  - If the "vertical start point + vertical length" is greater than the vertical printable area, the "vertical printable area – vertical start point" is taken as the vertical length.
  - The basic calculation pitch is defined by GS P. Once defined, the print area is not changed if the basic calculation pitch is changed by GS P.
  - Fractions resulting from calculations are corrected with the minimum pitch of the mechanism, and the remainder is omitted.
  - The horizontal start point and horizontal length are calculated with the basic calculation pitch (x). The vertical start point and vertical length are calculated with the basic calculation pitch (y).
  - The figure below illustrates the print area, where X = horizontal start point, Y = vertical start point, Dx = horizontal length, and Dy = vertical length.

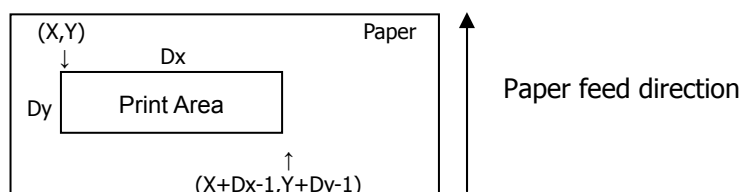

The printable area for this printer is approximately 72.070 mm (576/203 inches) horizontally and 104 mm (831/203 inches) vertically.

- [Default]**  $xL = xH = yL = yH = 0$   
When paper width is 80 mm:  $dxL = 64, dxH = 2, dyL = 126, dyH = 6$   
When paper width is 58 mm:  $dxL = 128, dxH = 1, dyL = 126, dyH = 6$

- [See Also]** Appendix 4.1 "Explanation on PAGE MODE"  
CAN, ESC L, ESC T, GS P

## ESC \ nL nH

---

<b>[Function]</b>	Specifying the relative position
<b>[Code]</b>	<1B>H<5C>H<nL><nH>
<b>[Range]</b>	$0 \leq nL \leq 255$ $0 \leq nH \leq 255$
<b>[Outline]</b>	This command specifies the next print start position in a relative position with respect to the current position. The next print start position will be at a point of $[(nL + nH \times 256) \times \text{basic calculation pitch}]$ inches away from the current position.
<b>[Caution]</b>	<ul style="list-style-type: none"><li>• Specification of a position outside the print area is ignored.</li><li>• If a new position is specified to the right of the current position in the direction of printing, it should be specified as positive (+). If it is to the left, it should be as negative (-).</li><li>• A negative value is the complement of 65536. For example, to move the position by N pitches to the left, specify it as: <math>nL + nH \times 256 = 65536 - N</math></li><li>• The basic calculation pitch is set by GS P.</li><li>• Fractions resulting from calculation are corrected with the minimum pitch of the mechanism, and the remainder is omitted.</li><li>• In STANDARD MODE, this command uses the horizontal basic calculation pitch (x).</li><li>• In PAGE MODE, this command acts differently depending on the start point:<ol style="list-style-type: none"><li>(1) If the start point specified by ESC T is top left or bottom right, the command specifies the relative position in the direction perpendicular to the paper feed (The character's side-to-side direction), using the horizontal basic calculation pitch (x).</li><li>(2) If the start point is top right or bottom left, the command specifies the relative position in the paper feed direction (The character's side-to-side direction), using the vertical basic calculation pitch (y).</li></ol></li></ul>
<b>[See Also]</b>	ESC \$, GS P
<b>[Sample Program]</b>	Refer to Sample Program and Print Results for ESC \$.



# ESC a n

**[Function]** Aligning the characters

**[Code]** <1B>H<61>H<n>

**[Range]**  $0 \leq n \leq 2$   
 $48 \leq n \leq 50$

**[Outline]** All the printed data within one line are aligned in the specified position. Depending on the value "n", positional alignment is carried out as shown in the table below:

n	Position
0, 48	Left end alignment
1, 49	Centering
2, 50	Right end alignment

**[Caution]**


- This command is valid only when it is inputted at the beginning of a line.
- This command does not affect the PAGE MODE.
- Executes justification in the print area being set.

**[Default]** n = 0

**[Sample Program]**

```
LPRINT CHR$(&H1B);"a"; CHR$(0);
LPRINT "AAAAA"; CHR$(&HA);
LPRINT CHR$(&H1B);"a"; CHR$(1);
LPRINT "AAAAA"; CHR$(&HA);
LPRINT CHR$(&H1B);"a"; CHR$(2);
LPRINT "AAAAA"; CHR$(&HA);
```

**[Print Results]**

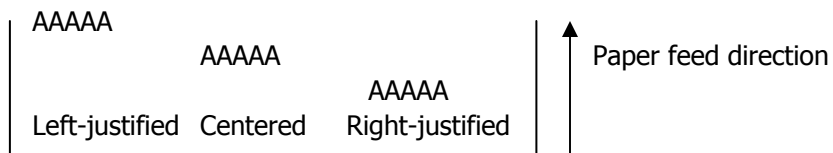

## GS \$ nL nH

---

<b>[Function]</b>	Specifying the absolute position of character vertical direction in PAGE MODE
<b>[Code]</b>	<1D>H<24>H<nL><nH>
<b>[Range]</b>	0≤nL≤255, 0≤nH≤255
<b>[Outline]</b>	Specifies the vertical position of character at the start point of data development in PAGE MODE using absolute position based on the start position. The position of vertical direction of character at the start position of next data development is the position [(nL + nH x 256) x basic calculation pitch] from the start position.
<b>[Caution]</b>	<ul style="list-style-type: none"><li>• This command is ignored except at PAGE MODE selection.</li><li>• Absolute position setting exceeding the specified print area is ignored.</li><li>• Position in horizontal direction of character at the start position of data development is not shifted.</li><li>• Start point used as the reference is set by &lt;ESC T&gt;.</li><li>• The following operation occurs at the start point of &lt;ESC T&gt;.<ol style="list-style-type: none"><li>(1) When start point is set at "upper left" or "lower right", the absolute position of paper feed direction (vertical direction of character) is set. In this case, basic calculation pitch (y) of vertical direction is used.</li><li>(2) When start point is set at "upper right" or "lower left", the absolute position of vertical direction of paper feed (vertical direction of character) is set. In this case, basic calculation pitch (x) of horizontal direction is used.</li></ol></li><li>• Basic calculation pitch is set by &lt;GS P&gt;.</li><li>• When fractional number is caused by the calculation, it is corrected by the minimum pitch of mechanism and the rest is discarded.</li></ul>
<b>[See Also]</b>	ESC \$, ESC T, ESC W, ESC \, GS P, GS \

## GS L nL nH


---

**[Function]** Setting the left margin

**[Code]** <1D>H<4C>H<nL><nH>

**[Range]**  $0 \leq nL \leq 255$   
 $0 \leq nH \leq 255$

**[Outline]** This command sets the left margin specified by nL and nH.  
The value of the left margin is  $[(nL + nH \times 256) \times \text{basic calculation pitch}]$  inches.

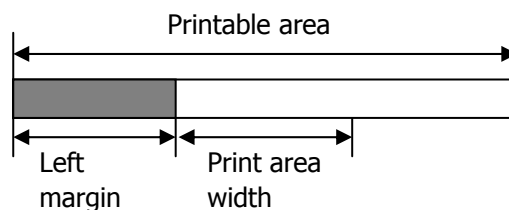

- [Caution]**
- This command only works when it is entered at the beginning of a line.
  - When PAGE MODE is selected, this command only executes the internal flagging of the printer.
  - The setting of this command does not affect PAGE MODE.
  - The maximum settable left margin is equal to the horizontal printable area. A setting greater than this maximum is trimmed to the maximum.
  - The basic calculation pitch is defined by GS P. Once defined, the left margin is not changed if the basic calculation pitch is changed by GS P.
  - The left margin is calculated with the horizontal basic calculation pitch (x) set by GS P. A fraction resulting from the calculation is corrected with the minimum pitch of the mechanism, and the remainder is omitted.
  - When mapping character data, if the print area specified is not wide enough to accommodate one character of the current font, only the line for that character data is handled as follows:
    - (1) The print area is extended toward the right to be equivalent to one character of the current font, but not wider than the printable area.
    - (2) If an area for one character cannot be provided as a result of step (1), the print area is extended toward the left. (So, the left margin is decreased.)
  - When mapping non-character data (bit image, downloaded bit image, or bar code), if the print area specified is narrower than 9-bits, only the line for that data is handled as follows:
    - (1) The print area is extended toward the left (so, the left margin is decreased) until it is 9-dot wide, but not wider than the printable area.

**[Default]** nL = 0, nH = 0

**[See Also]** GS P, GS W


# GS W nL nH

**[Function]** Setting the print area width


**[Code]** <1D>H<57>H<nL><nH>

**[Range]**  $0 \leq nL \leq 255$   
 $0 \leq nH \leq 255$


**[Outline]** Sets the print area width specified by nL and nH.  
 The print area width will be  $[(nL + nH \div 256) \cdot \text{basic calculation pitch}]$  inches.

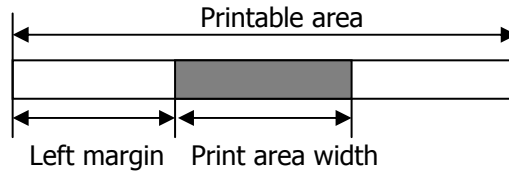

- [Caution]**
- This command only works when it is entered at the beginning of a line.
  - When PAGE MODE is selected, this command only executes the internal flagging of the printer.
  - The setting of this command does not affect PAGE MODE.
  - If the value entered with this command exceeds the printable area for one line, the entire area except the left margin is set as the print area width.
  - The basic calculation pitches are defined by GS P. Once defined, the print area width is not changed if the basic calculation pitch is changed by GS P.
  - The print area width is calculated with the horizontal basic calculation pitch (x) defined by GS P. A fraction resulting from the calculation is corrected with the minimum pitch of the mechanism, and the remainder is omitted.
  - If the first character to be mapped at the beginning of a line has a width (including the right spacing) greater than the print area width, only that line is handled as follows:
    - (1) The print area is extended toward the right to accommodate the first character, but not wider than the printable area.

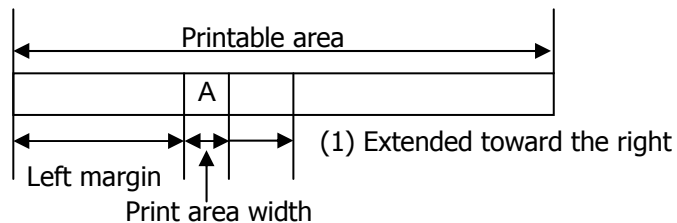

(2) If a sufficient area cannot be provided as a result of step (1), the print area is extended toward the left (so, the left margin is decreased).

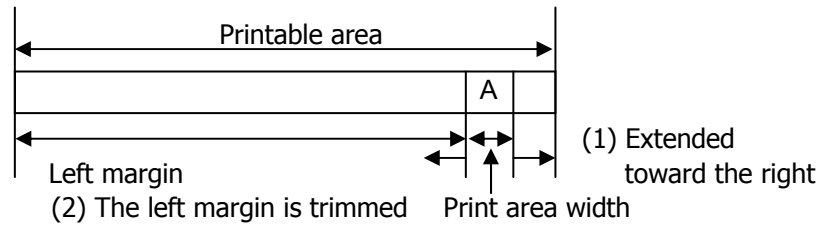

(3) If a sufficient area cannot be provided as a result of step (2), the right spacing is trimmed.

- When mapping a bit image (or downloaded bit image), if the print area is narrower than the minimum width of the bit image (two dots for single density, or one dot for double density), only the line for that image is handled as follows:
  - (1) The print area is extended toward the left (so, the left margin is decreased) until it is equal to the minimum width of the image, but not wider than the printable area.

**[Default]** When paper width is 80 mm:  $nL = 64$ ,  $nH = 2$   
 When paper width is 58 mm:  $nL = 128$ ,  $nH = 1$

**[See Also]** GS L, GS P

## GS \ nL nH

---

<b>[Function]</b>	Specifying the relative vertical position of a character in PAGE MODE
<b>[Code]</b>	<1D>H<5C>H<nL><nH>
<b>[Range]</b>	0 ≤ nL ≤ 255 0 ≤ nH ≤ 255
<b>[Outline]</b>	This command is used in PAGE MODE to specify the vertical position of a character in the data mapping start position, in a relative position with respect to the current position. The next data mapping start position will be at a point [(nL + nH x 256) x basic calculation pitch] inches away from the current position.
<b>[Caution]</b>	<ul style="list-style-type: none"><li>• This command is ignored when PAGE MODE is not selected.</li><li>• If a new position is specified for a character located beneath the current position, it should be specified as positive (+). If it is above the current position, it should be negative (-).</li><li>• A negative value is the complement of 65536. For example, to move the position by N pitches up, specify it as: <math>nL + nH \times 256 = 65536 - N</math></li><li>• The specification of a relative position outside the specified print area is ignored.</li><li>• Depending on the start point specified by ESC T, this command acts as follows:<ol style="list-style-type: none"><li>(1) If the start point is the top left or bottom right, the command specifies the relative position in the paper feed direction (the character's top-bottom direction) using the vertical basic calculation pitch (y).</li><li>(2) If the start point is the top right or bottom left, the command specifies the relative position in the direction perpendicular to the paper feed (the character's top-bottom direction) using the horizontal basic calculation pitch (x).</li></ol></li><li>• The basic calculation pitch is set by GS P.</li><li>• Fractions resulting from calculations are corrected with the minimum pitch of the mechanism, and the remainder is omitted.</li></ul>

## 2.2.4 Line Feed Span Commands

### ESC 2


---

- [Function]** Specifying 1/6-inch line feed rate
- [Code]** <1B>H<32>H
- [Outline]**
- (1) When memory switch 5-2 is OFF:  
The line feed rate per line is specified by 1/6 inch.
  - (2) When memory switch 5-2 is ON:  
The line feed rate per line is specified by 30/203 inch.
- [Caution]** Line feed rate can be specified respectively for both STANDARD MODE and PAGE MODE.

**[Sample Program]**

```
LPRINT "AAAAA"; CHR$(&HA);  
LPRINT CHR$(&H1B);"3"; CHR$(0);  
LPRINT "AAAAA"; CHR$(&HA);  
LPRINT CHR$(&H1B);"3"; CHR$(50);  
LPRINT "AAAAA"; CHR$(&HA);  
LPRINT CHR$(&H1B);"2";  
LPRINT "AAAAA"; CHR$(&HA);  
LPRINT "AAAAA";  
LPRINT CHR$(&H1B);"J"; CHR$(100);  
LPRINT "AAAAA"; CHR$(&HA);  
LPRINT "AAAAA"; CHR$(&HA);
```

**[Print Results]**

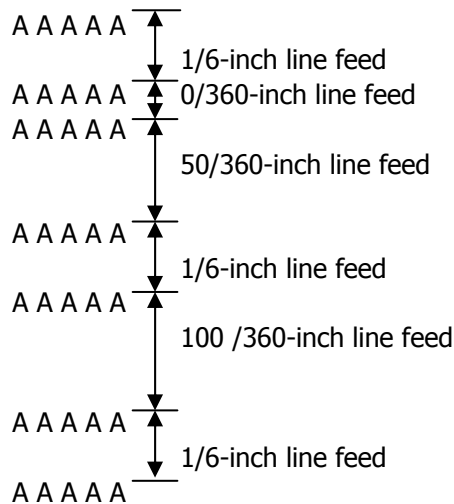

## ESC 3 n

---

<b>[Function]</b>	Setting line feed rate of minimum pitch
<b>[Code]</b>	<1B>H<33>H<n>
<b>[Range]</b>	0≤n≤255
<b>[Outline]</b>	Sets the line feed width per line to [n ;basic calculation pitch] inches.
<b>[Caution]</b>	<ul style="list-style-type: none"><li>• The line feed width can be set separately for the STANDARD and PAGE MODES.</li><li>• The basic calculation pitch is set by GS P. Once defined, the line feed width is not changed if the basic calculation pitch is changed by GS P.</li><li>• Fractions resulting from calculation are corrected with the minimum pitch of the mechanism, and the remainder is omitted.</li><li>• In STANDARD MODE, this command uses the vertical (paper feed direction) basic calculation pitch (y).</li><li>• In PAGE MODE, this command acts differently depending on the start point:<ol style="list-style-type: none"><li>(1) If the start point specified by ESC T is top left or bottom right, the command uses the vertical (paper feed direction) basic calculation pitch (y).</li><li>(2) If the start point specified by ESC T is top right or bottom left, the command uses the horizontal (perpendicular to the paper feed direction) basic calculation pitch (x).</li></ol></li><li>• The maximum settable line feed width is 1016 mm (40 inches). A setting greater than this maximum is trimmed to the maximum.</li></ul>
<b>[Default]</b>	(1) When memory switch 5-2 is OFF: Approx. 4.23mm (2) When memory switch 5-2 is ON: Approx. 3.75 mm
<b>[See Also]</b>	ESC 2, GS P



## 2.2.5 Bit Image Commands

### ESC \* m n1 n2 [ d ] k

- [Function]** Specifying the bit image mode
- [Code]** <1B>H<2A>H<m>H<n1><n2>[<d>]k
- [Range]** m = 0, 1, 32, 33  
 $0 \leq n1 \leq 255$   
 $0 \leq n2 \leq 2$   
 $0 \leq d \leq 255$   
 $k = n1 + 256 \times n2$  (m = 0, 1)  
 $k = (n1 + 256 \times n2) \times 3$  (m = 32, 33)

- [Outline]**
- According to the number of dots specified in "n1", "n2", specify the bit image of mode "m".
  - The number of dots printed is divided by 256, whose quotient is taken as n2 and residual as "n1". The total number of dots printed in the horizontal direction is equal to  $n1 + (256 \times n2)$ .
  - When bit image data have been input in excess of dot positions that can be printed on one line, the excess data are discarded.
  - "d" is bit image data. Bits to be printed are specified as "1" and those not as "0".
  - The bit image modes specified by "m" are shown as follows:

m	Mode	Vertical Dot Count	Vertical Dot Density	Horizontal Dot Density	Data Count (k)
0	8 dot single density	8	67 DPI	101 DPI	$(nL+nH \times 256)$
1	8 dot double density	8	67 DPI	203 DPI	$(nL+nH \times 256)$
32	24 dot single density	24	203 DPI	101 DPI	$(nL+nH \times 256) \times 3$
33	24 dot double density	24	203 DPI	203 DPI	$(nL+nH \times 256) \times 3$

- [Caution]**
- When the value of "m" is out of the above range, the data following after "n1" is processed as normal printing data.
  - After completion of bit image printing, the printer returns to normal data processing mode.


**[Sample Program]**

```
LPRINT CHR$(&H1B);"*";
LPRINT CHR$(0); CHR$(20); CHR$(0);
GOSUB IMG1
LPRINT CHR$(&HA);
LPRINT CHR$(&H1B);"*";
LPRINT CHR$(1); CHR$(20); CHR$(0);
GOSUB IMG1
LPRINT CHR$(&HA);
LPRINT CHR$(&H1B);"*";
LPRINT CHR$(32); CHR$(20); CHR$(0);
GOSUB IMG2
LPRINT CHR$(&HA);
LPRINT CHR$(&H1B);"*";
LPRINT CHR$(33); CHR$(20); CHR$(0);
GOSUB IMG2
LPRINT CHR$(&HA);
END

IMG1:
LPRINT CHR$(&HFF);
FOR I = 1 TO 18
  LPRINT CHR$(&H85);
NEXT I
LPRINT CHR$(&HFF);
RETURN

IMG2:
LPRINT CHR$(&HFF);
LPRINT CHR$(&HFF);
LPRINT CHR$(&HFF);
FOR I = 1 TO 18
  LPRINT CHR$(&H80);
  LPRINT CHR$(&H00);
  LPRINT CHR$(&H05);
NEXT I
LPRINT CHR$(&HFF);
LPRINT CHR$(&HFF);
LPRINT CHR$(&HFF);
RETURN
```

**[Print Results]**

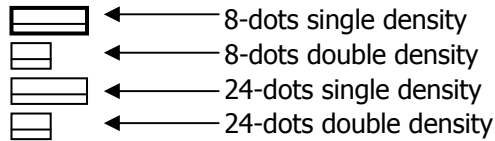

# GS \* n1 n2 [ d ] n1 x n2 x 8

**[Function]** Defining the download bit image

**[Code]** <1D>H<2A>H<n1><n2> [<d>] n1 x n2 x 8

**[Range]**  
 $1 \leq n1 \leq 255$   
 $1 \leq n2 \leq 48$   
 $n1 \times n2 \leq 1536$


**[Outline]**

- Defines download bit images of the number of dots specified by "n1" and "n2".
- The numbers of dots are n1 :8 in horizontal direction and n2 :8 in vertical direction.
- "d" indicates bit image data.
- Once defined, the download bit image remains effective until it is redefined, ESC @, ESC &, GS (A, or FS q, is executed, or power is turned OFF.

**[Caution]**

- Relations between the bit image data and the dots defined are shown below.
- With this command executed, the defined content of a downloaded character is cleared.


**[See Also]** GS /

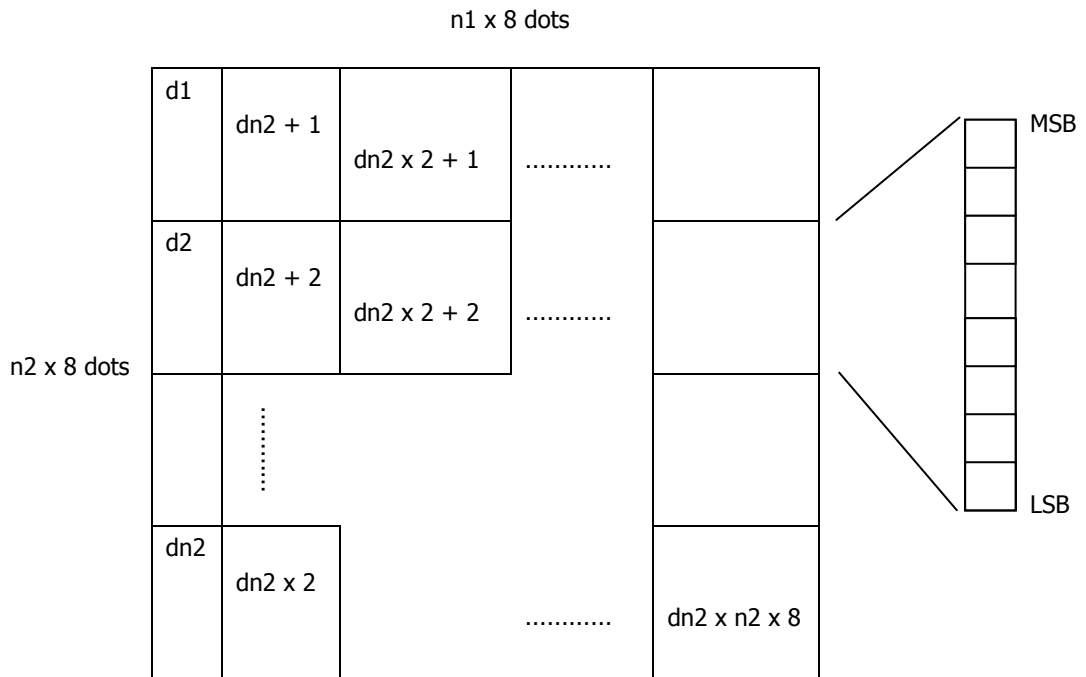

**[Sample Program]**

```
GOSUB IMG
LPRINT CHR$(&H1D);"/"; CHR$(0);
LPRINT CHR$(&H1D);"/"; CHR$(1);
LPRINT CHR$(&H1D);"/"; CHR$(2);
LPRINT CHR$(&H1D);"/"; CHR$(3);
END
IMG:
n1=10:n2=5
LPRINT CHR$(&H1D);"*";
LPRINT CHR$(n1); CHR$(n2);
FOR J=1 TO n1*8
  FOR I=1 TO n2
    LPRINT CHR$(J);
  NEXT I
NEXT J
RETURN
```

**[Print Results]**

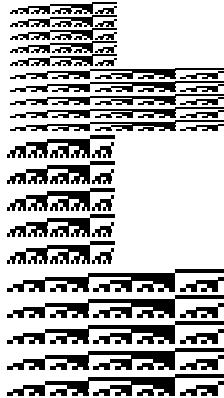

## GS / m

---

**[Function]** Printing the downloaded bit image

**[Code]** <1D>H<2F>H<m>

**[Range]**  $0 \leq m \leq 3$   
 $48 \leq m \leq 51$

**[Outline]** Prints downloaded bit image in a mode specified by "m".  
Modes that can be selected by "m" are shown below.

m	Mode Name	Dot Density in Vertical Direction	Dot Density in Horizontal Direction
0, 48	NORMAL MODE	203 DPI	203 DPI
1, 49	DOUBLE WIDTH MODE	203 DPI	101 DPI
2, 50	DOUBLE HEIGHT MODE	101 DPI	203 DPI
3, 51	QUADRUPLE SIZE MODE	101 DPI	101 DPI

**[Caution]**

- When a downloaded bit image has not been defined, this command is ignored.
- When data exist in the print buffer, this command is ignored.
- A portion of a downloaded bit image exceeding one line length is not printed.

**[See Also]** ESC &, GS \*

## GS v 0 m xL xH yL yH d1...dk

**[Function]** Printing of raster bit image

**[Code]** <1D>H<76>H<30>H<m><xL><xH><yL><yH> [<d>] k

**[Range]**  $0 \leq m \leq 3$ ,  $48 \leq m \leq 51$ ,  $0 \leq xL \leq 255$ ,  $0 \leq xH \leq 255$ ,  
 $0 \leq yL \leq 255$ ,  $0 \leq yH \leq 8$ ,  $0 \leq d \leq 255$ ,  
 $k = (xL + xH \times 256) \times (yL + yH \times 256)$ , however,  $k \neq 0$

**[Outline]** Prints raster bit images in mode "m".

- xL, xH specify the number of data in horizontal direction of the bit image to  $(xL + xH \times 256)$  bytes.
- yL, yH specify the number of data in vertical direction of the bit image to  $(yL + yH \times 256)$  bytes.

m	Mode Name	Dot Density in Vertical Direction	Dot Density in Horizontal Direction
0, 48	NORMAL MODE	203 DPI	203 DPI
1, 49	DOUBLE WIDTH MODE	203 DPI	101 DPI
2, 50	DOUBLE HEIGHT MODE	101 DPI	203 DPI
3, 51	QUADRUPLE SIZE MODE	101 DPI	101 DPI


**[Caution]**

- In STANDARD MODE, this command is valid only when there is no print data in the print buffer.
- Any of the print modes (character size, emphasis, double strike, inverting, underlining, back-to-white reversing, etc.) does not affect the raster bit image.
- If the print area specified by GS L and GS W is narrower than a minimum width, the print area for that line only is extended to the minimum width. The minimum width is one dot in NORMAL MODE ( $m = 0, 48$ ) and DOUBLE HEIGHT MODE ( $m = 2, 50$ ), and 2 dots in DOUBLE WIDTH MODE ( $m = 1, 49$ ) and QUADRUPLE SIZE MODE ( $m = 3, 51$ ).
- Any part of data that is out of the print area is only read and discarded in units of dot.
- The print start position can arbitrarily be specified with HT (horizontal tab), ESC \$ (specifying absolute position), ESC \ (specifying relative positions), and GS L (setting left margins). Note that if the print start position is not a multiple of 8, the printing speed may decrease.
- The setting of ESC a (aligning characters) are also valid for the raster bit image.
- If this command is executed during macro definition, the macro definition is suspended, and the processing of the command starts. The macro is left undefined.
- "d" denotes defined data. Dots to be printed are specified as "1", and those not to be printed as "0".

**[Example]**

When  $x_L + x_H \times 256 = 64$

←  $(x_L + x_H \times 256)$  8 dots = 512 dots →

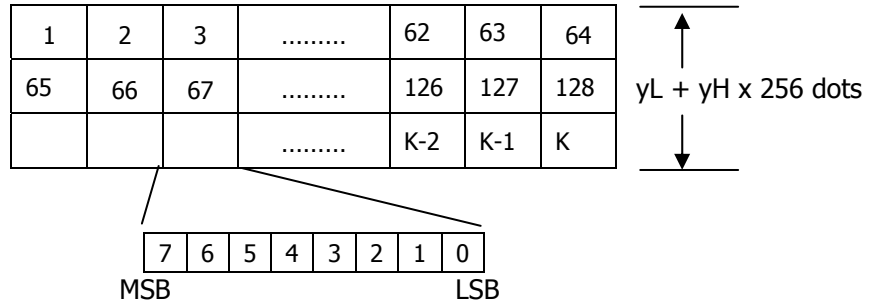

## 2.2.6 Status Commands

### DLE EOT n

---

- [Function]** Sending status in real-time
- [Code]** <10>H<04>H<n>
- [Range]**  $1 \leq n \leq 4$
- [Outline]** Sends in real-time the status specified by "n".

n	Status
1	Printer status
2	Status caused by an offline condition
3	Status caused by an error
4	Continuous paper detector status

**[Caution]**

- Each status represents the current status. It is 1 byte data.
- The status is transferred without checking whether the host is ready to receive or busy.
- This command is executed even if the printer is in offline state, receive-buffer full state, or error state.
- This command is dealt with when it is received.
- With serial interface specifications, this command is executed in offline state, receiving buffer full state, and error state.
- With parallel interface specifications, this command cannot be executed while the printer is in Busy state.  
When memory SW1-3 is ON, the printer does not enter Busy state in the offline state and error state.
- If ASB (Automatic Status Back) is enabled by GS a, it is necessary to discriminate between the status due to ASB and the status due to this command.
- This command can be executed even if printer setting by ESC = is invalid.
- If another data string of <10>H<04>H<n> (1 n 4) is received, the printer acts the same way as with this command. Therefore, the user should be reminded of this fact.

[Example 1]

Suppose a command "ESC \* m nL nH [d1 ... dk]", where d1 = <10>H, d2 = <04>H, d3 = <01>H.

- The DLE EOT n command cannot be interleaved into the code string of another command consisting of 2 bytes or more.

[Example 2]

If the printer sends DLE EOT 3 after the host has sent up to ESC 3 in its attempt to send ESC 3 n, the printer handles the ESC 3 as ESC 3 <10>H. Thus, the user should be cautious.



(1) Printer status (When n = 1 is specified)

Bit	Status	Hex.	Decimal
0	Fixed	00	0
1	Fixed	02	2
2	Status of pin 3 of drawer kick-out connector = L	00	0
	Status of pin 3 of drawer kick-out connector = H	04	4
3	Online status	00	0
	Offline status	08	8
4	Fixed	10	16
5	Not waiting online recovery	00	0
	Waiting online recovery	20	32
6	FEED switch is not pressed	00	0
	FEED switch is pressed	40	64
7	Fixed	00	0

(2) Status caused by an offline condition (When n = 2 is specified)

Bit	Status	Hex.	Decimal
0	Unused	00	0
1	Unused	02	2
2	Cover closed	00	0
	Cover open	04	4
3	Not in paper feed state triggered by FEED switch	00	0
	In paper feed state triggered by FEED switch	08	8
4	Unused	10	16
5	Printing is not stopped because of "paper out" state	00	0
	Printing is stopped because of "paper out" state	20	32
6	Error not occurred	00	0
	Error occurred	40	64
7	Unused	00	0

Bit 5: Printing is stopped if the Paper-end detector detects a "paper out" state, or if the printer is out of paper when the Paper Near-end Sensor is enabled by ESC c 4. At this time, bit 5 = 1.

(3) Status caused by an error (when n = 3 is specified)

Bit	Status	Hex.	Decimal
0	Fixed	00	0
1	Fixed	02	2
2	No B.M detection error occurred (only when B.M paper is selected)	00	0
	A B.M detection error occurred (only when B.M paper is selected)	04	4
3	Auto cutter error not occurred	00	0
	Auto cutter error occurred	08	8
4	Fixed	10	16
5	Unrecoverable error not occurred	00	0
	Unrecoverable error occurred	20	32
6	Auto recovery error not occurred	00	0
	Auto recovery error occurred	40	64
7	Fixed	00	0

Bit 3: If this error occurred because of a paper jam, for example, remove the cause of the error, and then DLE ENQ n (1 n 2) can be used to recover from the error. However, it is not possible to recover from any error due to a circuit problem (e.g., broken wire).

Bit 6: If a head overheat error is detected, the printing is stopped until the head temperature falls. At this time, bit 6 = 1.

(4) Continuous paper detector status (When n = 4 is specified)

Bit	Status	Hex.	Decimal
0	Fixed	00	0
1	Fixed	02	02
2	Paper found by Paper Near-end Sensor	00	0
	Paper not found by Paper Near-end Sensor	04	4
3	Paper found by Paper Near-end Sensor	00	0
	Paper not found by Paper Near-end Sensor	08	8
4	Fixed	10	16
5	Paper found by Paper-end Sensor	00	0
	Paper not found by Paper-end Sensor	60	96
6	Paper found by Paper-end Sensor	00	0
	Paper not found by Paper-end Sensor	40	64
7	Fixed	00	0

**[See Also]**

Appendix 4.3 "Identification of Send Status"  
DLE ENQ, ESC c 4, GS a, GS r

## ESC u n (Serial Model Only)

---

**[Function]** Sending the peripheral device status

**[Code]** <1B>H<75>H<n>

**[Outline]** Send the current drawer kick connector pin#3 status.  
 • n has the type shown in the table below:

n	Connector Pin
0	Drawer kick connector pin#3

**[Caution]**

- Status to be sent uses 1 byte that has the value listed in the table below.
- DTR/DSR control sends 1 byte only after checking that host is ready to receive (DSR signal: space status). For XON/XOFF control, 1 byte is sent without checking DSR signal status.
- For DTR/DSR, if host is not ready to receive (DSR signal: mark status), it waits for ready condition to receive.
- Paper-end status causes BUSY status, thus this command may be in the receive-not-ready status.
- This command is only enabled for serial interface.

Bit	Function	Value	
		0	1
0	Pin #3 level	'L'	'H'
1	Undefined	—	—
2	Undefined	—	—
3	Undefined	—	—
4	Unused	0: Fixed	—
5	Undefined	—	—
6	Undefined	—	—
7	Undefined	—	—

**[Sample Program]**

```
OPEN "COM1:N81NN" AS #1 → OPEN statement depends on types of BASIC.
PRINT #1,CHR$(&H1B);" u ";CHR$(0)
A$ = INPUT$(1,#1)
CLOSE #1
```

## ESC v n (Serial Model Only)

---

**[Function]** Transmission of printer status

**[Code]** <1D>H<61>H<n>

**[Outline]** Transmits current printer status.

**[Caution]**

- Status is transmitted in 1byte with the content shown in the following table.
- In case of DTR/DSR control, only 1byte is transmitted after making sure the host is ready for reception (DSR signal is in the Space state). In case of XON/XOFF control, only 1byte is transmitted without checking the status of DSR signal.
- In case of DTR/DSR, if the host is not ready for reception (DSR signal in Mark state, wait till reception is available.
- This command is valid only for serial interface.

Bit	Position	Value	
		0	1
0	Paper Near-end	With paper	No paper
1	Undefined	—	—
2	Paper-end	With paper	No paper
3	Undefined	—	—
4	Unused	Fixed	—
5	Undefined	—	—
6	Undefined	—	—
7	Undefined	—	—

Bit 2: In case of Paper End, as this printer goes offline, this command is not executed. Therefore, status "No Paper (04H)" is never transmitted.

### [Sample Program]

```
OPEN "COM1:N81NN" AS #1 → OPEN statement varies with the type of BASIC.  
PRINT #1, CHR$(&H1B);"v";  
A$ = INPUT$(1,#1)  
CLOSE #1
```

## GS a n

- [Function]** Enabling/disabling ASB (Automatic Status Back)
- [Code]** <1D>H<61>H<n>
- [Range]** 0≤n≤255
- [Outline]** This command selects the status item to be addressed by ASB (Automatic Status Back.)

Bit	Status Item Addressed by ASB	Hex.	Decimal
0	Status of pin 3 of drawer kick-out connector = Disabled	00	0
	Status of pin 3 of drawer kick-out connector = Enabled	01	1
1	Online/offline status = Disabled	00	0
	Online/offline status = Enabled	02	2
2	Error status = Disabled	00	0
	Error status = Enabled	04	4
3	Continuous Paper Sensor = Disabled	00	0
	Continuous Paper Sensor = Enabled	08	8
4	Undefined	—	—
5	Undefined	—	—
6	Undefined	—	—
7	Undefined	—	—

- [Caution]**
- If any status item is enabled, the status is sent to the host when this command is executed. After that time on, the status is sent each time an enabled status item changes. Because each status item represents the current condition, status items disabled for ASB may also have changed.
  - The ASB function is disabled if all status items are disabled.
  - If the ASB function is enabled by default, the host receives the status the first time the printer gets ready for communication after it is turned on.
  - The printer sends 4 bytes of status shown in the tables below, without checking whether the host is ready to receive or busy. The 4 bytes of status is a continuous string except for XOFF code.
  - Because this command is executed when data is mapped in the receive buffer, there may be a delay between command receiving and status sending depending on the condition of the receive buffer.
  - Even if the printer is excluded from the selection of peripheral equipment ESC =, the 4 bytes of status is sent to the host whenever status changes.
  - When DLE EOT, GS I, or GS r is used, the host must discriminate between the status specified by these commands and the status due to ASB.

(1) 1st byte (Printer information)

Bit	Status	Hex.	Decimal
0	Unused	00	0
1	Unused	00	0
2	Status of pin 3 of drawer kick-out connector = "L"	00	0
	Status of pin 3 of drawer kick-out connector = "H"	04	4
3	Online status	00	0
	Offline status	08	8
4	Unused	10	16
5	Cover closed	00	0
	Cover open	20	32
6	Not in paper feed state triggered by FEED switch	00	0
	In paper feed state triggered by FEED switch	40	64
7	Unused	00	0

(2) 2nd byte (Error occurrence information)

Bit	Status	Hex.	Decimal
0	Undefined	—	—
1	Undefined	—	—
2	No B.M detection error occurred (only when B.M paper is selected).	00	0
	A B.M detection error occurred (only when B.M paper is selected).	04	4
3	Auto cutter error not occurred	00	0
	Auto cutter error occurred	08	8
4	Unused	00	0
5	Unrecoverable error not occurred	00	0
	Unrecoverable error occurred	20	32
6	Auto recovery error not occurred	00	0
	Auto recovery error occurred	40	64
7	Unused	00	0

(3) 3rd byte (Paper Sensor information)

Bit	Status	Hex.	Decimal
0, 1	Paper found by Paper Near-end Sensor	00	0
	Paper not found by Paper Near-end Sensor	03	3
2, 3	Paper found by Paper-end Sensor	00	0
	Paper not found by Paper-end Sensor	0C	12
4	Unused	00	0
5	Undefined	—	—
6	Undefined	—	—
7	Unused	00	0

(4) 4th byte (Paper Sensor information)

Bit	Status	Hex.	Decimal
0	Undefined	—	—
1	Undefined	—	—
2	Undefined	—	—
3	Undefined	—	—
4	Unused	00	0
5	Undefined	—	—
6	Undefined	—	—
7	Unused	00	0

\* In case of MSW3-7 ON (CBM1000 compatible mode)

(4) 4th byte (Paper Sensor information)

Bit	Status	Hex.	Decimal
0	Reserved	01	1
1	Reserved	02	2
2	Reserved	04	4
3	Reserved	08	8
4	Fixed	00	0
5	Reserved	00	0
6	Reserved	00	0
7	Fixed	00	0

\* In case of MSW3-7 OFF (CBM1000 non-compatible mode)

**[Default]** When MSW 1-3 OFF: n = 0  
When MSW 1-3 ON: n = 2

**[See Also]** DLE EOT, GS r

## GS r n

- [Function]** Sending status
- [Code]** <1D>H<72>H<n>
- [Range]**  $1 \leq n \leq 2$   
 $49 \leq n \leq 50$
- [Outline]** Sends the specified status to the host.

n	Function
1, 49	Sends the Paper Sensor status.
2, 50	Sends the Drawer Kick-out Connector status.

- [Caution]**
- When the serial interface is used:
    - For DTR/DSR control:  
The printer sends the status after verifying that the host is ready to receive. If the host is not ready to receive, the printer waits for the host to become ready to receive.
    - For XON/XOFF control:  
The printer sends the status without checking whether the host is ready to receive or busy.
  - Because this command is executed when data is mapped in the receive buffer, there may be a delay between receiving the command and sending the status depending on the condition of the receive buffer.
  - If ASB (Automatic Status Back) is enabled by GS a, the host must discriminate between the status due to this command and the status due to ASB.
  - Paper Sensor status (n = 1, 49)

Bit	Status	Hex.	Decimal
0, 1	Paper found by Paper Near-end Sensor	00	0
	Paper not found by Paper Near-end Sensor	03	3
2, 3	Paper found by Paper-end Sensor	00	0
	Paper not found by Paper-end Sensor	(0C)	(12)
4	Unused	00	0
5	Undefined	—	—
6	Undefined	—	—
7	Unused	00	0

Bits 2, 3: Whenever the Paper-end Sensor detects a "paper out" state, the printer goes offline, and the command is not executed. Therefore, the printer never sends a status "No paper in Paper-end detector (0CH)".



- Drawer kick-out connector status (n = 2, 50)

Bit	Status	Hex.	Decimal
0	Status of pin 3 of drawer kick connector = "L"	00	0
	Status of pin 3 of drawer kick connector = "H"	01	1
1	Undefined	—	—
2	Undefined	—	—
3	Undefined	—	—
4	Unused	00	0
5	Undefined	—	—
6	Undefined	—	—
7	Unused	00	0

**[See Also]**

Appendix 4.3 "Identification of Send Status"  
DLE EOT, GS a

## 2.2.7 Paper Detecting Commands

### ESC c 3 n

---

**[Function]** Selecting the Paper Sensor valid for a Paper-end signal output

**[Code]** <1B>H<63>H<33>H<n>

**[Range]**  $0 \leq n \leq 255$

**[Outline]** This command selects by which Paper Sensor a Paper-end signal should be output. Each bit for "n" has the following meaning:

Bit	Position	Value	
		0	1
0	Paper Near-end	Disabled	Enabled
1	Paper Near-end	Disabled	Enabled
2	Paper-end	Disabled	Enabled
3	Paper-end	Disabled	Enabled
4	Undefined	—	—
5	Undefined	—	—
6	Undefined	—	—
7	Undefined	—	—

**[Caution]** This command is valid only for the parallel interface.

**[Default]** n = 15

## ESC c 4 n

---

**[Function]** Selecting the Paper Near-end Sensor valid for print stop

**[Code]** <1B>H<63>H<34>H<n>

**[Range]**  $0 \leq n \leq 255$

**[Outline]** This command selects the Paper Near-end Sensor which helps to stop printing when the paper supply almost runs out.  
Each bit for "n" has the following meaning:

Bit	Position	Value	
		0	1
0	Paper Near-end	Disabled	Enabled
1	Paper Near-end	Disabled	Enabled
2	Undefined	—	—
3	Undefined	—	—
4	Undefined	—	—
5	Undefined	—	—
6	Undefined	—	—
7	Undefined	—	—

**[Caution]** This printer can only select one kind of Paper Sensor, a Paper Near-end Sensor.

**[Default]** n = 0

## 2.2.8 Panel Switch Commands

### ESC c 5 n

---

**[Function]** Enabling/disabling the panel switches

**[Code]** <1B>H<63>H<35>H<n>

**[Range]**  $0 \leq n \leq 255$

**[Outline]** Enabling/disabling the FEED switch.  
• "n" is valid only for the lowest bit (n0).  
• Control by the lowest bit (n0) is shown as follows:

n0	Condition
0	FEED switch valid
1	FEED switch invalid

**[Caution]**

- When the FEED switch is disabled with this command, the paper cannot be fed by operating the FEED switch.
- While switch operation is waited at the execution of macro, the FEED switch is always enabled regardless of the setting of this command but no paper feed operation is carried out.

**[Default]** n = 0

**[Sample Program]**

```
LPRINT CHR$(&H1B);"c5"; CHR$(0); ← When enabling the FEED switch  
LPRINT CHR$(&H1B);"c5"; CHR$(1); ← When disabling the FEED switch
```


## 2.2.9 Macro Commands

### GS :

---

<b>[Function]</b>	Starting/ending macro definition
<b>[Code]</b>	<1D>H<3A>H
<b>[Outline]</b>	Specifying starting/ending macro definition. Reception of this command during macro definition signifies ending the macro definition.
<b>[Caution]</b>	<ul style="list-style-type: none"><li>• Maximum content available for macro definition is 2048 bytes. A portion exceeding 2048 bytes is not defined.</li><li>• When GS ^ is processed in macro definition, the macro definition is stopped and the content of definition is cleared.</li><li>• Even with ESC @ (Initialization of the printer) having been executed, defined content is not cleared. Therefore, it is possible to include ESC @ into the content of macro definition.</li><li>• Normal printing operation is carried out even during macro definition.</li></ul>
<b>[Default]</b>	The initial value is not defined.
<b>[See Also]</b>	GS ^
<b>[Sample Program]</b>	<pre>LPRINT CHR\$(&amp;H1D);":"; LPRINT "+-----+"; CHR\$(&amp;HA); LPRINT "        "; CHR\$(&amp;HA); LPRINT "+-----+"; CHR\$(&amp;HA); LPRINT CHR\$(&amp;H1D);":"; LPRINT CHR\$(&amp;H1D);"^"; LPRINT CHR\$(2); CHR\$(10);</pre>

#### [Print Results]

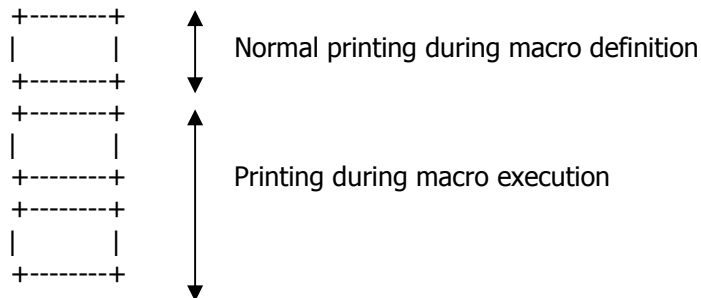

## **GS ^ n1 n2 n3**

---

<b>[Function]</b>	Executing the macro
<b>[Code]</b>	<1D>H<5E>H<n1><n2><n3>
<b>[Range]</b>	0≤n1≤255 0≤n2≤255 0≤n3≤1
<b>[Outline]</b>	Executing contents defined in macro. n1 : The number of times of macro execution n2 : Waiting time on macro execution: Waiting time of n2 x 100 msec is given for every execution. n3 : Macro execution mode n3 = 0 Continuous execution: The Macro is executed "n1" times continuously at the time interval specified by "n2". n3 = 1 Execution by FEED Switch: After waiting for the time specified by "n2", the ARARM LED flickers and the FEED switch is waiting to be pressed. When it is pressed, the macro is executed once. This action is repeated "n1" times.
<b>[Caution]</b>	<ul style="list-style-type: none"><li>• When this command is received while in macro definition, suspension of macro definition is indicated. At this time, the defined content is cleared.</li><li>• No execution takes place when the macro is held undefined.</li><li>• While in macro execution with n3 = 1, paper feed with the FEED switch is not available.</li></ul>
<b>[See Also]</b>	GS :
<b>[Sample Program]</b>	Refer to Sample Program and Print Results for GS:.

## 2.2.10 Cutter Commands

### ESC i

---

**[Function]** Full cutting of paper

**[Code]** <1B>H<69>H

**[Outline]** Executes full cutting of paper.


**[Caution]**

- This command only works if it is entered at the beginning of a line.
- Before cutting paper, feed the paper more than the cutting position of paper from the print position. Without this paper feeding, the character just after printing remains before the cutter.

**[Sample Program]**

```
LPRINT "AAAAA";  
LPRINT CHR$(&H1B);"J";  
LPRINT CHR$(150);  
LPRINT CHR$(&H1B);"i";
```

**[Print Results]**

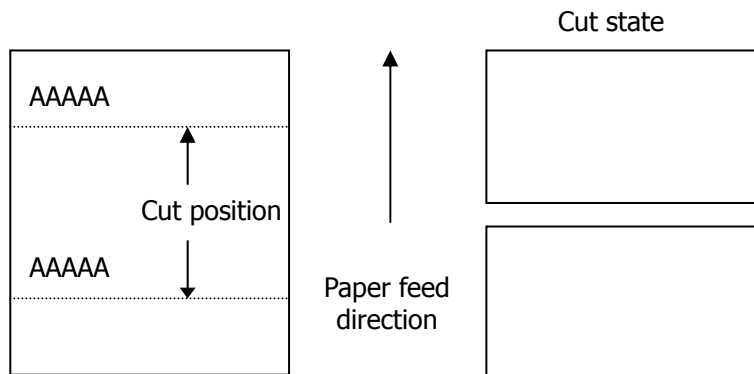

# ESC m

---

**[Function]** Partial cutting of paper

**[Code]** <1B>H<6D>H


**[Outline]** Executes partial cutting of paper.

- [Caution]**
- This command only works if it is entered at the beginning of a line.
  - Before cutting paper, feed the paper more than the cutting position of paper from the print position. Without this paper feeding, the character just after printing remains before the cutter.

**[Sample Program]**

```
LPRINT "AAAAA";  
LPRINT CHR$(&H1B);"J";  
LPRINT CHR$(150);  
LPRINT CHR$(&H1B);"m";
```

**[Print Results]**

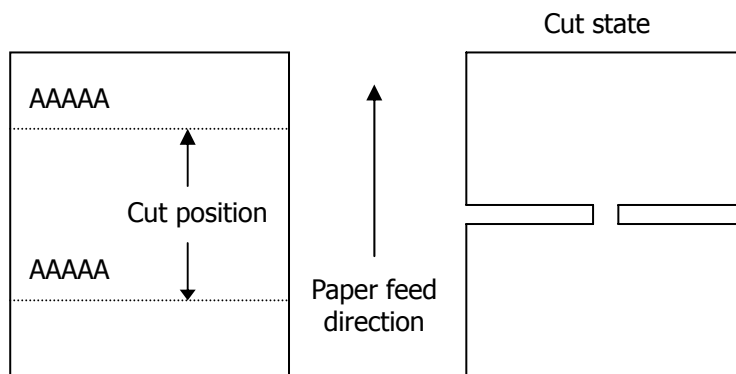



## GS V m ..... (1)

## GS V m n ..... (2)

---

**[Function]** Cutting the paper

**[Code]** (1) <1D>H<56>H<m>  
(2) <1D>H<56>H<m><n>

**[Range]** (1)  $0 \leq m \leq 1$ ,  $48 \leq m \leq 49$   
(2)  $m = 65, 66$   
 $0 \leq n \leq 255$

**[Outline]** Performs the specified paper cutting.

<b>m</b>	<b>Function</b>
0, 48	Full cut
1, 49	Partial cut (Leaving a bridge area uncut)
65	Paper feed by "cut position + {n x basic calculation pitch}" and full cut
66	Paper feed by "cut position + {n x basic calculation pitch}" and partial cut

**[Caution]**

- In STANDARD MODE, this command only works when it is entered at the beginning of a line.
- Control to make the length of cut paper less than 10 mm is not executed.

For (1):

- Executes cutting of paper.

For (2):

- If  $n = 0$ , the paper is fed to the cut position, and then cut. If  $n \neq 0$ , the paper is fed by "n x basic calculation pitch" inches past the cut position, and then cut.
- The basic calculation pitch is set by GS P.  
The paper feed amount is calculated with the vertical basic calculation pitch (y). A fraction resulting from the calculation is corrected with the minimum pitch of the mechanism, and the remainder is omitted.

## 2.2.11 Bar Code Commands

### GS H n

---

**[Function]** Selecting of printing position of HRI characters

**[Code]** <1D>H<48>H<n>

**[Range]**  $0 \leq n \leq 3$   
 $48 \leq n \leq 51$

**[Outline]** Selecting printing position of HRI characters in printing bar codes.  
"n" means the followings.

n	Printing Position
0, 48	No printing
1, 49	Above the bar code
2, 50	Below the bar code
3, 51	Both above and below the bar code

The HRI characters refer to the bar code-turned characters so that you can read them.

**[Caution]**

- The HRI characters are printed in the font selected with GS f.
- Specify before the GS k command.


**[Default]** n = 0

**[See Also]** GS f, GS k

**[Sample Program]**

```
LPRINT CHR$(&H1B);"3"; CHR$(5);
LPRINT CHR$(&H1D);"h"; CHR$(50);
LPRINT CHR$(&H1D);"H"; CHR$(0);
GOSUB BC
LPRINT CHR$(&H1D);"H"; CHR$(1);
GOSUB BC
LPRINT CHR$(&H1D);"H"; CHR$(2);
GOSUB BC
LPRINT CHR$(&H1D);"H"; CHR$(3);
GOSUB BC
END
BC:
LPRINT CHR$(&H1D);"k";
LPRINT CHR$(4);
LPRINT "12"; CHR$(0);
LPRINT CHR$(&HA);
RETURN
```

[Print Results]

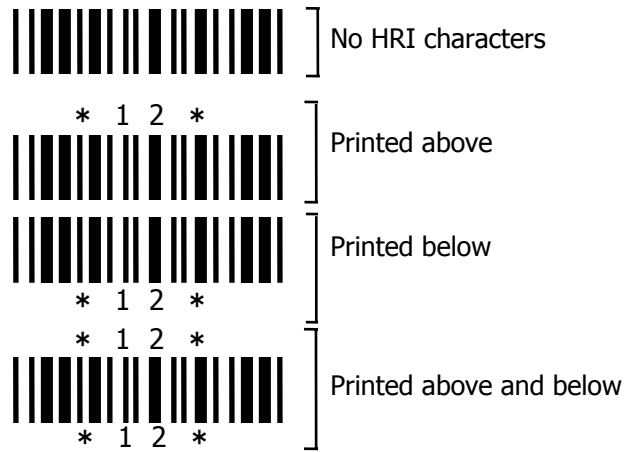

# GS f n

**[Function]** Selecting the font of HRI characters

**[Code]** <1D>H<66>H<n>

**[Range]**  $0 \leq n \leq 2$ ,  $48 \leq n \leq 50$

**[Outline]** Selecting the font of HRI characters in printing bar code.  
The type of font can be selected with "n" as follows:

n	Font
0, 48	Font A (12 x 24)
1, 49	Font B (9 x 24)
2, 50	Font C (8 x 16)

The HRI characters refer to the bar code-turned characters so that you can read them.

**[Caution]** The HRI characters are printed at the position specified with GS H.

**[Default]** n = 0

**[See Also]** GS H

**[Sample Program]**

```
LPRINT CHR$(&H1D);"h"; CHR$(50);
LPRINT CHR$(&H1D);"H"; CHR$(2);
LPRINT CHR$(&H1D);"f"; CHR$(0);
GOSUB BC
LPRINT CHR$(&H1D);"f"; CHR$(1);
GOSUB BC
END
BC:
LPRINT CHR$(&H1D);"k";
LPRINT CHR$(4);
LPRINT "12"; +CHR$(0);
LPRINT CHR$(&HA);
RETURN
```

**[Print Results]**



## **GS h n**

---

<b>[Function]</b>	Specifying the height of the bar code
<b>[Code]</b>	<1D>H<68>H<n>
<b>[Range]</b>	$1 \leq n \leq 255$
<b>[Outline]</b>	Selecting bar code height. "n" denotes the number of dots in the vertical direction.
<b>[Default]</b>	n = 162
<b>[See Also]</b>	GS k, GS w
<b>[Sample Program]</b>	Refer to Sample Program and Print Results for GS w.

# GS k m [d1 ..... dk] NULL ..... (1)

# GS k m n [d1 ..... dn] ..... (2)

**[Function]** Printing the bar code

**[Code]** (1) <1D>H<6B>H<m> [d1.....dk] NULL  
(2) <1D>H<6B>H<m><n> [d1....dn]

**[Range]** (1)  $0 \leq m \leq 6$  The definitions of "k" and "d" vary with the bar code system.  
(2)  $65 \leq m \leq 73$  The definitions of "n" and "d" vary with the bar code system.

**[Outline]** Selects a bar code system and prints the bar code.

For (1):

m	Bar Code System	Range of "k"	Range of "d"
0	UPC-A	$11 \leq k \leq 12$	$48 \leq d \leq 57$
1	UPC-E	$11 \leq k \leq 12$	$48 \leq d \leq 57$
2	JAN13 (EAN)	$12 \leq k \leq 13$	$48 \leq d \leq 57$
3	JAN8 (EAN)	$7 \leq k \leq 8$	$48 \leq d \leq 57$
4	CODE39	$1 \leq k$	$48 \leq d \leq 57, 65 \leq d \leq 90$ 32, 36, 37, 43, 45, 46, 47
5	ITF	$1 \leq k$ (An even number)	$48 \leq d \leq 57$
6	CODABAR	$1 \leq k$	$48 \leq d \leq 57, 65 \leq d \leq 68$ 36, 43, 45, 46, 47, 58

For (2):

m	Bar Code System	Range of "n"	Range of "d"
65	UPC-A	$11 \leq n \leq 12$	$48 \leq d \leq 57$
66	UPC-E	$11 \leq n \leq 12$	$48 \leq d \leq 57$
67	JAN13 (EAN)	$12 \leq n \leq 13$	$48 \leq d \leq 57$
68	JAN8 (EAN)	$7 \leq n \leq 8$	$48 \leq d \leq 57$
69	CODE39	$1 \leq n \leq 255$	$48 \leq d \leq 57, 65 \leq d \leq 90$ 32, 36, 37, 43, 45, 46, 47
70	ITF	$1 \leq n \leq 255$ (An even number)	$48 \leq d \leq 57$
71	CODABAR	$1 \leq n \leq 255$	$48 \leq d \leq 57, 65 \leq d \leq 68$ 36, 43, 45, 46, 47, 58
72	CODE93	$1 \leq n \leq 255$	$0 \leq d \leq 127$
73	CODE128	$2 \leq n \leq 255$	$0 \leq d \leq 127$

**[Caution]**

**For (1):**

- This command ends with a NULL code.
- For UPC-A or UPC-E, the bar code is printed when 12 bytes of bar code data have been entered, and the subsequent data is handled as normal data.
- For JAN13, the bar code is printed when 13 bytes of bar code data have been entered, and the subsequent data is handled as normal data.
- For JAN8, the bar code is printed when 8 bytes of bar code data have been entered, and the subsequent data is handled as normal data.
- The data of ITF bar code must have an even number of columns. Should the data have an odd number of columns, the last column is ignored.

**For (2):**

- Numeral "n" indicates the number of data items, and the subsequent "n" bytes of data are handled as bar code data.
- If "n" is out of the range, the processing of the command is aborted, and the subsequent data is handled as normal data.

**For STANDARD MODE:**

- If "d" is out of the range, only a paper feed is executed, and the subsequent data is handled as normal data.
- If the bar code is wider than the print area for one line, the bar code is not printed, but only a paper feed is executed.
- The amount of paper feed corresponds to the height of the bar code (including the HRI characters if HRI character printing is specified), irrespective of the line feed width set by a command such as ESC 2 or ESC 3.
- This command only works if no data exists in the print buffer. If any data exists in the print buffer, the data subsequent to "m" is handled as normal data.
- After the bar code is printed, the beginning of the line is taken as the start position for the next print.
- This command is not affected by any print modes (emphasis, double strike, underline, and character size), except for the inverted character mode.

**For PAGE MODE:**

- This command only maps the bar code, without performing a printout. After the bar code is mapped, the dot next to the last data item of the bar code is taken as the start position for the next data mapping.
- If "d" is out of the range, the processing of the command is aborted, and the subsequent data is handled as normal data. In this case, the data mapping start position does not move.
- If the bar code is wider than the print area, the bar code is not printed, but the data mapping start position is moved to the left end of the non-print area.

## [Description of Bar Codes]

- UPC-A** This bar code, consisting of numerals only, has a fixed length of 12 columns; a 11-column number entered from the host or application software plus a check digit (12th column) automatically calculated inside the printer. If the 12th-column numeral is sent from the host, the entire bar code will be printed as it is.
- UPC-E** This bar code, consisting of numerals only, has a fixed length of 8 columns; the first number system character is "0" stationary. A 12-column numeral entered from the host or application software is compressed to 8 columns with a check digit attached and then is printed. The 12th-column check digit is automatically calculated inside the printer. If it is and sent from the host, the entire bar code will be printed, compressed to 8 columns.
- JAN-13(EAN)** This bar code, consisting of numerals only, has a fixed length of 13 columns; a 12-column number entered from the host or application software plus a check digit (13th column) automatically calculated inside the printer. If the 13th-column numeral is sent from the host, the entire bar code will be printed as it is.
- JAN-8(EAN)** This bar code, consisting of numerals only, has a fixed length of 8 columns; a 7-column number entered from the host or application software plus a check digit (8<sup>th</sup> column) automatically calculated inside the printer. If the 8th-column numeral is sent from the host, the entire bar code will be printed as it is.
- CODE39** This bar code, consisting of upper-case alphabetic characters and numerals, has a variable length of columns. The start/stop code "\*" is automatically added by the printer. The available characters include space and "\$ % + - . / 0 1 2 3 4 5 6 7 8 9" and upper-case alphabetic characters.
- ITF** This bar code, consisting of only numerals, has a variable length of even-number columns. If a code of odd-number columns is sent, the bar code will not be printed.
- CODABAR (NW-7)** This bar code, consisting of alphanumeric, has a variable length of columns. Available characters include "0 1 2 3 4 5 6 7 8 9 A B C D \$ + - . / :". A start/stop code is required; any one of A, B, C, and D is used.
- CODE93** This bar code, consisting of alphanumeric and control characters, has a variable length of columns. The HRI character string is preceded and followed by a "■" character. HRI characters for control characters (00H - 1FH, and 7FH) are each printed as a combination of a "■" character and an alphabetic character.



Control Character		HRI Character	Control Character		HRI Character
ASCII	Hex.		ASCII	Hex.	
NULL	00	▪U	DLE	10	▪P
SOH	01	▪A	DC1	11	▪Q
STX	02	▪B	DC2	12	▪R
ETX	03	▪C	DC3	13	▪S
EOT	04	▪D	DC4	14	▪T
ENQ	05	▪E	NAK	15	▪U
ACK	06	▪F	SYN	16	▪V
BEL	07	▪G	ETB	17	▪W
BS	08	▪H	CAN	18	▪X
HT	09	▪I	EM	19	▪Y
LF	0A	▪J	SUB	1A	▪Z
VT	0B	▪K	ESC	1B	▪A
FF	0C	▪L	FS	1C	▪B
CR	0D	▪M	GS	1D	▪C
SO	0E	▪N	RS	1E	▪D
SI	0F	▪0	US	1F	▪E
			DEL	7F	▪T

## CODE128

This bar code consists of 103 bar code characters and three code sets, enabling 128 ASCII code characters to be printed. It has a variable length of columns.

- Code set A ASCII characters 00H - 5FH can be represented.
- Code set B ASCII characters 20H - 7FH can be represented.
- Code set C Two-digit numbers 00 - 99 can each be represented by one character. In addition to the above characters, special characters are available:
- Shift character (SHIFT)
 

When used in code set A, one character next to a Shift character is treated as a character of code set B. When used in code set B, one character next to a Shift character is treated as a character of code set A. The Shift character cannot be used in code set C.
- Code set select characters (CODE A, CODE B, CODE C):
 

The code set following a code set select character is switched to code set A, B, or C.
- Function characters (FNC1, FNC2, FNC3, FNC4):
 

How the function characters are used depends on each application. In code set C, only FNC1 is available.

When sending print data, note these points:

- (1) Each string of bar code data must begin with a code set select character (CODE A, CODE B, or CODE C), which selects the first code set to use.
- (2) Every special character is specified by a combination of two characters: a brace "{" followed by one character. A brace "{" itself is sent twice consecutively.

### Special characters

Hex.	ASCII	Code Set A	Code Set B	Code Set C
7B53	{ S	SHIFT	SHIFT	-N/A
7B41	{ A	-N/A	CODE A	CODE A
7B42	{ B	CODE B	-N/A	CODE B
7B43	{ C	CODE C	CODE C	-N/A
7B31	{ 1	FNC1	FNC1	FNC1
7B32	{ 2	FNC2	FNC2	-N/A
7B33	{ 3	FNC3	FNC3	-N/A
7B34	{ 4	FNC4	FNC4	-N/A
7B7B	{ {	` {`	` {`	` {`

<Example>

To print "No." in code set B, followed by "123456" in code set C, send the following data string:

GS k <73> <10> <7B>H <42>H, "No." <7B>H <43>H <12> <34> <56>

- If the printer finds a string of bar code data that does not begin with a code set select character, it immediately aborts the command processing and handles the subsequent data as normal data.
- If the printer received a character that is not available in the currently selected code set, it immediately aborts the command processing and handles the subsequent data as normal data.
- An HRI character corresponding to either a Shift character or a code select character is not printed. An HRI character for either a function character or a control character is treated as a space character.

### [Sample Program]

```
LPRINT CHR$(&H1D);"H"; CHR$(2);
LPRINT CHR$(&H1D);"k";
LPRINT CHR$(4);
LPRINT "123"; CHR$(0);
```










### [Print Results]



When the data "123" is printed with the code 39

**[Bar Code Print Example]**

UPC-A, UPC-E, JAN-13 (EAN), JAN-8 (EAN), CODE39, ITF, CODABAR, CODE93, CODE128

Type	Print Sample	Outline of Symbol
UPC-A		12-column fixed-length bar code consisting of numerals only.
UPC-E		8-column fixed-length bar code consisting of numerals only. Abbreviated version of UPC-A.
JAN-13		13-column fixed-length bar code consisting of numerals only.
JAN-8		8-column fixed-length bar code consisting of numerals only.
CODE39		Variable-length bar code consisting of alphabetic characters and numerals. The start/stop code "*" is automatically added.
ITF		Even-column variable-length bar code consisting of numerals only.
CODABAR (NW-7)		Variable-length bar code consisting of alphanumeric characters. Any one of A, B, C, and D is required as the start/stop code.
CODE93		Variable-length bar code consisting of alphanumeric and control characters.
CODE128		Variable-length bar code consisting of any of 128 ASCII code characters.

Printing is done according to bar code type, number of print columns, bar code height, width (magnification), availability of HRI character, and bar code data.

## GS w n

---

**[Function]** Specifying the horizontal size (magnification) of bar code

**[Code]** <1D>H<77>H<n>

**[Range]**  $2 \leq n \leq 6$

**[Outline]** Selecting bar code width.

**[Default]**  $n = 3$

**[Sample Program]**

```
LPRINT CHR$(&H1D);"h"; CHR$(30);
LPRINT CHR$(&H1D);"w"; CHR$(2);
GOSUB BC
LPRINT CHR$(&H1D);"h"; CHR$(50);
LPRINT CHR$(&H1D);"w"; CHR$(3);
GOSUB BC
LPRINT CHR$(&H1D);"h"; CHR$(80);
LPRINT CHR$(&H1D);"w"; CHR$(4);
GOSUB BC
END
BC:
LPRINT CHR$(&H1D);"k";
LPRINT CHR$(4);
LPRINT "12"; CHR$(0);
RETURN
```

**[Print Results]**



← Height = 30, Magnification = 2

← Height = 50, Magnification = 3

← Height = 80, Magnification = 4

## 2.2.12 Commands for Non-volatile Memory

### **GS ( C pL pH m fn b[c1 c2][d1...dk]**

**[Function]** Editing user NV memory

**[Outline]**

- Erases/stores/sends data of user NV memory area and sends the use amount/remaining capacity.
- Executes edit processing of user NV memory specified by function code (fn).

fn	Code	Function No..	Function
0,48	GS ( C pL pH m fn b c1 c2	Function0	Erases specified record.
1,49	GS ( C pL pH m fn b c1 c2 d1...dk	Function1	Stores data in specified record.
2,50	GS ( C pL pH m fn b c1 c2	Function2	Sends data stored in specified record.
3,51	GS ( C pL pH m fn b	Function3	Sends capacity of use (number of bytes).
4,52	GS ( C pL pH m fn b	Function4	Sends remaining capacity (number of bytes).
5,53	GS ( C pL pH m fn b	Function5	Sends key code list of stored record.
6,54	GS ( C pL pH m fn b d1 d2 d3	Function6	Erases all areas of user NV memory in a lump.

- pL, PH specifies the number of bytes of "m" and the following to (pL + pH x 256).
- c1, c2 specifies key code (ID code of record).
- Total capacity of user NV memory can be specified as any of [1K, 64K, 128K, 192K]bytes by GS ( E. Default value is 1K byte.

**[Caution]**

- Frequent use of this command may result in damage of NV memory. Use the Write command to NV memory in consideration of [10 times max./day].
- Following the processing of this command, printer Busy may occur during writing data in NV memory. While the printer is Busy, it stops receiving process. Therefore, data transmission (including real-time command) from host is prohibited.

## fn = 0, 48: Function 0 Erasing Specified Record

### GS ( C pL pH m fn b c1 c2

---

[Code] <1D>H<28>H<43>H<pL><pH><m><fn><b>[c1c2]

[Range] (pL + pH × 256) = 5 (pL = 5, pH = 0)  
m = 0  
fn = 0, 48  
b = 0  
32 ≤ c1 ≤ 126  
32 ≤ c2 ≤ 126

[Outline] Erases the record specified by c1, c2 stored in user NV memory.

## fn = 1, 49: Function 1 Storing Data to Specified Record

### GS ( C pL pH m fn b c1 c2 d1...dk

---

[Code] <1D>H<28>H<43>H<pL><pH><m><fn><b>[c1c2][d1...dK]

[Range] 6 ≤ (pL + pH × 256) ≤ 65535 (0 ≤ pL ≤ 255, 0 ≤ pH ≤ 255)  
m = 0  
fn = 1, 49  
b = 0  
32 ≤ c1 ≤ 126  
32 ≤ c2 ≤ 126  
32 ≤ d ≤ 254  
k = (pL + pH × 256) – 5

[Outline] 

- Stores data to the record specified by c1, c2.
- When the data is present in NV memory, it is replaced by new data.

## fn = 2, 50: Function 2 Sending Data Stored in Specified Record GS ( C pL pH m fn b c1 c2

**[Code]** <1D>H<28>H<43>H<pL><pH><m><fn><b>[c1c2]

**[Range]** (pL + pH × 256) = 5 (pL = 5, pH = 0)  
m = 0  
fn = 2, 50  
b = 0  
32 ≤ c1 ≤ 126  
32 ≤ c2 ≤ 126

**[Outline]** Sends data stored in the record specified by c1, c2 in user NV memory.

	Hex.	Decimal	Data Size
Header	37H	55	1byte
Identifier	70H	112	1byte
Status	40H or 41H	64 or 65	0~80bytes
Data	20H~FEH	32~254	1byte
NUL	00H	0	1byte

Transmission data in case specified record cannot be detected is as shown below.

	Hex.	Decimal	Data Size
Header	37H	55	1byte
Identifier	70H	112	1byte
Status	40H	64	1byte
NUL	00H	0	1byte

After sending [Header - NUL], a response is received from host and next processing corresponding to the response is executed.

- In case of "Status (with continuous block): hexadecimal number = 41H / decimal number = 65"

Response		Content of Processing
ASCII	Decimal	
ACK	6	Sends next data group.
NAK	21	Resends previous data group.
CAN	24	Cancels processing.

- In case of "Status (last block): hexadecimal number = 40H / decimal number = 64"

Response		Content of Processing
ASCII	Decimal	
ACK	6	Terminates processing.
NAK	21	Resends previous data group.
CAN	24	Cancels processing.

## fn = 3, 51: Function 3 Sending Use Amount GS ( C pL pH m fn b

---

[Code] <1D>H<28>H<43>H<pL><pH><m><fn><b>

[Range] (pL + pH × 256) = 3 (pL = 3, pH = 0)  
m = 0  
fn = 3, 51  
b = 0

[Outline] Sends the use amount of user NV memory (number of bytes of used area).

	Hex.	Decimal	Data Size
Header	37H	55	1byte
Identifier	28H	40	1byte
Capacity of use	30H~39H	48~57	1~6 bytes
NUL	00H	0	1byte

## fn = 4, 52: Function 4 Sending Remaining Capacity GS ( C pL pH m fn b

---

[Code] <1D>H<28>H<43>H<pL><pH><m><fn><b>

[Range] (pL + pH × 256) = 3 (pL = 3, pH = 0)  
m = 0  
fn = 4, 52  
b = 0

[Outline] Sends the remaining capacity of user NV memory (number of bytes of unused area).

	Hex.	Decimal	Data Size
Header	37H	55	1byte
Identifier	29H	41	1byte
Capacity of use	30H~39H	48~57	1~6bytes
NUL	00H	0	1byte



## fn = 5, 53: Function 5 Sending Key Code List of Stored Record GS ( C pL pH m fn b

[Code] <1D>H<28>H<43>H<pL><pH><m><fn><b>

[Range] (pL + pH :256) = 3 (pL = 3, pH = 0)  
m = 0  
fn = 5, 53  
b = 0

[Outline] Sends key code list of record existing in user NV memory.

	Hex.	Decimal	Data size
Header	37H	55	1byte
Identifier	71H	113	1byte
Status	40H or 41H	64 or 65	1byte
Data	20H~FEH	32~254	2~80 bytes
NUL	00H	0	1byte

- Data is a data group with a list of key codes.  
Transmission data group when record is not detected is as shown below.

	Hex.	Decimal	Data Size
Header	37H	55	1byte
Identifier	71H	113	1byte
Status	40H	64	1byte
NUL	00H	0	1byte

After sending [Header - NUL], receives a response from the host and executes the next processing corresponding to the response.

- In case of "Status (with continuous block): hexadecimal number = 41H / decimal number = 65"

Response		Content of Processing
ASCII	Decimal	
ACK	6	Sends next data group.
NAK	21	Resends previous data group.
CAN	24	Cancels processing.

- In case of "Status (last block): hexadecimal number = 40H / decimal number = 64"

Response		Content of Processing
ASCII	Decimal	
ACK	6	Terminates processing.
NAK	21	Resends previous data group.
CAN	24	Cancels processing.

## **fn = 6, 54: Function 6 Erasing All User NV Memory Area in a Lump GS ( C pL pH m fn b [d1 d2 d3]**

---

**[Code]** <1D>H<28>H<43>H<pL><pH><m><fn><b>[d1d2 d3]

**[Range]** (pL + pH × 256) = 6 (pL = 6, pH = 0)  
m = 0  
fn = 6, 54  
b = 0  
d1 = 67  
d2 = 76  
d3 = 82

**[Outline]** Erases all areas of user NV memory in a lump.

## GS ( L pL pH m fn [parameter]

### GS 8 L p1 p2 p3 p4 m fn [parameter]

**[Function]** Specifying graphics data

**[Code]**

<1D>H<28>H<4C>H<pL><pH><m><fn>

<1D>H<38>H<4C>H<p1><p2><p3><p4><m><fn>

\* In the explanation of function, the code of GS ( L is used.

• GS ( L and GS 8 L ) are the same function.

• When [parameter] exceeds 65533 bytes in each function, GS 8 L is used.

**[Outline]**

Executes the processing related to the graphics data specified by the function code (fn).

fn	Code	Function No.	Function
0,48	GS ( L pL pH m fn	Function48	Sends NV graphics memory capacity.
2,50	GS ( L pL pH m fn	Function50	Prints graphics data stored in print buffer.
3,51	GS ( L pL pH m fn	Function51	Sends the remaining amount of NV graphics memory.
64	GS ( L pL pH m fn d1 d2	Function64	Sends key code list of defined NV graphics.
65	GS ( L pL pH m fn d1 d2 d3	Function65	Erases all data of NV graphics in a lump.
66	GS ( L pL pH m fn kc1 kc2	Function66	Erases the specified NV graphics data.
67	GS ( L pL pH m fn a kc1 kc2 b xL xH yL yH [c d1...dk]1...[c d1...dk]b	Function67	Defines raster graphics data to NV memory.
69	GS ( L pL pH m fn kc1 kc2 x y	Function69	Prints the specified NV graphics.
112	GS ( L pL pH m fn a bx by c xL xH yL yH d1...dk	Function 12	Stores raster graphics data to print buffer.

• pL, pH specifies the number of bytes or "m" and later to (pL + pH :256).

**[Caution]**

- Frequent use of this command may result in damage of NV memory. Use the Write command to NV memory in consideration of [10 times max./day].
- Following the processing of this command, printer Busy may occur during writing data in NV memory. While the printer is Busy, it stops receiving process. Therefore, data transmission (including real-time command) from host is prohibited.

## fn = 0, 48: Function 48 Sending NV Graphics Memory Capacity GS ( L pL pH m fn

[Code] <1D>H<28>H<4C>H<pL><pH><m><fn>

[Range] (pL + pH × 256) = 2 (pL = 2, pH = 0)  
m = 48  
fn = 0, 48

[Outline] Sends all capacity of NV graphics area in the number of bytes.

	Hex.	Decimal	Data Size
Header	37H	55	1 byte
Identifier	30H	48	1 byte
Data	30H~39H	48~57	1 ~ 8 bytes
NUL	00H	0	1 byte

- Converts all capacity to character code expressed in decimal notation and sends it from higher digit.
- Data size is variable.
- All definition area can be specified by GS ( E out of [0, 64K, 128K, 192K, 256K, 320K, 384K]. Default value is 384k bytes.

## fn = 2, 50: Function 50 Printing Graphics Data Stored in Print Buffer GS ( L pL pH m fn

[Code] <1D>H<28>H<4C>H<pL><pH><m><fn>

[Range] (pL + pH × 256) = 2 (pL = 2, pH = 0)  
m = 48  
fn = 2, 50

[Outline]

- Prints the graphics data stored in the print buffer in the processing of Function 112.
- Executes paper feeding corresponding to the number of dots in Y direction of graphics stored in the print buffer.

## fn = 3, 51: Function 51 Sending the Remaining Amount of NV Graphics Memory GS ( L pL pH m fn

[Code] <1D>H<28>H<4C>H<pL><pH><m><fn>

[Range] (pL + pH × 256) = 2 (pL = 2, pH = 0)  
m = 48  
fn = 3, 51

[Outline] Sends the remaining amount of NV graphics area (number of bytes of unused area).

	Hex.	Decimal	Data Size
Header	37H	55	1 byte
Identifier	31H	49	1 byte
Data	30H~39H	48~57	1 ~ 8 bytes
NUL	00H	0	1 byte

- Converts the remaining amount to character code expressed in decimal notation and sends it from higher digit.
- Data size is variable.

## fn = 64: Function 64 Sending Key Code List of Defined NV Graphics GS ( L pL pH m fn d1 d2

**[Code]** <1D>H<28>H<4C>H<pL><pH><m><fn><d1><d2>

**[Range]** (pL + pH x 256) = 4 (pL = 4, pH = 0)  
m = 48  
fn = 64  
d1 = 75 ("K")  
d2 = 67 ("C")

**[Outline]** Sends the key code list of defined NV graphics.  
• When key code list is present

	Hex.	Decimal	Data Size
Header	37H	55	1 byte
Identifier	72H	114	1 byte
Status	40H or 41H	64 or 65	1 byte
Data	30H~39H	48~57	2~ 80 bytes
NUL	00H	0	1 byte

• When key code is not present

	Hex.	Decimal	Data Size
Header	37H	55	1 byte
Identifier	72H	114	1 byte
Data	40H	64	1 byte
NUL	00H	0	1 byte

When 40 or more key codes are present, they are sent by being divided in unit of 40max.

- Status with continuous transmission data group is 41H.
  - Status without continuous transmission data group is 40H.
- After sending [Header - NUL], receives a response from the host and executes the next processing corresponding to the response.
- In case of "Status (with continuous block): hexadecimal number = 41H / decimal number = 65"

Response		Content of Processing
ASCII	Decimal	
ACK	6	Sends next data group.
NAK	21	Resends previous data group.
CAN	24	Cancels processing.

• In case of "Status (last block): hexadecimal number = 40H / decimal number = 64"

Response		Content of Processing
ASCII	Decimal	
ACK	6	Terminates processing.
NAK	21	Resends previous data group.
CAN	24	Cancels processing.

## **fn = 65: Function 65 Erasing All Data of NV Graphics in a Lump**

### **GS ( L pL pH m fn d1 d2 d3**

---

**[Code]** <1D>H<28>H<4C>H<pL><pH><m><fn><d1><d2><d3>

**[Range]** (pL + pH × 256) = 5 (pL = 5, pH = 0)  
m = 48  
fn = 65  
d1 = 67 ("C")  
d2 = 76 ("L")  
d3 = 82 ("R")

**[Outline]** Erases all defined data of NV graphics in a lump.

## **fn = 66: Function 66 Erasing Specified NV Graphics Data**

### **GS ( L pL pH m fn kc1 kc2**

---

**[Code]** <1D>H<28>H<4C>H<pL><pH><m><fn><kc1><kc2>

**[Range]** (pL + pH × 256) = 4 (pL = 4, pH = 0)  
m = 48  
fn = 66  
32 ≤ kc1 ≤ 126  
32 ≤ kc2 ≤ 126

**[Outline]** Erases the NV graphics data defined by key code (kc1, kc2).

## fn = 67: Function 67 Defining Raster Type Graphics Data to NV Memory GS ( L pL pH m fn a kc1 kc2 b xL xH yL yH

[c d1...dk]1...[c d1...dk]b

**[Code]** <1D>H<28>H<4C>H<pL><pH><m><fn><a><kc1><kc2><b>  
<xL><xH><yL><yH>[c d1...d2]1...[c d1...dk]b

**[Range]** Parameter of GS ( L  
 $12 \leq (pL + pH \times 256) \leq 65535$  ( $0 \leq pL \leq 255$ ,  $0 \leq pH \leq 255$ )  
 Parameter of GS 8 L  
 $12 \leq (p1 + p2 \times 256 + p3 \times 65536 + p4 \times 16777216) \leq 4294967295$   
 ( $0 \leq p1 \leq 255$ ,  $0 \leq p2 \leq 255$ ,  $0 \leq p3 \leq 255$ ,  $0 \leq p4 \leq 255$ )  
 Common parameter of GS ( L, GS 8 L  
 $m = 48$   
 $fn = 67$   
 $32 \leq kc1 \leq 126$   
 $32 \leq kc2 \leq 126$   
 $b = 1, 2$   
 $1 \leq (xL + xH \times 256) \leq 8192$   
 $1 \leq (yL + yH \times 256) \leq 2304$   
 $c = 49$  (When monochrome color paper is specified)  
 $c = 49, 50$  (When 2-color paper is specified)  
 $0 \leq d \leq 255$   
 $k = (\text{int}((xL + xH \times 256) + 7 / 8) \times (yL + yH \times 256))$

All defined areas can be specified by GS ( E from [0, 64K, 128K, 192K, 256K, 320K, 384K] bytes. Default value is 384K bytes.

**[Outline]** Defines raster type graphics data to NV memory.

- "b" specifies the number of data colors.
- xL, xH specifies the horizontal direction of defined data to  $(xL + xH \times 256)$ .
- yL, yH specifies the vertical direction of defined data to  $(yL + yH \times 256)$ .
- "c" specifies the color of defined data.

c	Color of Defined Data
49	1st color
50	2nd color

- 1st color denotes black (high energy) in the specified 2-color thermal paper.
- 2nd color denotes red (low energy) in the specified 2-color thermal paper.

**[Caution]** When multiple colors is specified by "b" and the same color is selected by "c", the command processing is terminated at that point, validating the defined data processed so far and the remaining data is read and discarded.

## fn = 69: Function 69 Printing Specified Graphics GS ( L pL pH m fn kc1 kc2 x y

---

**[Code]** <1D>H<28>H<4C>H<pL><pH><m><fn><kc1><kc2><x><y>

**[Range]** (pL + pH × 256) = 6 (pL = 6, pH = 0)  
m = 48  
fn = 69  
32 ≤ kc1 ≤ 126  
32 ≤ kc2 ≤ 126  
x = 1, 2  
y = 1, 2

**[Outline]** Prints the NV graphics data defined by key code (kc1, kc2) as large as x times horizontally/y times vertically.



## fn = 112: Function 112 Storing Raster Type Graphics Data to Print Buffer GS ( L pL pH m fn a bx by c xL xH yL yH d1...dk

**[Code]** <1D>H<28>H<4C>H<pL><pH><m><fn><a><bx><by><c>  
<xL><xH><yL><yH>[d1...dk]

**[Range]** Parameter of GS ( L  
 $11 \leq (pL + pH \times 256) \leq 65536$  ( $0 \leq pL \leq 255$ ,  $0 \leq pH \leq 255$ )  
 Parameter of GS 8 L  
 $11 \leq (p1 + p2 \times 256) + p3 \times 65536 + p4 \times 16777216 \leq 4294967295$   
 ( $0 \leq p1 \leq 255$ ,  $0 \leq p2 \leq 255$ ,  $0 \leq p3 \leq 255$ ,  $0 \leq p4 \leq 255$ )  
 Common parameter of GS ( L, GS 8 L  
 m = 48  
 fn = 112  
 a = 48  
 bx = 1, 2  
 by = 1, 2  
 c = 49 (When monochrome color paper is specified)  
 c = 49, 50 (When 2-color paper is specified)  
 $1 \leq (xL + xH \times 256) \leq 1024$   
  
 When monochrome color paper is specified  
 $1 \leq (yL + yH \times 256) \leq 1662$  (with by = 1)  
 $1 \leq (yL + yH \times 256) \leq 831$  (with by = 2)  
  
 When 2-color paper is specified  
 $1 \leq (yL + yH \times 256) \leq 831$  (with by = 1)  
 $1 \leq (yL + yH \times 256) \leq 415$  (with by = 2)  
 $0 \leq d \leq 255$   
 $k = (\text{int}((xL + xH \times 256) + 7 / 8) \times (yL + yH \times 256))$

**[Outline]** Stores raster type graphics data to print buffer as large as x times horizontally/y times vertically.

- xL, xH specifies the horizontal direction of raster graphics data to  $(xL + xH \times 256)$ .
- yL, yH specifies the vertical direction of raster graphics data to  $(yL + yH \times 256)$ .
- "c" specifies the color of print data.

c	Color of Print Data
49	1st color
50	2nd color

- 1st color denotes black (high energy) in the specified 2-color thermal paper.
- 2nd color denotes red (low energy) in the specified 2-color thermal paper.

**[Caution]** In STANDARD MODE, each color can be defined only once.

## GS g 0 m nL nH

---

**[Function]** Initializing maintenance counter

**[Code]** <1D>H<67>H<30>H<m><nL><nH>

**[Range]** m=0  
 $20 \leq (nL+nH \times 256) \leq 70$  (nL=20, 21, 50, 70, nH=0)

**[Outline]** Set the value of resettable maintenance counter specified to 0.  
nL, nH are used to set the maintenance counter number to (nL+nH×256).

Counter Number		Counter [Unit]
Hexadecima l	Decimal	
14	20	Paper-feed line[line]
15	21	Head powering count [times]
32	50	Auto-cutter drive count [times]
46	70	Product operation time[hours]

**[Caution]**

- This command, if used frequently, may destroy NV memory, thus write command to NV memory shall be used less than [10 times/day] as a guideline.
- Along with processing this command, during data-writing to NV memory, printer BUSY may occur. During the printer BUSY, to stop receive processing, this printer prohibits the data sending (including real-time command) from host.

## GS g 2 m nL nH

**[Function]** Sending maintenance counter

**[Code]** <1D>H<67>H<32>H<m><nL><nH>

**[Range]** m=0  
 $20 \leq (nL + nH \times 256) \leq 198$   
 (nL=20, 21, 50, 70, 148, 149, 178, 198, nH=0)

**[Outline]** Send the maintenance counter value specified.  
 nL, nH are used to set the maintenance counter number to (nL+nH×256).

Counter Number		Counter [Unit]	Counter Type
Hexadecimal	Decimal		
14	20	Paper-feed line[line]	Resettable
15	21	Head powering count [times]	Resettable
32	50	Auto-cutter drive count [times]	Resettable
46	70	Product operation time[hours]	Resettable
94	148	Paper-feed line[line]	Accumulated
95	149	Head powering count [times]	Accumulated
B2	178	Auto-cutter drive count [times]	Accumulated
C6	198	Product operation time[hours]	Accumulated

- Configuration of data to be sent is shown below for the maintenance counter.

	Hexadecimal	Decimal	Data Count
Header	5FH	95	1 byte
Data	30H ~ 39H	48 ~ 57	1 - 10 bytes
NUL	00H	0	1 byte

- [Caution]**
- During sending block data (maintenance counter value), real-time status and ASB status shall not be sent. Thus, during sending the data, printer status can not be notified.
  - Counter value sent by this command is only a guideline value. Due to an error occurrence and power off timing, figure data may have an error.

## FS p n m

**[Function]** Printing the download NV bit images

**[Code]** <1C>H<70>H<n><m>

**[Range]**  $1 \leq n \leq 255$   
 $0 \leq m \leq 3, 48 \leq m \leq 51$

**[Outline]** This command prints the download NV bit images (n) using a specified mode (m).  
• "n" denotes the number of the download bit image.  
• "m" denotes the bit image mode.

m	Mode Name	Dot Density in Vertical Direction	Dot Density in Horizontal Direction
0, 48	NORMAL MODE	203 DPI	203 DPI
1, 49	DOUBLE WIDTH MODE	203 DPI	101 DPI
2, 50	DOUBLE HEIGHT MODE	101 DPI	203 DPI
3, 51	QUADRUPLE SIZE MODE	101 DPI	101 DPI

**[Caution]**

- The download NV bit image refers to the image that is defined by the FS q command in the non-volatile memory and printed by the FS p command.
- When the specified NV bit image "n" is undefined, this command is invalid.
- When the STANDARD MODE is selected, this command is valid only when there is no data in the print buffer.
- This command is invalid when PAGE MODE is selected.
- Any printing modes except the upside-down printing mode (i.e. emphasis, double strike, underlining, character size, inverted character printing, 90°-right-turned) are not affected.
- When the printing area set by the functions GS L and GS W is not enough for one vertical line of the download NV bit image, the line alone is dealt with as follows. One vertical line of the bit image is 1 dot in NORMAL MODE (m = 0, 48) and DOUBLE HEIGHT MODE (m = 2, 50), and it is 2 dots in double WIDTH MODE (m = 1, 49) and QUADRUPLE SIZE MODE (m = 3, 51).
  - (1) The printing area is extended to the right side within the limits of the printing area so that one vertical line of the download NV bit image can be printed.
  - (2) When a sufficient printing area cannot be maintained even after executing (1), the printing area is extended to the left side. (The left margin is reduced.)
- When the size of a bit image exceeds the limits of the printing area, the data within the limits of the printing area will be printed but the parts exceeding the limit will not be printed.
- Regardless of the amount of line feed set with ESC 2 and ESC 3, NORMAL MODE and DOUBLE WIDTH MODE execute a paper feed of (height "n" of NV bit image) dots while DOUBLE HEIGHT MODE and QUADRUPLE SIZE MODE execute a paper feed of (height "n" of NV bit image x2) dots.
- At the completion of the bit image printing, the head of the line will be used for the next printing position and normal data processing will take place.


**[See Also]** ESC \*, FS q, GS /, GS v 0

## **FS q n [xL xH yL yH d1...dk] 1... [xL xH yL yH d1...dk] n**

<b>[Function]</b>	Defining the download NV bit image
<b>[Code]</b>	<1C>H<71>H<n>[<xL><xH><yL><yH><d1...dk>]1 ...[<xL><xH><yL><yH><d1...dk>]n
<b>[Range]</b>	$1 \leq n \leq 255$ , $0 \leq xL \leq 255$ , $0 \leq xH \leq 3$ but, $1 \leq (xL + xH \times 256) \leq 1023$ $0 \leq yL \leq 255$ $0 \leq yH \leq 1$ but, $1 \leq (yL + yH \times 256) \leq 288$ $0 \leq d \leq 255$ $k = (xL + xH \times 256) \times (yL + yH \times 256) \times 8$ Total definition area = 2M bits (256K bytes)
<b>[Outline]</b>	This command defines the specified NV bit image. <ul style="list-style-type: none"><li>• "n" denotes the number of bit images to be defined.</li><li>• xL and xH denote the horizontal size of one NV bit image as <math>(xL + xH \times 256) \times 8</math> dots.</li><li>• yL and yH denote the vertical size of one NV bit image as <math>(yL + yH \times 256) \times 8</math> dots.</li></ul>
<b>[Caution]</b>	<ul style="list-style-type: none"><li>• Because all the NV bit images previously defined by this command are deleted, it is not possible to redefine any one of the previously defined multiple data. All the data must be resent.</li><li>• From the execution of this command until the completion of the hardware reset, any mechanical operation such as opening the cover, initializing the printer head position, or using the paper-feed switch etc.</li><li>• The NV bit image refers to a bit image that is defined by the FS q command in the non-volatile memory and printed by the FS p command.</li><li>• When the STANDARD MODE is selected, this command is only valid when it is written at the head of a line.</li><li>• This command is invalid when PAGE MODE is selected.</li><li>• This command becomes valid after the 7 bytes of &lt;FS q n xL xH yL yH&gt; are processed as normal values.</li><li>• When data which exceeds the remaining capacity of the defined area is specified by xL, xH, yL, yH, outside-defined-area arguments will be processed.</li><li>• When outside-defined-area arguments are processed for the first bit image data group, this command becomes invalid.</li><li>• If outside-defined-area arguments are processed for the second or subsequent NV bit image data groups, the processing of this command is suspended, and a writing process into the non-volatile memory starts. At this time, the NV bit image being defined becomes invalid (Undefined), but the preceding NV bit images are valid.</li><li>• "d" denotes the definition data. Bits which correspond to dots to be printed are represented as "1", and those not to be printed as "0".</li><li>• The definition will start from NV bit image number 01H and n-number bit images will be defined in ascending order. Therefore, the first data group [xL xH yL yH d1... dk] becomes NV bit image number 01H, and the last data group [xL xH yL yH d1... dk] becomes NV bit image number 0nH. These numbers of NV bit images coincide with those specified with FS p.</li><li>• The definition data of one NV bit image consists of [xL xH yL yH d1... dk]. Therefore, when only one NV bit image is defined, <math>n = 1</math>; the data group [xL xH yL yH d1... dk] is manipulated once, and <math>([Data: (xL + xH \times 256) \times (yL + yH \times 256) \times 8] + [Header: 4])</math> bytes of non-volatile memory is used to store it</li></ul>

- The maximum definition area of this printer is 2M bits (256K bytes). Multiple NV bit images can be defined, but bit images of which total size (Bit image data + Header) exceeds 2M bits (256K bytes) can not be defined.
- The printer state will change to BUSY just before the writing operation into the non-volatile memory begins. Also, for a printer that have a dip switch [BUSY], the printer state will change to BUSY just before the writing operation begins regardless of the state of the dip switch.
- While this command is being executed, it is not possible to send ASB status or to detect the printer status even when the ASB function is selected.
- If this command is sent while a macro is still being defined, the definition process will be stopped and the execution of this command will start.
- NV bit images that are defined already are not initialized by using ESC @ command, or by resetting the printer or turning the power off.
- The command only executes definition of NV bit image, but not start printing. The printing of NV bit image will be executed by FS p.
- Because frequent writing in the non-volatile memory can destroy the memory, the writing command should be used less than 10 times a day.
- Just after the completion of the writing operation into the non-volatile memory, the printer hardware will be reset. Therefore, download characters, download bit images, and macro definition will be made undefined. The receiving buffer/printer buffer will be cleared, and each setting will go back to its default value. Then the status of dip switches will be checked once more.
- It may happen that the printer becomes BUSY during the process of writing data into the non-volatile memory in the execution of this command. When the printer becomes BUSY, it will stop receiving data. Therefore, sending data from the host (including real time command) is prohibited.

**[See Also]**

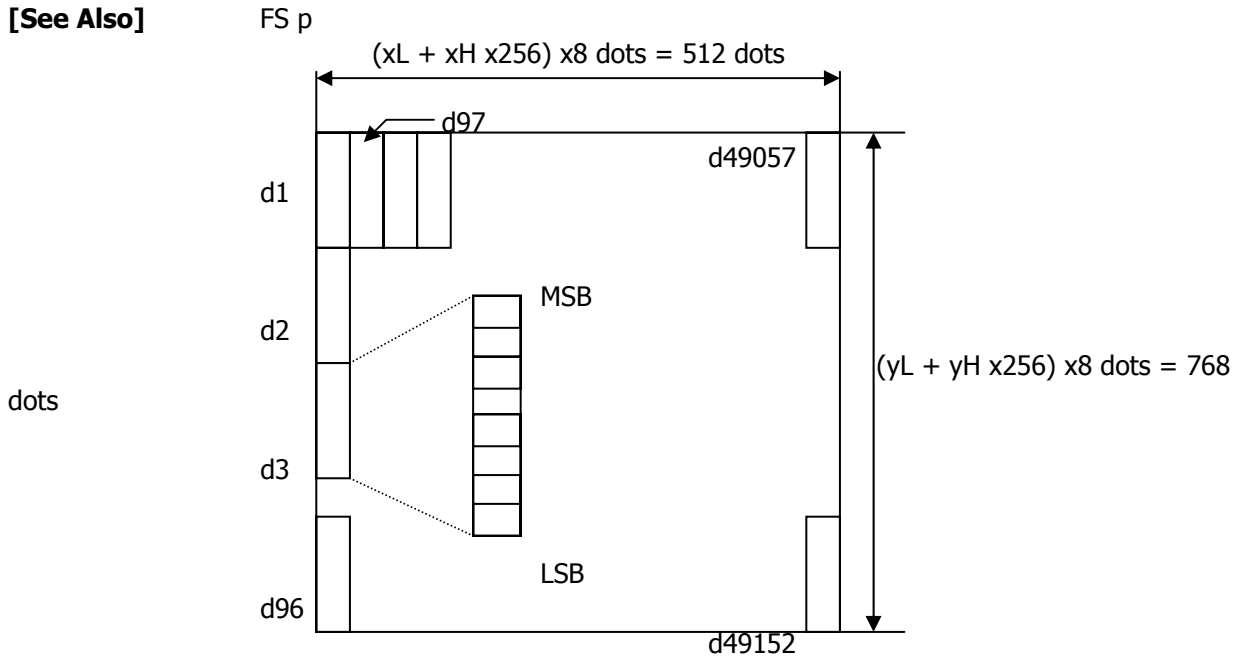

**[Example]**

When  $xL = 64$ ,  $xH = 0$ ,  $yL = 96$ ,  $yH = 0$

### 2.2.13 Black Mark Control Commands

#### **GS FF** (Valid Only at B.M Model)

---

<b>[Function]</b>	Printing and ejecting Black mark paper
<b>[Code]</b>	<1DH><0C>H
<b>[Outline]</b>	This command prints the data in the printer buffer and ejects Black mark paper.
<b>[Caution]</b>	Valid only if Black mark paper is selected.
<b>[See Also]</b>	FF, GS <

#### **GS <** (Valid Only at B.M Model)

---

<b>[Function]</b>	Initializing the printer mechanism
<b>[Code]</b>	<1D>H<3C>H
<b>[Outline]</b>	Performs initializing operation at Black mark similar to the initialization at power on.
<b>[Caution]</b>	<ul style="list-style-type: none"><li>• This command is valid only when B.M paper is chosen.</li><li>• Parameters configured by commands are not reset.</li></ul>

## **GS A m n (Valid Only at B.M Model)**

---

**[Function]** Correcting the leader position of Black mark paper

**[Code]** <1DH><41>H<m><n>

**[Range]**  $0 \leq m \leq 255$   
 $0 \leq n \leq 255$

**[Outline]** This command sets the leader position of Black mark paper in terms of correction value set for the default position.  
"m" denotes the correcting direction.  
• "m" is valid only for the lowest bit (m0).  
• Control by the lowest bit (m0) is shown as follows:

<b>m0</b>	<b>Correcting Direction</b>
0	Corrects the leader position in the forward direction
1	Corrects the leader position in the reverse direction

• "n" denotes the correction value in units of n/203 inch.

**[Caution]**

- This command is valid only when Black mark paper is chosen.
- This command is ignored except immediately after the execution of a Black mark positioning command (FF, GS FF, GS A, GS <) or immediately after leader positioning performed on a paper feed action with the FEED switch, power on, or cover closure.
- The maximum reverse correction span is 0.5 mm. Correction settings exceeding this value are truncated into the maximum value. The leader position may be deviated due to paper flexure. For reverse correction, exercise care so the leader position does not step out of the Black mark.
- For forward correction, set the correction span by taking into account the Black mark as the printable area changes before and after correction setting.
- In calculating a correction span, use the basic calculation pitch (y) for the vertical direction. The fractional part contained in the calculation result should be corrected in units of the mechanism's minimum pitch, with the remaining fractional part truncated.

**[See Also]** FF, GS



## GS C 0 m n

---

- [Function]** Setting the numbering print mode
- [Code]** <1D>H<43>H<30>H<m><n>
- [Range]**  $0 \leq m \leq 5$   
 $0 \leq n \leq 2$
- [Outline]** This command sets the numbering (serial number counter) print mode. "m" denotes the number of print columns.  
m = 0 Prints the columns indicated by numeral. In this case, "n" has no meaning.  
m = 1 to 5 Indicates the maximum number of columns to be printed. Prints the counter in "m" columns. "n" specifies a printing position within the printing columns.  
n = 0 Prints the data right justified. The blank columns are spaced.  
n = 1 Prints the data right justified. The blank columns are filled with "0".  
n = 2 Prints the data left justified. The right blank will become invalid.
- [Caution]** If either "m" or "n" has a value beyond their ranges, that setting will become invalid.
- [Default]** m = 0, n = 0
- [See Also]** GS C1, GS C2, GS c, GS C;

**[Sample Program]**

```
LPRINT CHR$(&H1D);"C0"; *CNT
LPRINT CHR$(0); CHR$(0);   FOR I=1 TO 5
GOUSAB *CNT                LPRINT CHR$(&H1D);"c";
LPRINT CHR$(&H1D);"C0";     NEXT I
LPRINT CHR$(1); CHR$(0);   LPRINT CHR$(&HA);
GOUSAB *CNT                RETURN
LPRINT CHR$(&H1D);"C0";
LPRINT CHR$(3); CHR$(0);
GOUSAB *CNT
LPRINT CHR$(&H1D);"C0";
LPRINT CHR$(3); CHR$(1);
GOUSAB *CNT
LPRINT CHR$(&H1D);"C0";
LPRINT CHR$(3); CHR$(2);
GOUSAB *CNT
END
```

**[Print Results]**

```
12345 ← Counts from 1 to 5 at m = 0 and n = 0.
67890 ← Counts from 6 to 10 at m = 1 and n = 0.
11 12 13 14 15 ← Counts from 11 to 15 at m = 3 and n = 0.
0160 170 180 19020 ← Counts from 16 to 20 at m = 3 and n = 1.
21 22 23 24 25 ← Counts from 21 to 25 at m = 3 and n = 2.
```

# GS C 1 n1 n2 n3 n4 n5 n6

- [Function]** Setting the numbering counter mode (A)
- [Code]** <1D>H<43>H<31>H<n1><n2><n3><n4><n5><n6>
- [Range]**  $0 \leq n1, n2, n3, n4, n5, n6 \leq 255$
- [Outline]** This command sets the numbering (serial number counter) mode.  
 n1 + n2 x256 (n1 = remainder, n2 = quotient): Counter default  
 n3 + n4 x256 (n3 = remainder, n4 = quotient): Counter final value  
 n5: Counter step value  
 n6: Identical counter print counter  
 (n1 + n2 x256) < (n3 + n4 x256): Count-up system  
 (n1 + n2 x256) > (n3 + n4 x256): Count-down system  
 (n1 + n2 x256) = (n3 + n4 x256) or n5 = 0 or n6 = 0: Counter stop
- [Default]** n1 + n2 x256 = 1  
 n3 + n4 x256 = 65535  
 n5 = 1  
 n6 = 1
- [See Also]** GS C0 , GS C2 , GS c , GS C ;

**[Sample Program]**

```
LPRINT CHR$(&H1D);"C0";          *CNT
LPRINT CHR$(3); CHR$(0);          FOR I=1 TO 5
LPRINT CHR$(&H1D);"C1";          LPRINT CHR$(&H1D);"c";
LPRINT CHR$(50); CHR$(0);        NEXT I
LPRINT CHR$(0); CHR$(0);          LPRINT CHR$(&HA);
LPRINT CHR$(5); CHR$(2);          RETURN
GOUSAB *CNT
LPRINT CHR$(&H1D);"C2";
LPRINT CHR$(5); CHR$(0); CHR$(10);
GOUSAB *CNT
END
```

**[Print Results]**

When printing the counter value by setting a count-down range = 0 to 50, step value = 5, repeat count = 2, and starting value = 50.

50 50 45 45 40 ←

5 0 50 45 40 ← When printing the counter value by setting a count-down range to 0 to 50, step value = 5, repeat count = 1, and starting value = 5, step cleared.

## **GS C 2 n1 n2**

---

<b>[Function]</b>	Setting the numbering counter
<b>[Code]</b>	<1D>H<43>H<32>H<n1><n2>
<b>[Range]</b>	$0 \leq n1 \leq 255$ $0 \leq n2 \leq 255$
<b>[Outline]</b>	This command sets the numbering (serial number counter) value. $n1 + n2 \times 256$ ( $n1 = \text{remainder}$ , $n2 = \text{quotient}$ ) becomes a counter value.
<b>[Caution]</b>	<ul style="list-style-type: none"><li>• If the counter is set with this command, a repeat count of the identical count will be cleared.</li><li>• If the counter value is beyond the range specified with the GS C1 or GS C; command, the counter will be initialized.</li></ul>
<b>[Default]</b>	Not defined.
<b>[See Also]</b>	GS C0, GS C1, GS c, GS C;
<b>[Sample Program]</b>	
<b>[Print Results]</b>	See the Sample Program and Print Results for the GS C1 command.

## **GS C ; n1 ; n2 ; n3 ; n4 ; n5 ;**

**[Function]** Setting the numbering counter mode (B)

**[Code]**

<1D>H<43>H<3B>H<n1><3B>H<n2><3B>H<n3><3B>H<n4><3B>H<n5><3B>H  
<n1>, <n2>, <n3>, <n4>, <n5> are character codes.

**[Range]**  $0 \leq n1, n2, n5 \leq 65535$   
 $0 \leq n3, n4 \leq 255$

**[Outline]** This command sets the numbering (serial number counter) mode and a counter value.  
n1: Counter default  
n2: Counter final value  
n3: Counter step value  
n4: Identical counter print count  
n5: Counter start value  
n1 < n2: Count-up system  
n1 > n2: Count-down system  
n1 = n2 or n3 = 0 or n4 = 0 : Counter stop

**[Caution]** is

- If the n5 counter start value is beyond the counter range specified with n1 and n2, it is assumed to be n1 = n5.
- If each value of n1 through n5 contains the character code other than "0" through "9", the printer will invalidate the data up to that parameter and handle the subsequent data as normal data.

**[Default]** n1 = 1  
n2 = 65535  
n3 = 1  
n4 = 1  
n5 = 1

**[See Also]** GS C0 , GS C1 , GS C2 , GS c

**[Sample Program]**

```
LPRINT CHR$(&H1D);"C0"; *CNT
LPRINT CHR$(3); CHR$(0); FOR I=1 TO 5
LPRINT CHR$(&H1D);"C"; LPRINT CHR$(&H1D);"c";
LPRINT "50;0;5;2;50"; NEXT I
GOUSAB *CNT LPRINT CHR$(&HA);
LPRINT CHR$(&H1D);"C"; RETURN
LPRINT "50;0;5;2;5";
GOUSAB *CNT
END
```

**[Print Results]**

50 50 45 45 40 40 ← When setting a count-down range = 0 to 50, step value = 5,  
repeat count = 2, and start value = 50 to print a counter value.  
5 5 0 0 50 50 ← When setting a count-down range = 0 to 50, step value = 5,  
repeat count = 1, and start value = 5 to print a counter value.

## **GS c**


---

- [Function]** Print the counter
- [Code]** <1D>H<63>H
- [Outline]** This command prints the serial number counter data.  
After setting the current counter value in the print buffer as the print data (character string), it increments or decrements the counter according to the set count mode.
- [Caution]**
- The format used in setting the value to the print buffer depends on the GS C0 command.
  - The count mode is set by the GS C1 or GS C; command. When execution of GS c command results in excess of the counter final value, the counting returns to the final value of the counter.
- [See Also]** GS C0 , GS C1 , GS C2 , GS C ;
- [Sample Program]**
- [Print Results]** See the Sample Program and Print Results of the commands related to the counter.

## GS I n1L n1H n2L n2H

---

<b>[Function]</b>	Setting the Black mark length
<b>[Code]</b>	<1D>H<6C>H<n1L><n1H><n2L><n2H>
<b>[Range]</b>	$0 \leq n1L \leq 255$ ( $24 \leq n1L + n1H \times 256 \leq 360$ ) $0 \leq n1H \leq 1$ $8 \leq n2L \leq 30$ $n2H = 0$
<b>[Outline]</b>	Define the specifications (length) of the Black mark used. n1: Sets the Black mark length n2: Sets the Black mark gap length n1 and n2 are specified units of millimeters. Divide the maximum Black mark length by 256 with the quotient designated as n1L and the remainder as n2H. Accordingly, the Black mark length available for setting will be $n1L + n2H \times 256$ .
<b>[Caution]</b>	<ul style="list-style-type: none"><li>• If the specified length is outside of Black mark specifications, the default length is set.</li><li>• 360 mm is the maximum Black mark length allowed to define and 24 mm is the minimum.</li><li>• 30 mm is the maximum allowable Black mark gap length to define and 8 mm is the minimum.</li></ul>
<b>[Default]</b>	The following default values are set when memory switch SW4-1 is set to ON. n1L = 25 n1H = 0 n2L = 8 n2H = 0

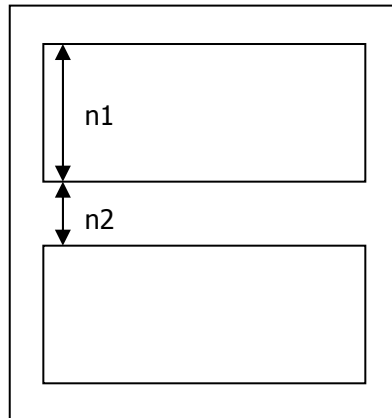

## 2.2.14 Printer Function Setting Commands

### **GS ( D pL pH m [a1 b1] ... [ak bk]**

**[Function]** Enabling or disabling real-time command

**[Code]** <1d>H<28>H<44>pL pH m [a1 b1] ... [ak bk]

**[Range]**  $3 \leq (pL + pH \times 256) \leq 65535$   
 $m = 20$   
 $a = 1$   
 $b = 0, 1, 48, 49$

**[Default]**

a	Kind of Real-time	Command Default
1	DLE DC4 fn m t (fn = 1): Real-time output of set pulse	Valid

**[Outline]** Enables/disables the following real-time command processing.

a	b	Function
1	0, 48	Does not process DLE DC4 fn m t (fn = 1). (Invalid)
	1, 49	Processes DLE DC4 fn m t (fn = 1). (Valid)

- pL and pH sets the number of bytes on and after m in (pL + pH x256).
- "a" sets the kind of real-time command.
- "b" sets Valid or Invalid.
- When data raw that meets the code configuring real-time command in the image data, it is recommended that the real-time command be set to invalid by this command.

**[Default]**

a	Type of Real-time Command	Initial Value
1	DLE DC4 fn m t (fn=1): Real-time output of pulse specified	Valid

## GS ( E pL pH fn [··· ]

**[Function]** Printer function setting command

**[Outline]** Printer function setting command is a command to change the function of the printer stored on the non-volatile memory and executes the function set by the value of "fn".

Function No. (fn)	Function
1	Transfers to printer function setting mode. (Note)
2	Terminates printer function setting mode. (Note)
3	Sets memory switch value. (Note)
4	Sends memory switch value set.
5	Sets customize value. (Note)
6	Sends customized value set.
7	Copies user-defined page.
8	Defines the data in column format to the character code page of work area.
9	Defines the data in raster format to the character code page of work area.
10	Erases the data of character code page of work area.
11	Sets the communication condition of serial interface. (Note)
12	Sends the communication condition of serial interface set.
255	Sets all contents set in printer function setting mode to the state at the time of shipment.

- pL, pH set the number of bytes following "fn" to (pL + pH ·256).
- At the end of printer function setting mode (Function 2), resetting is executed. Then the input buffer is cleared to return various kinds of setting to the state at the time of power on.
- The set value can be confirmed without transferring to printer function setting mode by functions 4, 6, and 12.
- Other functions do not operate without transferring to printer function setting mode.

**[Caution]**

- This command allows writing to non-volatile memory. Therefore, using this command frequently may result in breakage of memory. Use this command appropriately [10 times max./day].
- During execution of this command, the printer is in Busy state and stops receiving operation. Therefore, data transmission from the host is prohibited.



## fn = 1: Function 1 Transferring to Printer Function Setting Mode GS ( E pL pH fn d1 d2

---

**[Code]** <1d>H<28>H<45>H pL pH fn d1 d2

**[Range]** (pL + pH · 256) = 3 (pL = 3, pH = 0)  
fn = 1  
d1 = 73 ("I")  
d2 = 78 ("N")

**[Outline]** Transfers to printer function setting mode and sends the report of mode transfer.

	Hex.	No. of Data
Header	37H	1
ID	20H	1
NULL	00H	1

## fn = 2: Function 2 End of Printer Function Setting Mode GS (E pL pH fn d1 d2 d3

---

**[Code]** <1d>H<28>H<45>H pL pH fn d1 d2 d3

**[Range]** (pL + pH x256) = 4 (pL = 4, pH = 0)  
fn = 2  
d1 = 79 ("O")  
d2 = 85 ("U")  
d3 = 84 ("T")

**[Outline]**

- Terminates printer function setting mode and executes resetting.
- Clears input buffer and print buffer and restores various kinds of setting to the state at power on.
- Operates only in printer function setting mode.

## fn = 3: Function 3 Setting Memory Switch Value

**GS ( E pL pH fn [a1 b18 ... b11] ... [ak bk8 ... bk1]**

**[Code]** <1d>H<28>H<45>H pL pH fn[a1 b18...b11]...[ak bk8...bk1]

**[Range]**  $10 \leq (pL + pH \times 256) \leq 65535$   
 $fn = 3$   
 $a = 1, 2, 3, 4, 5$   
 $b = 48, 49, 50$

**[Outline]** • Changes the memory switch set in a to the value set in "b".

<b>b</b>	<b>Function</b>
48	Sets corresponding bit to OFF.
49	Sets corresponding bit to ON.
50	Does not change corresponding bit.

• Setting memory with 1 (a = 1)

<b>n</b>	<b>b (Set Value)</b>	<b>Function</b>
1	48 (Default)	Reports the power on.
	49	Does not report power on.
2	48 (Default)	Sets input buffer capacity to 4K bytes.
	49	Sets input buffer capacity to 48 bytes. (Note)
3	48 (Default)	Sets input buffer full and offline to be Busy.
	49	Sets to be busy with input buffer full.
4	48 (Default)	At the occurrence of receiving error, replaces the data with "?".
	49	At the occurrence of receiving error, ignores the data.
5	48 (Default)	Disables CR (ODH).
	49	Enables CR (ODH).
6	48 (Default)	Reserved
7	48 (Default)	Does not reset at serial I/F pin 6.
	49	Resets at serial I/F pin 6.
8	48 (Default)	Does not reset at serial I/F pin 25.
	49	Resets sat serial I/F pin 25.

(Note) Differs with the number of columns (as much as font A full columns).

- Setting memory switch 2 (a = 2)

<b>n</b>	<b>b (Set Value)</b>	<b>Function</b>
1	49 (Default)	Reserved
2	48	Disables auto cutter.
	49 (Default)	Enables auto cutter.
3	48 (Default)	Enables stored printing.
	49	Disables stored printing.
4	48 (Default)	Immediately after digit reaches full, line-feed is taken.
	49	Immediately after digit reaches full, data wait is taken.
5	48 (Default)	After cover close and PE recovery, prints as it is.
	49	After cover close and PE recovery, prints from the beginning using PAGE MODE, barcode, image, double-height printing, etc. as a unit.
6	48 (Default)	Reserved
7	48 (Default)	Reserved
8	48 (Default)	Enables PNE.
	49	Disables PNE.

- Setting memory switch 3 (a = 3)

<b>n</b>	<b>b (Set Value)</b>	<b>Function</b>
1	48 (Default)	After clearing cutter error, can be restored by Feed SW.
	49	After clearing cutter error, cannot be restored by Feed SW.
2	48 (Default)	Reserved
3	48 (Default)	Resets with parallel pin 31.
	49	Does not reset with parallel pin 31.
4	48 (Default)	Reserved
5	48 (Default)	Reserved
6	48 (Default)	Undefined
7	48	Sets CBM1000-noncompatible mode.
	49 (Default)	Sets CBM11000-compatible mode.
8	48 (Default)	Sets cover open error during printing to be auto recovery error.
	49	Sets cover open error during printing to be recoverable error.

- Setting memory switch 4 (a = 4)

<b>n</b>	<b>b (Set Value)</b>	<b>Function</b>
1	48 (Default)	At the selection of Black mark paper, disables auto end-measurement.
	49	At the selection of Black mark paper, enables auto end-measurement.
2	48 (Default)	Reserve
3	48	Paper heading cut disabled.
	49 (Default)	Paper heading cut enabled.
4	48 (Default)	Undefined
5	48 (Default)	Undefined
6	48 (Default)	Undefined
7	48 (Default)	Undefined
8	48	Forcible partial cut disabled.
	49 (Default)	Forcible partial cut enabled (full but by command: enabled).

\* Memory switches 4-1, -2 are valid only at Black mark model.

- Setting memory switch 5 (a = 5)

<b>n</b>	<b>B (Set Value)</b>	<b>Function</b>
1	48 (Default)	Buzzer sound enabled
	49	Buzzer sound disabled
2	48 (Default)	Basic calculation pitch (180 dpi / 360 dpi)
	49	Basic calculation pitch (203 dpi / 406 dpi)
3	48	USB mode virtual serial
	49 (Default)	USB mode printer class
4	48 (Default)	Reserve
5	48 (Default)	Undefined
6	48 (Default)	Undefined
7	48 (Default)	Undefined
8	48 (Default)	Undefined

## fn = 4: Function 4 Sending the Set Memory Switch Value

### GS ( E pL pH fn a

---

**[Code]** <1d>H<28>H<45>H pL pH fn a

**[Range]** (pL + pH x256) = 2  
 fn = 4  
 a = 1, 2, 3, 4, 5

**[Outline]** • Sends the content of memory switch set in "a".

	<b>Hex.</b>	<b>No. of Data</b>
Header	37H	1
ID	21H	1
Data	30H or 31H	8
NULL	00H	1

• Sends the set value of data in 8-byte data raw in order of bits 8, 7, 6, ....  
 OFF: 30H ("0")  
 ON : 31H ("1")

## fn = 5: Function 5 Setting Customized Value

### GS ( E pL pH fn [a1 n1L n1H]...[ak nkL nkH]

**[Code]** <1d>H<28>H<45>H pL pH fn [a1 n1L n1H]...[ak nkL nkH]

**[Range]**  $4 \leq (pL + pH \times 256) \leq 65535$   
 $fn = 5$   
 $1 \leq a \leq 3$  a = 5, 6, 97, 116, 201, 202  
 $1 \leq (nL + nH \times 256) \leq 65535$

**[Default]** Described in the processing table for "a".

**[Outline]** • Sets the customized value set in "a" to  $(nL + nH \times 256)$ .

a	Function
1	Specifies user NV memory capacity.
2	Specifies the memory capacity of NV graphics.
3	Selects paper width.
5	Selects printing density.
6	Selects printing speed.
116	Selects printing color.
201	Sets ACK output position (only parallel I/F).
202	Selects input buffer full Busy output/cancel timing (idle capacity).

• a = 1: Sets the user NV memory capacity to the size specified by  $(nL + nH \times 256)$ .

$(nL + nH \times 256)$	Memory Capacity
1 (Default)	1K bytes
2	64K bytes
3	128K bytes
4	192K bytes

• a = 2: Sets NV graphic memory capacity to the size specified by  $(nL + nH \times 256)$ .

$(nL + nH \times 256)$	Memory Capacity
1	None
2	64K bytes
3	128K bytes
4	192K bytes
5	256K bytes
6	320K bytes
7 (Default)	384K bytes

- a = 3: Sets paper width to the size specified by (nL + nH x256).

<b>(nL + nH x256)</b>	<b>Paper Width</b>
1	58mm(360dot)
2	58mm(384dot)
3	58mm(432dot)
4	58mm(432dot)
5	58mm(436dot)
6	80mm(512dot)
7 (Default)	80mm(576dot)
8	82.5mm(640dot)

- a = 5: Sets printing density to the level specified by (nL + nH x256).

<b>(nL + nH x256)</b>	<b>Printing Density</b>
65530	70%
65531	75%
65532	80%
65533	85%
65534	90%
65535	95%
0 (Default)	100%
1	105%
2	110%
3	115%
4	120%
5	125%
6	130%
7	135%
8	140%

- a = 6: Sets printing speed to the value specified by (nL + nH x256).

<b>(nL + nH x256)</b>	<b>Printing Speed</b>
1	Printing speed level 1 (84%)
2	Printing speed level 2 (86%)
3	Printing speed level 3 (88%)
4	Printing speed level 4 (90%)
5	Printing speed level 5 (92%)
6	Printing speed level 6 (94%)
7	Printing speed level 7 (96%)
8	Printing speed level 8 (98%)
9 (Default)	Printing speed level 9 (100%)

- a = 116: Sets the paper specified by (nL + nH x256).

<b>(nL + nH x256)</b>	<b>Paper</b>
1 (Default)	Specified single color paper.
257	Recommended 2-color paper5

- a = 201: Outputs ACK to the position specified by (nL + nH x256).

<b>(nL + nH x256)</b>	<b>ACK Output Position</b>
1 (Default)	ACK-in-Busy
2	ACK-while-Busy
3	ACK-after-Busy

- a = 202: Controls input buffer full Busy with the value selected by (nL + nH x256) and controls Busy with output/cancel timing (remaining capacity).

<b>(nL+nH x256)</b>	<b>When Input Buffer Capacity "Small" is Set</b>		<b>When Input Buffer Capacity 4K Bytes (Large) is Set</b>	
	<b>Output</b>	<b>Cancel</b>	<b>Output</b>	<b>Cancel</b>
1	16	26	128	256
2	16	40	128	512
3	30	50	72	256
4	30	60	72	512

- XON/XOFF is also output by the establishment of conditions.
- Ignores the data received when input buffer idle capacity is 0.
- This function operates only in printer function setting mode.
- The value changed by this command is enabled by the following.
- Execution of function 2 (fn = 2: End of printer function setting mode) (Recommended)
- Reentering power supply.
- Hardware resetting by reset terminal



## fn = 6: Function 6 Sending the Set Customized Value GS ( E pL pH fn a

[Code] <1d>H<28>H<45>H pL pH fn a

[Range] (pL + pH x256) = 2 : (pL = 2, pH = 0)  
fn = 6  
1 ≤ a ≤ 3, a = 5, 6, 116, 201, 202

[Outline] • Sends the set value of customized value set by "a".

	Hex.	No. of Data
Header	37H	1
ID	27H	1
Customized value No.	30H ~ 39H	1 ~ 3
Separation number	1FH	1
Customized value	30H ~ 39H	1 ~ 5
NULL	00H	1

• Configuration of customized value No.

a	Sending Data		
	1st Byte	2nd Byte	3rd Byte
1	49 ("1")	—	—
2	50 ("2")	—	—
3	51 ("3")	—	—
5	53 ("5")	—	—
6	54 ("6")	—	—
116	49 ("1")	49 ("1")	54 ("6")
201	50 ("2")	48 ("0")	49 ("1")
202	50 ("2")	48 ("0")	50 ("2")

• a = 1: When user NV memory capacity is specified

Setting Status		Sending Data				
Stored Value	Memory Capacity	1st Byte	2nd Byte	3rd Byte	4th Byte	5th Byte
1	1K bytes	49 ("1")	—	—	—	—
2	64K bytes	50 ("2")	—	—	—	—
3	128K bytes	51 ("3")	—	—	—	—
4	192K bytes	52 ("4")	—	—	—	—

- a = 2: When NV graphics memory capacity is specified

Setting Status		Sending Data				
Stored Value	Memory Capacity	1st Byte	2nd Byte	3rd Byte	4th Byte	5th Byte
1	None	49 ("1")	—	—	—	—
2	64K bytes	50 ("2")	—	—	—	—
3	128K bytes	51 ("3")	—	—	—	—
4	192K bytes	52 ("4")	—	—	—	—
5	256K bytes	53 ("5")	—	—	—	—
6	320K bytes	54 ("6")	—	—	—	—
7	384K bytes	55 ("7")	—	—	—	—

- a = 3: When paper width is specified

Setting Status		Sending Data				
Stored Value	Power Width	1st Byte	2nd Byte	3rd Byte	4th Byte	5th Byte
1	58mm	49 ("1")	—	—	—	—
2	58mm	50 ("2")	—	—	—	—
3	58mm	51 ("3")	—	—	—	—
4	58/60mm	52 ("4")	—	—	—	—
5	60mm	53 ("5")	—	—	—	—
6	80mm	54 ("6")	—	—	—	—
7	80mm	55 ("7")	—	—	—	—
8	82.5mm	56 ("8")	—	—	—	—

- a = 5: When print density is specified

Setting Status		Sending Data				
Stored Value	Print Density	1st Byte	2nd Byte	3rd Byte	4th Byte	5th Byte
65530	70%	54 ("6")	53 ("5")	53 ("5")	51 ("3")	48 ("0")
65531	75%	54 ("6")	53 ("5")	53 ("5")	51 ("3")	49 ("1")
65532	80%	54 ("6")	53 ("5")	53 ("5")	51 ("3")	50 ("2")
65533	85%	54 ("6")	53 ("5")	53 ("5")	51 ("3")	51 ("3")
65534	90%	54 ("6")	53 ("5")	53 ("5")	51 ("3")	52 ("4")
65535	95%	54 ("6")	53 ("5")	53 ("5")	51 ("3")	53 ("5")
0	Basic density	48 ("0")	—	—	—	—
1	105%	49 ("1")	—	—	—	—
2	110%	50 ("2")	—	—	—	—
3	115%	51 ("3")	—	—	—	—
4	120%	52 ("4")	—	—	—	—
5	125%	53 ("5")	—	—	—	—
6	130%	54 ("6")	—	—	—	—
7	135%	55 ("7")	—	—	—	—
8	140%	56 ("8")	—	—	—	—

- a = 6: When printing speed is specified

Setting Status		Sending Data				
Stored Value	Print Density	1st Byte	2nd Byte	3rd Byte	4th Byte	5th Byte
1	Speed level 1	49 ("1")	—	—	—	—
2	Speed level 2	50 ("2")	—	—	—	—
3	Speed level 3	51 ("3")	—	—	—	—
4	Speed level 4	52 ("4")	—	—	—	—
5	Speed level 5	53 ("5")	—	—	—	—
6	Speed level 6	54 ("6")	—	—	—	—
7	Speed level 7	55 ("7")	—	—	—	—
8	Speed level 8	56 ("8")	—	—	—	—
9	Speed level 9	57 ("9")	—	—	—	—

- a = 116: When kind of paper is specified

Setting Status		Sending Data				
Stored Value	Print Control	1st Byte	2nd Byte	3rd Byte	4th Byte	5th Byte
1	Single-color paper	49 ("1")	—	—	—	—
2	2-color paper	50 ("2")	—	—	—	—

- a = 201: When ACK output position is specified

Setting Status		Sending Data				
Stored Value	ACK Output Position	1st Byte	2 <sup>nd</sup> Byte	3rd Byte	4th Byte	5th Byte
1	ACK-in-Busy	49 ("1")	—	—	—	—
2	ACK-while-Busy	50 ("2")	—	—	—	—
3	ACK-after- Busy	51 ("3")	—	—	—	—

- a = 202: Input buffer full Busy output/cancel timing

In case of MSW1-2 ON (Buffer size is 45 bytes)

Setting Status		Sending Data				
Stored Value	BUSY Output/Cancel	1st Byte	2nd Byte	3rd Byte	4th Byte	5th Byte
1	16/26	49 ("1")	—	—	—	—
2	16/36	50 ("2")	—	—	—	—
3	8/26	51 ("3")	—	—	—	—
4	8/36	52 ("4")	—	—	—	—

In case of MSW1-2 OFF (Buffer size is 4K bytes)

Setting Status		Sending Data				
Stored Value	BUSY Output/Cancel	1st Byte	2nd Byte	3rd Byte	4th Byte	5th Byte
1	128/256	49 ("1")	—	—	—	—
2	128/512	50 ("2")	—	—	—	—
3	72/256	51 ("3")	—	—	—	—
4	72/512	52 ("4")	—	—	—	—

## fn = 7: Function 7 Copying User-defined Page GS ( E pL pH fn a d1 d2

---

**[Code]** <1d>H<28>H<45>H pL pH fn a d1 d2

**[Range]** (pL + pH x256) = 4 : (pL = 4, pH = 0)  
fn = 7  
a = 0, 1, 2, 48, 49, 50

**[Outline]** • Copies the data of user-defined code page in the font specified by "a".

a	Font Type
0, 48	Font A: 12 (horizontal) x24 (vertical)
1, 49	Font B: 9 (horizontal) x24 (vertical)
2, 50	Font C: 8 (horizontal) x16 (vertical)

• Configuration of customized value No.

d1	d2	Function
31	30	Loads the character code page data specified by "a" in storage area to work area.
30	31	Saves the character code page data in work area to the storage area of the font specified by "a".

- Work area: Area where data is initialized by power OFF or resetting (initialize). Operation is made in accordance with the data set in this area.
- Storage area: Area where data is not initialized by power OFF or resetting (initialize).
- User-defined code page: Page 255 (ESC t 255)
- This function operates only in printer function setting mode.


**fn = 8: Function 8 Defining Data by the Column Format to Character Code**  
**Page of Work Area**

**GS ( E pL pH fn y c1 c2[x d1...d(y × x)]k**

**[Code]** <1d>H<28>H<45>H pL pH fn y c1 c2 [x d1..d(y×x)]k

**[Range]**  $5 \leq (pL + pH \times 256) \leq 65535$   
 $fn = 8$   
 $y = 2$  (At selection of font C)  
 $y = 3$  (At selection of other than font C)  
 $128 \leq c1 \leq c2 \leq 255$   
 $0 \leq x \leq 12$  (At selection of font A)  
 $0 \leq x \leq 9$  (At selection of font B)  
 $0 \leq x \leq 8$  (At selection of font C)  
 $0 \leq d \leq 255$   
 $k = c2 - c1 + 1$

**[Outline]** Defines the data in column format in units of character on the code page in RAM.  
 Operates only in printer function setting mode.

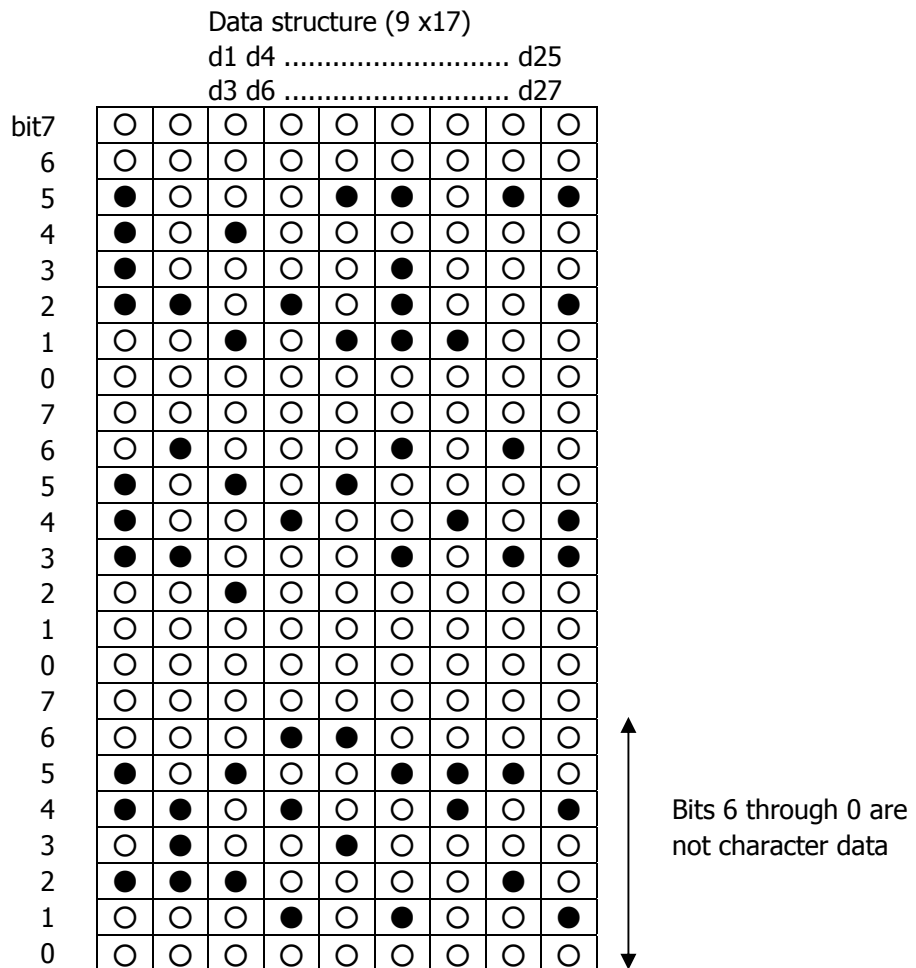


**fn = 9: Function 9 Defining Data in the Raster Format to the Character Code Page of Work Area**

**GS ( E pL pH fn x c1 c2[y d1...d(y × x)]k**

**[Code]** <1d>H<28>H<45>H pL pH fn x c1 c2 [y d1...d(y×x)]k

**[Range]** 5 ≤ (pL + pH × 256) ≤ 65535  
 fn = 9  
 x = 1 (At selection of font C) , x = 2 (At selection of other than font C)  
 128 ≤ c1 ≤ c2 ≤ 255  
 0 ≤ y ≤ 24 (At selection of font A)  
 0 ≤ y ≤ 17 (At selection of font B)  
 0 ≤ y ≤ 16 (At selection of font C)  
 0 ≤ d ≤ 255  
 k = c2 - c1 + 1

**[Outline]** Defines the data in raster format in units of character on the character code page in work area.  
 Operates only in printer function setting mode.

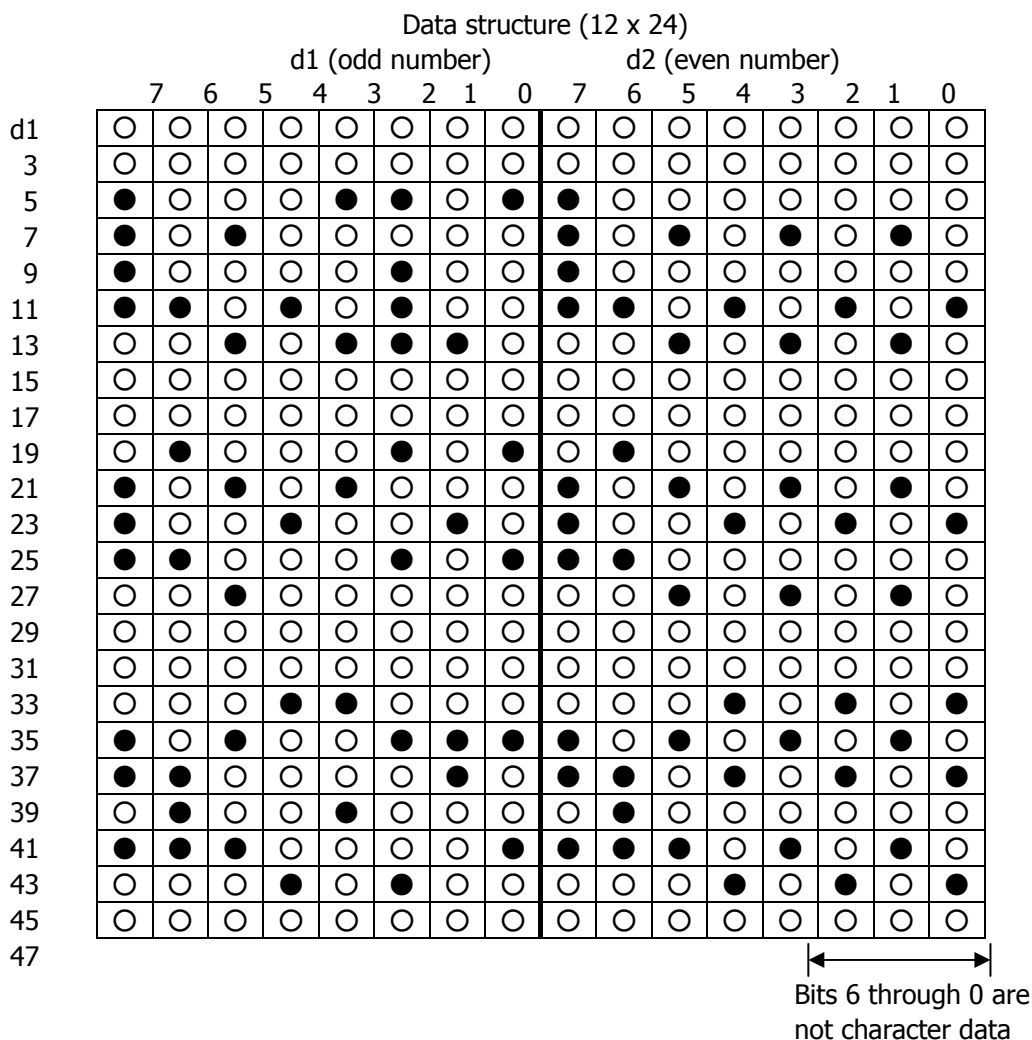

**fn = 10: Function 10 Erasing Data of Character Code Page Data in Work Area**  
**GS ( E pL pH fn c1 c2**

---

**[Code]** <1d>H<28>H<45>H pL pH fn c1 c2

**[Range]** (pL + pH x256) = 3  
fn = 10  
128 ≤ c1 ≤ c2 ≤ 255

**[Outline]** Erases (set to space) data in units of character on the character code page in work area.  
Operates only in printer function setting mode.

# fn = 11: Function 11 Setting Communication Conditions GS ( E pL pH fn a d1...cdk

**[Code]** <1d>H<28>H<45>H pL pH fn a d1..dk

**[Range]**  $3 \leq (pL + pH \times 256) \leq 65535$  ( $0 \leq pL \leq 255$ ,  $0 \leq pH \leq 255$ )  
 fn = 11  
 $1 \leq a \leq 4, 119, 120$  (Not changed in other than specified range)  
 $48 \leq d \leq 57$  (Not changed in other than specified range)  
 $1 \leq k \leq 6$

**[Outline]** Sets the communication conditions of serial interface specified by "a".

- a = 1: Setting baud rate

Baud Rate	d1	d2	d3	d4	d5	d6
2400	50 ("2")	52 ("4")	48 ("0")	48 ("0")	—	—
4800	52 ("4")	56 ("8")	48 ("0")	48 ("0")	—	—
9600	57 ("9")	54 ("6")	48 ("0")	48 ("0")	—	—
19200(Default)	49 ("1")	57 ("9")	50 ("2")	48 ("0")	48 ("0")	—
38400	51 ("3")	56 ("8")	52 ("4")	48 ("0")	48 ("0")	—
57600	53 ("5")	55 ("7")	54 ("6")	48 ("0")	48 ("0")	—
115200	49 ("1")	49 ("1")	53 ("5")	50 ("2")	48 ("0")	48 ("0")

- a = 2: Setting to specified parity

d1	Parity Setting
48 (Default)	No parity
49	Odd parity
50	Even parity

- a = 3: Setting to specified flow control

d1	Flow Control
48 (Default)	DSR/DTR
49	XON/XOFF

- a = 4: Setting to specified data length

d1	Setting Data Length
55	7-bit length
56 (Default)	8-bit length

- a = 119: Setting to specified DMA control

d1	Setting Data Length
48 (Default)	Valid
49	Invalid

- a = 120: Setting to specified VCom flow control

d1	Parity Setting
48 (Default)	PC setting
49	DTR/DSR
50	XON/XOFF

- Operates only in printer function setting mode.
- Which of dip SW or memory SW is used at initialization depends on "Selecting communication condition setting" of dip SW1-1.





## fn = 12: Function 12 Sending the Set Communication Conditions GS ( E pL pH fn a

[Code] <1d>H<28>H<45>H pL pH fn a

[Range] (pL + pH x256) = 2 (pL = 2, pH = 0)  
fn = 12  
1 ≤ a ≤ 4, 119, 120 (Does not send in other than specified range)

[Outline] Sends communication conditions of serial interface specified by "a".

	Hex.	No. of Data
Header	37H	1
ID	33H	1
Kind of communication conditions (a)	31H (^1") ~ 34H (^4")	1
Separation number	1FH	1
Set value	30H ~ 39H	1 ~ 6
NULL	00H	1

### Set value

- a = 1: At specification of baud rate

Baud Rate	d1	d2	d3	d4	d5	d6
2400	50 (^2")	52 (^4")	48 (^0")	48 (^0")	—	—
4800	52 (^4")	56 (^8")	48 (^0")	48 (^0")	—	—
9600	57 (^9")	54 (^6")	48 (^0")	48 (^0")	—	—
19200	49 (^1")	57 (^9")	50 (^2")	48 (^0")	48 (^0")	—
38400	51 (^3")	56 (^8")	52 (^4")	48 (^0")	48 (^0")	—
57600	53 (^5")	55 (^7")	54 (^6")	48 (^0")	48 (^0")	—
115200	49 (^1")	49 (^1")	53 (^5")	50 (^2")	48 (^0")	48 (^0")

- a = 2: At specification of parity

d1	Parity Setting
48	No parity
49	Odd parity
50	Even parity

- a = 3: At specification of flow control

d1	Flow Control
48	DSR/DTR
49	XON/XOFF

- a = 4: At specification of data length

d1	Setting Data Length
48	7-bit length
49	8-bit length

- a = 119: At specification of DMA control

<b>d1</b>	<b>Setting Data Length</b>
48	Valid
49	Invalid

- a = 120: At specification of VCom flow control

<b>d1</b>	<b>Parity Setting</b>
48	PC setting
49	DTR/DSR
50	XON/XOFF

## **fn = 255: Function 255 Setting All Contents Set by Printer Function Setting Mode to the State at Shipment**

### **GS ( E pL pH fn a**

**[Code]** <1d>H<28>H<45>H pL pH fn a

**[Range]** (pL + pH x256) = 2  
fn = 255  
a = 3, 5, 7, 11, 255

**[Outline]** Restores various kinds of function set by printer function setting mode to the setting at the time of shipment (initial value described in User's Manual).

<b>a</b>	<b>Function</b>
3	Memory switch
5	Customized value
7	Character code
11	Communication conditions of serial interface
255	Sets all contents set in printer function setting mode to the state at the time of shipment.

## GS ( K pL pH fn m

---

**[Function]** Selecting print control method

**[Outline]** Executes the setting related to the print control specified by the value of "fn".

Function No. (fn)	Function
48	Sets print control mode.
49	Sets printing density.
50	Sets printing speed.

## fn = 48: Function 48 Setting Print Control Mode

### GS ( K pL pH fn m

---

**[Code]** <1d>H<28>H<4B>H<pL><pH><fn><m>

**[Range]**  $(pL + pH \times 256) = 2$  ( $pL = 2, pH = 0$ )  
fn = 48  
 $0 \leq m \leq 4$   
 $48 \leq m \leq 52$

**[Outline]** Sets print control mode.

m	Print Control Mode
0, 48	Selects the print control mode at power on.
1, 49	Sets print control mode 1 (standard)
2, 50	Sets print control mode 2 (fence bar code)
3, 51	Sets print control mode 3 (ladder bar code)
4, 52	Sets print control mode 4 (2-dimensional bar code)

**[Default]** m = 1

## fn = 49: Function 49 Setting Printing Density

### GS ( K pL pH fn m

---

**[Code]** <1d>H<28>H<4B>H pL pH fn m

**[Range]** (pL + pH x256) = 2 : (pL = 2, pH = 0)  
fn = 49  
0 ≤ m ≤ 8, 250 ≤ m ≤ 255

**[Default]** m = 0 (Customized value setting value)

**[Outline]** Sets printing density.

<b>m</b>	<b>Printing Density</b>
250	Selects density level -6 (70%)
251	Selects density level -5 (75%)
252	Selects density level -4 (80%)
253	Selects density level -3 (85%)
254	Selects density level -2 (90%)
255	Selects density level -1 (95%)
0	Selects standard density (100%)
1	Selects density level + 1 (105%)
2	Selects density level + 2 (110%)
3	Selects density level + 3 (115%)
4	Selects density level + 4 (120%)
5	Selects density level + 5 (125%)
6	Selects density level + 6 (130%)
7	Selects density level + 7 (135%)
8	Selects density level + 8 (140%)

## fn = 50: Function 50 Setting Printing Speed

### GS ( K pL pH fn m

---

**[Code]** <1d>H<28>H<4B>H pL pH fn m

**[Range]** (pL + pH x256) = 2 : (pL = 2, pH = 0)  
fn = 50  
0 ≤ m ≤ 9, 48 ≤ m ≤ 57

**[Default]** m = 0 (Customized value setting)

**[Outline]** Sets printing speed.

<b>m</b>	<b>Printing Speed</b>
0, 48	Selects print control mode at power on.
1, 49	Selects printing speed level 1.
2, 50	Selects printing speed level 2.
3, 51	Selects printing speed level 3.
4, 52	Selects printing speed level 4.
5, 53	Selects printing speed level 5.
6, 54	Selects printing speed level 6.
7, 55	Selects printing speed level 7.
8, 56	Selects printing speed level 8.
9, 57	Selects printing speed level 9.

## GS ( M pL pH fn m

**[Function]** Customizing the printer

**[Outline]** Executes processing related to escape/recovery of the value set in the work area or the data defined by various kinds of command.

fn	Function
1, 49	Copies the set value stored in work area to the storage area.
2, 50	Copies the set value stored in storage area to the work area.
3, 51	Specifies the auto loading function of the set value at initialization to be valid or invalid.

- Work area:  
Area where data is initialized by power OFF of resetting (initialize). Operation is made in accordance with the data set in this area.
- Storage area:  
Area where data is not initialized by power OFF or resetting (initialize).

### Commands for this function

Command Type	Command
Status relations	ESC c3, GS a
Macro registration	GS :
Character type	ESC M, ESC R, ESC t
Font attribute	ESC !, ESC -, ESC E, ESC G, ESC V, ESC {, GS !, GS B, GS b, GS (N
Line feed amount, character space	ESC SP, ESC 2, ESC 3
Barcode	GS H, GS f, GS h, GS w
2-dimensional code	GS ( k <fn65~70>
Print position	ESC D, ESC T, ESC a, GS L, GS W
Kanji control relations	FS !, FS &, FS (A, FS -n, FS (n, FS S, FS W
Other	ESC c4, ESC c5, GS (D, GS P

**fn = 1, 49: Function 1 : Copies the set value stored in work area to the storage area**

**GS ( M pL pH fn m**

---

**[Code]** <1d>H<28>H<4D>H pL pH fn m

**[Range]** (pL + pH x256) = 2 : (pL = 2, pH = 0)  
 fn = 1, 49  
 m = 1, 49

**[Outline]** Copies the set value stored in work area to the storage area.

**[Caution]**

- This command allows writing to non-volatile memory. Therefore, using this command frequently may result in breakage of non-volatile memory. Use this command appropriately [10 times max./day].
- During execution of this command, the printer is in Busy state and stops receiving operation. Therefore, data transmission from the host is prohibited.

**fn = 2, 50: Function 2 : Copies the set value stored in storage area to the work area**

**GS ( M pL pH fn m**

---

**[Code]** <1d>H<28>H<4D>H pL pH fn m

**[Range]** (pL + pH x256) = 2 : (pL = 2, pH = 0)  
 fn = 2, 50  
 m = 0, 1, 48, 49

**[Outline]** Changes the set value of work area by the value of "m".

m	Function
0, 48	Sets all set values of work area to the initial value described in the specification.
1, 49	Copies the set value stored in storage area to the work area. When there is no set value in storage area, sets the value to the initial value described in the specification.



**fn = 3, 51: Function 3 : Specifies the auto loading function of the set value at initialization to be valid or invalid**

**GS ( M pL pH fn m**

---

**[Code]** <1d>H<28>H<4D>H pL pH fn m

**[Range]** (pL + pH x256) = 2 : (pL = 2, pH = 0)  
fn = 3, 51  
m = 0, 1, 48, 49

**[Outline]** Determines the setting of storage area at initialization to the work area by the value of "m".

<b>m</b>	<b>Function</b>
0, 48	Does not copy data from storage area to work area at initialization.
1, 49	Copies data from storage area to work area at initialization.

## **GS ( N pL pH fn m**

---

**[Function]** Designating font attribute

**[Outline]** Executes processing of font attribute by the specified fn value.

<b>fn</b>	<b>Function</b>
48	Selects character color.

## **fn = 48: Function 48: Selects character color**

### **GS ( N pL pH fn m**

---

**[Code]** <1d>H<28>H<4E>H pL pH fn m

**[Range]** (pL + pH x256) = 2 : (pL = 2, pH = 0)  
fn = 48  
m = 49 (At single color paper setting)  
m = 49, 50 (At 2-color paper setting)

**[Default]** m = 49

**[Outline]** Prints the succeeding characters with the energy set in m.

<b>m</b>	<b>Function</b>
49	High energy
50	Low energy

## 2.2.15 Other Commands

### DLE ENQ n

---

**[Function]** Real-time request to printer

**[Code]** <10>H<05>H<n>

**[Range]**  $0 \leq n \leq 2$

**[Outline]** The printer responds in real-time to the request that the host specifies with number "n".

n	Function
0	At the setting of execution of GS ^ by the FEED switch, the same processing as that pressing the FEED switch once is carried out.
1	After recovering from an error, the printer resumes printing from the beginning of the line where the error occurred.
2	The printer clears the receive buffer and the print buffer, and then recovers from the error.

- [Caution]**
- (n = 1) or (n = 2) shall be used after removing the error.
  - When receiving a code row coinciding with the code configuring this command, the same operation as this command takes place and attention by the user is required.  
Example: When corresponding code row is present in bit image data.
  - This command must not be used between other command code rows.  
Example: This command is used in the bit image data.
  - This command is ignored during transmission of block data.

**[See Also]** DLE EOT

## DLE DC4 fn m t (Specification of fn = 1)

---

**[Function]** Outputting specified pulse in real-time

**[Code]** <10>H<14>H<fn><m><t>

**[Range]** fn = 1, 0 ≤ m ≤ 8, 1 ≤ t ≤ 8

**[Outline]**

- A signal specified with "t" is output to the connector pin specified with "m".

m	Connector Pin
0	Pin No. 2 of drawer kick-out connector
1	Pin No. 5 of drawer kick-out connector

- Set the ON time/OFF time to t x100 ms, respectively.

**[Caution]**

- When receiving a code row coinciding with the code configuring this command, the same operation as this command takes place and attention by the user is required.  
Example: When corresponding code row is present in bit image data.
- This command must not be used between other command code rows.  
Example: This command is used in the bit image data.
- This command is ignored under the following conditions.
  - During sending block data
  - During output of signal to drawer kick connector
  - During occurrence of error

**[See Also]** ESC p

## DLE DC4 fn d1...d7 (Specification of fn = 8)

---

**[Function]** Buffer clear

**[Code]** <10>H<14>H<fn><d1> ...<d7>

**[Range]** fn = 8, d1 = 1, d2 = 3, d3 = 20, d4 = 1, d5 = 6, d6 = 2, d7 = 8

**[Outline]**

- Erases all data in receiving buffer or print buffer.
- Sends the following 3-byte data group.

	<b>Hex.</b>	<b>Decimal</b>	<b>No. of Data</b>
Header	37H	55	1 byte
Identifier	25H	37	1 byte
NULL	00H	0	1 byte

- Enters the state of selecting STANDARD MODE.

**[Caution]**

- When receiving a code row coinciding with the code configuring this command, the same operation as this command takes place and attention by the user is required.  
Example: When corresponding code row is present in bit image data.
- This command must not be used between other command code rows.  
Example: This command is used in bit image data.
- This command is ignored during transmission of block data.

**[See Also]** ESC p

## **ESC = n (CBM1000 compatible mode)**

---

**[Function]** Data input control

**[Code]** <1B>H<3D>H<n>

**[Range]**  $0 \leq n \leq 255$

**[Outline]**

- Selecting equipment for which data input from the host is valid.
- Each bit of "n" indicates as follows.
- When the printer has not been selected, this printer abandons all the received data until it is selected by this command.

Bit	Equipment	Value	
		0	1
0	Printer	Invalid	Valid
1	Not defined	—	—
2	Not defined	—	—
3	Not defined	—	—
4	Not defined	—	—
5	Not defined	—	—
6	Not defined	—	—
7	Not defined	—	—

**[Caution]**

- Even when the printer has not been selected, it can become BUSY state through printer operation.
- When the printer is deselected, this printer discards all the data until it is selected with this command. (Except DLE EOT, DLE ENQ, and DLE DC4)

**[See Also]** n = 1

## **ESC = n (CBM1000 non-compatible mode)**

---

**[Function]** Data input control

**[Code]** <1B>H<3D>H<n>

**[Range]**  $1 \leq n \leq 3$

**[Outline]**

- Selecting equipment for which data input from the host is valid.
- Each bit of "n" indicates as follows.
- When the printer has not been selected, this printer abandons all the received data until it is selected by this command.

n	Function
1	Specifies printer only.
2	Specifies customer display only.
3	Specifies printer and customer display

**[Caution]**

- Even when the printer has not been selected, it can become BUSY state through printer operation.
- When the printer is deselected, this printer discards all the data until it is selected with this command. (Except DLE EOT, DLE ENQ, and DLE DC4)

**[See Also]** n = 1

## ESC @

---

**[Function]** Initializing the printer

**[Code]** <1B>H<40>H

**[Outline]** Clears data stored in the print buffer and brings various settings to the initial state (Default state).

**[Caution]**

- The settings of DIP switches are not read again.
- Data inside the internal input buffer is not cleared.
- Macro definitions are not cleared.
- NV bit image definitions are not cleared.
- Data in the user NV memory is not cleared.

**[Sample Program]**

```
LPRINT CHR$(&H1B);"!"; CHR$(&H30);  
LPRINT CHR$(&H1B);"V"; CHR$(1);  
LPRINT "AAA"; CHR$(&HA);  
LPRINT CHR$(&H1B);"@";  
LPRINT "AAA"; CHR$(&HA);
```

**[Print Results]**

▷ ▷ ▷

AAA

Each setting has been initialized by this command.



## ESC L

---

<b>[Function]</b>	Selecting PAGE MODE
<b>[Code]</b>	<1B>H<4C>H
<b>[Outline]</b>	Switches from STANDARD MODE to PAGE MODE.
<b>[Caution]</b>	<ul style="list-style-type: none"><li>• This command is only effective if it entered at the beginning of a line.</li><li>• This command is not effective if it is entered when in PAGE MODE.</li><li>• STANDARD MODE is restored when printing specified by FF is finished or when ESC S is issued.</li><li>• The character mapping start position will be the point specified by ESC T in the print area specified by ESC W.</li><li>• The commands listed below, which have separate settings for PAGE MODE and STANDARD MODE, are changed to the settings for PAGE MODE use.<ul style="list-style-type: none"><li>(1) Spacing setting: ESC SP, FS S</li><li>(2) Line feed width setting: ESC 2, ESC 3</li></ul></li><li>• The following commands are valid only in PAGE MODE.<ul style="list-style-type: none"><li>(1) ESC V Specifying/canceling 90°-right-turned characters.</li><li>(2) ESC a Aligning the characters.</li><li>(3) ESC { Specifying/canceling the inverted characters.</li><li>(4) GS L Setting the left margin.</li><li>(5) G3S W Setting the print area width.</li></ul></li><li>• The following commands are disabled in PAGE MODE.<ul style="list-style-type: none"><li>(1) GS ( A Executes test printing.</li><li>(2) FS p Prints NV memory bit image.</li><li>(3) FS q Defines NV memory bit image.</li><li>(4) GS v 0 Prints raster bit image.</li></ul></li><li>• ESC @ restores STANDARD MODE.</li></ul>
<b>[See Also]</b>	Appendix 4.1.4 "Example of using PAGE MODE" FF, CAN, ESC FF, ESC S, ESC T, ESC W, GS W, GS \

## ESC S

---

<b>[Function]</b>	Selecting STANDARD MODE
<b>[Code]</b>	<1B>H<53>H
<b>[Outline]</b>	Switches from PAGE MODE to STANDARD MODE.
<b>[Caution]</b>	<ul style="list-style-type: none"><li>• This command is only effective if it is entered when in PAGE MODE.</li><li>• Any data mapped in PAGE MODE is erased.</li><li>• After this command is executed, the beginning of the line is taken as the next print start position.</li><li>• The print area defined by ESC W is initialized.</li><li>• The commands listed below, which have separate settings for STANDARD MODE and PAGE MODE, are changed to the settings for STANDARD MODE use.<ul style="list-style-type: none"><li>(1) Spacing setting: ESC SP, FS S</li><li>(2) Line feed width setting: ESC 2, ESC 3</li></ul></li><li>• The following commands are valid only in setting in STANDARD MODE.<ul style="list-style-type: none"><li>(1) ESC W Sets the space amount for setting print area in PAGE MODE.</li><li>(2) ESC T Selects the printing direction of character in PAGE MODE.</li><li>(3) GS \$ Sets the absolute position of character vertical direction in PAGE MODE.</li></ul></li><li>• STANDARD MODE is selected when the printer is turned on or reset, or when ESC @ is executed.</li></ul>
<b>[See Also]</b>	FF, ESC FF, ESC L

## ESC p m n1 n2

---

**[Function]** Generating the specified pulses

**[Code]** <1B>H<70>H<m><n1><n2>

**[Range]** m = 0, 1, 48, 49  
0 <n1≤n2≤255

**[Outline]**

- The signals specified by "n1" and "n2" are output to the connector pin specified by "m".
- "m" has the followings.

m	Connector Pin
0, 48	Drawer kick-out pin No. 2
1, 49	Drawer kick-out pin No. 5

- The ON time is n1 x2 ms, and OFF time n2 x2 ms.

**[Caution]**

- When "m" is beyond a definition range, no signal is output, discarding "n1" and "n2".
- The drawer drive duty must be within the following range:  
$$\frac{\text{ON time}}{\text{ON time} + \text{OFF time}} \leq 0.2$$
  
(The OFF time should be 4 times or more longer than the ON time.)

**[Sample Program]**

```
LPRINT CHR$(&H1B) + "p"  
LPRINT CHR$(0); ←Selects pin No. 2.  
LPRINT CHR$(5); ←Sets ON time to 10 ms  
LPRINT CHR$(50); ←Sets OFF time to 100 ms
```

## ESC RS

---

**[Function]** Sound buzzer

**[Code]** <1B>H<1E>H

**[Outline]** Sound the buzzer for 200 ms.

**[Caution]** This command is buffered before execution.

**[Sample Program]**

```
LPRINT CHR$(&H1B); CHR$(&H1E);
```

**[Execution Result]**

The buzzer sounds for approx. 200 ms.

# GS ( A pL pH n m

---

**[Function]** Execution of test printing

**[Code]** <1D>H<28>H<41>H<pL><pH><n><m>

**[Range]** (pL + (pH x256)) = 2 (pL = 2, pH = 0)  
0 ≤ n ≤ 2, 48 ≤ n ≤ 50  
1 ≤ m ≤ 3, 49 ≤ m ≤ 51

**[Outline]** Specified test printing will be executed.

- pL, pH will specify the number of subsequent parameters by (pL + (pH x256))bytes.
- "n" will specify the paper for test printing in the following table.

n	Category of Paper
0, 48	Basic paper (Paper rolls)
1, 49 2, 50	Paper rolls

- "m" will specify the category of test printing in the following table.

m	Category of Test Printing
1, 49	Hexadecimal dump
2, 50	Printer's status printing
3, 51	Memory SW settings

**[Caution]**

- This command is only valid when processed at the head of a line during the STANDARD MODE.
- The command will be ignored in PAGE MODE.
- During macro definition, if this command is processed, the macro definition is suspended, and the command starts being processed.
- Printer will reset its hard disk after finishing test printing. Therefore, the printer makes download characters, bit map images and macros undefined, clears the reception buffer/print buffer, and returns the various settings to defaults. At this time, the DIP switches are read again.
- Paper cutting is performed at the end of test printing.
- Printer will be BUSY when the processing of the command starts.

## GS I n

<b>[Function]</b>	Sending the printer ID
<b>[Code]</b>	<1D>H<49>H<n>
<b>[Range]</b>	1≤n≤4, 49≤n≤52, 65≤n≤69, n=112
<b>[Outline]</b>	Sends the specified printer ID.

n	Type of Printer ID	Specification	Value (Hex.)
1,49	Model ID	CT-S2000	-
2,50	Type ID	Refer to table "Type ID" below	
3,51	ROM version ID	Differs by ROM version.	
4,52	Black mark Length	Depends on Black mark paper (mm)	

Sends the specified printer information.

n	Kind of Printer	Information
65	Firmware version	Differs by firmware version.
66	Manufacturer name	CITIZEN
67	Model name	CT-S2000
68	Serial number	Differs by serial number.
69	Kinds of multi-language fonts	Japanese Kanji specifications: KANJI
112	State of DSW	Refer to table "DSW" below (only serial model)

Type ID If n = 2, 50 is specified:

Bit	Meaning	Hex.	Decimal
0	Equipped for 2 byte code support	01	1
1	Equipped with auto cutter	02	2
2	Thermal paper	00	0
	Black mark paper (when Black mark paper is selected)	04	4
3	Undefined	—	—
4	Unused	00	0
5	Undefined	—	—
6	Undefined	—	—
7	Unused	00	0


n = 4, 52 specified (only for B.M specs)

The Black mark length and mark interval currently used are returned in 4-byte code.

All fractional parts in millimeters are rounded off.

Byte 1 + Byte 2 x256 = Black mark interval

Byte 3 + Byte 4 x256 = Black mark length

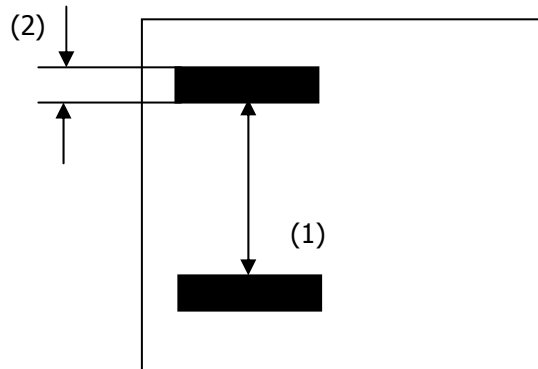

Black mark paper

DSW If n = 112 is specified:

Bit	Function	Hex.	Decimal
0	Dip switch [DSW1] is OFF	00	0
	Dip switch [DSW1] is ON	01	1
1	Dip switch [DSW2] is OFF	00	0
	Dip switch [DSW2] is ON	02	2
2	Dip switch [DSW3] is OFF	00	0
	Dip switch [DSW3] is ON	04	4
3	Dip switch [DSW4] is OFF	00	0
	Dip switch [DSW4] is ON	08	8
4	Dip switch [DSW5] is OFF	00	0
	Dip switch [DSW5] is ON	10	16
5	Dip switch [DSW6] is OFF	00	0
	Dip switch [DSW6] is ON	20	32
6	Dip switch [DSW7] is OFF	00	0
	Dip switch [DSW7] is ON	40	64
7	Dip switch [DSW8] is OFF	00	0
	Dip switch [DSW8] is ON	80	128

**[Caution]**

- Under DTR/DSR control, the printer sends the printer ID after verifying that the host is ready to receive.
- Sending the Black mark length is valid only when Black mark paper is selected.
- If the host is not ready to receive, the printer waits for the host to become ready to receive.
- Under XON/XOFF control, the printer sends the printer ID without checking whether or not the host is ready to receive.
- Because this command is executed when data is mapped in the receive buffer, there may be a delay between command receiving and printer ID sending depending on the condition of the receive buffer.
- If ASB (Automatic Status Back) is enabled by GS a, the host must discriminate between the printer ID due to this command and the status due to ASB.

## GS P x y

---

<b>[Function]</b>	Specifying the basic calculation pitch
<b>[Code]</b>	<1D>H<50>H<x><y>
<b>[Range]</b>	$0 \leq x \leq 255$ $0 \leq y \leq 255$
<b>[Outline]</b>	<ul style="list-style-type: none"><li>• This command sets the horizontal basic calculation pitch to approx. 25.4/x mm (1/x inches), and the vertical basic calculation pitch to approx. 25.4/y mm (1/y inches).</li><li>• If x = 0, the horizontal basic calculation pitch is reverted to the default value.</li><li>• If y = 0, the vertical basic calculation pitch is reverted to the default value.</li></ul>
<b>[Caution]</b>	<ul style="list-style-type: none"><li>• The horizontal direction is defined as the direction perpendicular to the paper feed, and the vertical direction is defined as the paper feed direction.</li><li>• In STANDARD MODE, the following parameters are used regardless of the character orientation (e.g. inverted or 90°-right-turned).<ul style="list-style-type: none"><li>(1) Commands using x: ESC SP, ESC \$, ESC \, FS S, GS L, GS W</li><li>(2) Commands using y: ESC 3, ESC J</li></ul></li><li>• In PAGE MODE, the parameters used depend on the character orientation, as follows:<ul style="list-style-type: none"><li>(1) If the start point specified by ESC T is the top left or bottom right (The characters are mapped in the direction perpendicular to the paper feed):<ul style="list-style-type: none"><li>• Commands using x: ESC SP, ESC \$, ESC W, ESC \, FS S</li><li>• Commands using y: ESC 3, ESC J, ESC W, GS \$, GS \</li></ul></li><li>(2) If the start point specified by ESC T is the top right or bottom left (The characters are mapped in the paper feed direction):<ul style="list-style-type: none"><li>• Commands using x: ESC 3, ESC J, ESC W, GS \$, GS \</li><li>• Commands using y: ESC SP, ESC \$, ESC W, ESC \, FS S</li></ul></li></ul></li><li>• This command does not affect any other values that are already set.</li><li>• If calculations made in combination with another command generate fractions, the fractions are corrected with the minimum pitch of the mechanism, and the remainder is omitted.</li></ul>
<b>[Default]</b>	x = 203, y = 360
<b>[See Also]</b>	Appendix 4.1 "Explanation on PAGE MODE" ESC SP, ESC \$, ESC 3, ESC J, ESC W, ESC \, GS \$, GS L, GS W, GS



### 3. CHARACTER CODE TABLE

#### 3.1 Code Page

##### 3.1.1 Codepage 00H to 7FH & PC437 (USA, Europe Standard)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0	NUL	DLE		0	@	P	`	p	Ç	É	á	☒		⊥		
1		XON	!	1	A	Q	a	q	ü	æ	í	☒		⊥		±
2			"	2	B	R	b	r	é	Æ	ó	☒		⊥		
3		XOFF	#	3	C	S	c	s	â	ô	ú			⊥		
4	EOT	DC4	\$	4	D	T	d	t	ä	ö	ñ			⊥		∫
5	ENQ		%	5	E	U	e	u	à	ò	Ñ	†		⊥		∫
6			&	6	F	V	f	v	å	û	ä	†	†	⊥	μ	÷
7			'	7	G	W	g	w	ç	ù	ó	†	†	†		≈
8		CAN	(	8	H	X	h	x	ê	ÿ	¿	†	⊥	†		°
9	HT		)	9	I	Y	i	y	ë	ÿ	¬	†	⊥			
A	LF		*	:	J	Z	j	z	è	Ü	¬		⊥			.
B		ESC	+	;	K	[	k	{	ï	ø	½	†	⊥	■		
C	FF	FS	,	<	L	¥	l		î	£	¼	⌋	†	■		<sup>n</sup>
D	CR	GS	-	=	M	]	m	}	ì	¥	i	⌋	=	■	∅	<sup>2</sup>
E		RS	.	>	N	^	n	~	Ä	Pt	«	⌋	†	■		■
F			/	?	O	_	o		Å	f	»		⊥	■		

### 3.1.2 Codepage 00H to 7FH & Katakana

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0	NUL	DLE		0	@	P	`	p	_		SP	-	タ	ミ	=	×
1		XON	!	1	A	Q	a	q	-		°	ア	チ	ム	ト	円
2			"	2	B	R	b	r	■			イ	ツ	メ	十	年
3		XOFF	#	3	C	S	c	s	■			ウ	テ	モ	十	月
4	EOT	DC4	\$	4	D	T	d	t	■		,	エ	ト	ヤ	▲	日
5	ENQ		%	5	E	U	e	u	■	—	・	オ	ナ	ユ	▲	時
6			&	6	F	V	f	v	■		ヲ	カ	ニ	ヨ	▼	分
7			'	7	G	W	g	w	■		ア	キ	ヌ	ラ	▼	秒
8		CAN	(	8	H	X	h	x			イ	ク	ネ	リ	♠	〒
9	HT		)	9	I	Y	i	y			ウ	ケ	ノ	ル	♥	市
A	LF		*	:	J	Z	j	z			エ	コ	ハ	レ	◆	区
B		ESC	+	;	K	[	k	{			オ	サ	ヒ	ロ	♣	町
C	FF	FS	,	<	L	¥	l		■	ゝ	ヤ	シ	フ	ワ		村
D	CR	GS	-	=	M	]	m	}	■	ゝ	ユ	ス	ヘ	ン		人
E		RS	.	>	N	^	n	~	■	ゝ	ヨ	セ	ホ	“	/	〒
F			/	?	O	_	o		+	ゝ	ツ	ソ	マ	°	\	SP

### 3.1.3 Codepage 00H to 7FH & PC850 (Multilingual)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0	NUL	DLE		0	@	P	`	p	Ç	É	á	☒		đ	ó	
1		XON	!	1	A	Q	a	q	ü	æ	í	☒		Đ		±
2			"	2	B	R	b	r	é	Æ	ó	☒		Ê	Ô	=
3		XOFF	#	3	C	S	c	s	â	ô	ú			Ë	Ò	¾
4	EOT	DC4	\$	4	D	T	d	t	ä	ö	ñ			È	õ	¶
5	ENQ		%	5	E	U	e	u	à	ò	Ñ	Á		€	Õ	§
6			&	6	F	V	f	v	å	û	ä	Â	ã	í	μ	÷
7			'	7	G	W	g	w	ç	ù	o	À	Ã	î	þ	↳
8		CAN	(	8	H	X	h	x	ê	ÿ	ı	©	ℒ	ï	þ	°
9	HT		)	9	I	Y	i	y	ë	ö	®	†	‡		Ú	¨
A	LF		*	:	J	Z	j	z	è	Ü	¬		±		Û	·
B		ESC	+	;	K	[	k	{	ï	ø	½	¬	‡	■	Ù	¹
C	FF	FS	,	<	L	¥	l		î	£	¼	⌋	‡	■	Ý	³
D	CR	GS	-	=	M	]	m	}	ì	Ø	i	ø	-	¡	Ý	²
E		RS	.	>	N	^	n	~	Ä	x	«	¥	†	ì		■
F			/	?	O	_	o		Å	f	»		☒	■		

### 3.1.4 Codepage 00H to 7FH & PC860 (Portuguese)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0	NUL	DLE		0	@	P	`	p	Ç	É	á	☒		⊥		
1		XON	!	1	A	Q	a	q	ü	À	í	☒		⊥		±
2			"	2	B	R	b	r	é	È	ó	☒		⊥		
3		XOFF	#	3	C	S	c	s	â	ô	ú			⊥		
4	EOT	DC4	\$	4	D	T	d	t	ã	õ	ñ			⊥		∫
5	ENQ		%	5	E	U	e	u	à	ò	Ñ	†		⊥		∫
6			&	6	F	V	f	v	Á	Ú	<u>a</u>	†	†	⊥	μ	÷
7			'	7	G	W	g	w	ç	ù	<u>o</u>	†	†	†		≈
8		CAN	(	8	H	X	h	x	ê	ì	¿	†	⊥	†		°
9	HT		)	9	I	Y	i	y	Ê	Õ	Ò	†	⊥			
A	LF		*	:	J	Z	j	z	è	Ü	¬		⊥			.
B		ESC	+	;	K	[	k	{	í	œ	½	†	⊥	■		
C	FF	FS	,	<	L	¥	l		ô	£	¼	⌋	†	■		"
D	CR	GS	-	=	M	]	m	}	ì	Ù	i	⌋	-	■	∅	₂
E		RS	.	>	N	^	n	~	Ã	Pt	«	⌋	†	■		■
F			/	?	O	_	o		Â	Ó	»		⊥	■		

### 3.1.5 Codepage 00H to 7FH & PC863 (Canadian-French)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0	NUL	DLE		0	@	P	`	p	Ç	É	¡	☒		⊥		
1		XON	!	1	A	Q	a	q	ü	È	'	☒		⊥		±
2			"	2	B	R	b	r	é	Ê	ô	☒		⊥		
3		XOFF	#	3	C	S	c	s	â	ô	ú			⊥		
4	EOT	DC4	\$	4	D	T	d	t	Â	Ë	"			⊥		∫
5	ENQ		%	5	E	U	e	u	à	Ï	>	†		⊥		J
6			&	6	F	V	f	v	¶	û	³	†	†	⊥	μ	÷
7			'	7	G	W	g	w	ç	ù	-	⊥	†	†		≈
8		CAN	(	8	H	X	h	x	ê	◊	î	⊥	⊥	†		◦
9	HT		)	9	I	Y	i	y	ë	ô	⊥	†	⊥			
A	LF		*	:	J	Z	j	z	è	Ü	⊥		⊥			.
B		ESC	+	;	K	[	k	{	ï	œ	½	⊥	⊥	■		
C	FF	FS	,	<	L	¥	l		î	&	¼	⊥	†	■		ⁿ
D	CR	GS	-	=	M	]	m	}	=	Ù	¾	⊥	=	■	∅	²
E		RS	.	>	N	^	n	~	À	Û	«	⊥	†	■		■
F			/	?	O	_	o		§	f	»		⊥	■		

### 3.1.6 Codepage 00H to 7FH & PC865 (Nordic)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0	NUL	DLE		0	@	P	`	p	Ç	É	á	☒		⊥		
1		XON	!	1	A	Q	a	q	ü	æ	í	☒		⊥		±
2			"	2	B	R	b	r	é	Æ	ó	☒		⊥		
3		XOFF	#	3	C	S	c	s	â	ô	ú			⊥		
4	EOT	DC4	\$	4	D	T	d	t	ä	ö	ñ			⊥		∫
5	ENQ		%	5	E	U	e	u	à	ò	Ñ	†		⊥		J
6			&	6	F	V	f	v	å	û	ä	†	†	⊥	μ	÷
7			'	7	G	W	g	w	ç	ù	o	⊥	†	†		≈
8		CAN	(	8	H	X	h	x	ê	ÿ	¿	⊥	⊥	†		°
9	HT		)	9	I	Y	i	y	ë	ö	⊥	†	⊥			
A	LF		*	:	J	Z	j	z	è	Ü	⊥		⊥			.
B		ESC	+	;	K	[	k	{	ï	ø	½	⊥	⊥	■		
C	FF	FS	,	<	L	¥	l		î	£	¼	⊥	†	■		"
D	CR	GS	-	=	M	]	m	}	ì	Ø	i	⊥	—	■	∅	₂
E		RS	.	>	N	^	n	~	Ä	Pt	«	⊥	†	■		■
F			/	?	O	_	o		Å	f	⊘		⊥	■		

### 3.1.7 Codepage 00H to 7FH & PC852 (Eastern Europe)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0	NUL	DLE		0	@	P	`	p	Ç	É	á	☒		đ	Ó	-
1		XON	!	1	A	Q	a	q	ü	Í	í	☒		Đ		"
2			"	2	B	R	b	r	é	Í	ó	☒		Ď	Ó	`
3		XOFF	#	3	C	S	c	s	â	Ú	ú			Ě	Ň	˘
4	EOT	DC4	\$	4	D	T	d	t	ä	Ö	Å			d'	Ň	˘
5	ENQ		%	5	E	U	e	u	Û	Ĺ	ą	Á		Ň	Ň	§
6			&	6	F	V	f	v	ć	Ÿ	ž	Â	Ă	í	š	÷
7			'	7	G	W	g	w	ç	Ś	ż	Ě	Ă	î	š	↳
8		CAN	(	8	H	X	h	x	ł	Ś	Ę	Ş	Ł	ě	Ŕ	°
9	HT		)	9	I	Y	i	y	ë	Ö	ę	ł	ł		Ú	¨
A	LF		*	:	J	Z	j	z	ő	Ü	ť		⊥		Ŕ	.
B		ESC	+	;	K	[	k	{	ó	ř	ž	ł	ł	■	Ú	ú
C	FF	FS	,	<	L	¥	l		î		č	ł	ł	■	Ý	Ř
D	CR	GS	-	=	M	]	m	}	ž	ł	ş	ž	-	ł	Ý	ř
E		RS	.	>	N	^	n	~	Ä	x	«	ž	ł	Ů	ł	■
F			/	?	O	_	o		ć	č	»		☒	■	'	SP

### 3.1.8 Codepage 00H to 7FH & PC866 (Russian)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0	NUL	DLE		0	@	P	`	p				⌘		⌞		Ë
1		XON	!	1	A	Q	a	q				⌘		⌞		ë
2			"	2	B	R	b	r				⌘		⌞		ε
3		XOFF	#	3	C	S	c	s						⌞		ε
4	EOT	DC4	\$	4	D	T	d	t						⌞		ï
5	ENQ		%	5	E	U	e	u				†		⌞		ï
6			&	6	F	V	f	v				†	†	⌞		ÿ
7			'	7	G	W	g	w				†	†	†		
8		CAN	(	8	H	X	h	x				†	⌞	†		°
9	HT		)	9	I	Y	i	y				†	⌞			·
A	LF		*	:	J	Z	j	z					⌞			·
B		ESC	+	;	K	[	k	{				†	†	■		Ů
C	FF	FS	,	<	L	¥	l					†	†	■		No .
D	CR	GS	-	=	M	]	m	}				†	=	†		⊙
E		RS	.	>	N	^	n	~				†	†	Ů		■
F			/	?	O	_	o						⌞	■		



### 3.1.9 Codepage 00H to 7FH & PC857 (Turkish)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0	NUL	DLE		0	@	P	`	p	Ç	É	á	☒		o	ó	
1		XON	!	1	A	Q	a	q	ü	æ	í	☒		a		±
2			"	2	B	R	b	r	é	Æ	ó	☒		Ê	ô	
3		XOFF	#	3	C	S	c	s	â	ô	ú			Ë	ò	¾
4	EOT	DC4	\$	4	D	T	d	t	à	ö	ñ			È	õ	¶
5	ENQ		%	5	E	U	e	u	ä	ò	Ñ	Á			Õ	§
6			&	6	F	V	f	v	å	û	Ê	Â	ã	í	µ	÷
7			'	7	G	W	g	w	ç	ù	ê	À	Ã	î		↳
8		CAN	(	8	H	X	h	x	ê	í	ı	©	ℒ	ï	×	°
9	HT		)	9	I	Y	i	y	ë	Ö	®	†	ℓ		Ú	¨
A	LF		*	:	J	Z	j	z	è	Ü	¬		⊥		Û	.
B		ESC	+	;	K	[	k	{	ï	ø	½	⌈	⌋	■	Ù	¹
C	FF	FS	,	<	L	¥	l		î	£	¼	⌋	⌈	■	Ì	³
D	CR	GS	-	=	M	]	m	}	ı	Ø	i	ø	-	ı	ÿ	²
E		RS	.	>	N	^	n	~	Ä	Ş	«	¥	†	ì	-	■
F			/	?	O	_	o		Å	ş	»		☒	■	'	SP

### 3.1.10 Codepage 00H to 7FH & PC864 (Arabic)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0	NUL	DLE		0	@	P	`	p	◦	β	(RSP)	•	¢	ذ	ـ	ع
1		XON	!	1	A	Q	a	q	•	∞	(SHY)	۱	ء	ر	ف	س
2			”	2	B	R	b	r	•	φ	⌈	۲	آ	ز	ق	ن
3		XOFF	#	3	C	S	c	s	√	±	£	۳	أ	س	ك	ه
4	EOT	DC4	\$	4	D	T	d	t	▒	½	⊘	٤	ؤ	ش	ل	ف
5	ENQ		%	5	E	U	e	u	▒	¼	ل	٥	ح	ص	د	س
6			&	6	F	V	f	v	▒	≈		٦	ك	ض	ن	س
7			'	7	G	W	g	w	▒	«		٧	ا	ط	ه	غ
8		CAN	(	8	H	X	h	x	▒	»	ا	٨	ب	ظ	و	ق
9	HT		)	9	I	Y	i	y	▒	لأ	ب	٩	ة	ع	ى	آ
A	LF		*	:	J	Z	j	z	▒	لأ	ت	ف	ت	غ	ي	آ
B		ESC	+	;	K	[	k	{	▒		ث	؛	ث	ا	ض	ل
C	FF	FS	,	<	L	\	l		▒		،	س	ج	٦	ع	ك
D	CR	GS	-	=	M	]	m	}	▒	لأ	ج	ش	ج	÷	غ	ي
E		RS	.	>	N	^	n	~	▒	لأ	ح	ص	خ	×	غ	■
F			/	?	O	_	o		▒	،	خ	؟	د	ع	م	

### 3.1.11 Codepage 00H to 7FH & WPC1252

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0	NUL	DLE		0	@	P	`	p	€			°	À	Đ	à	đ
1		XON	!	1	A	Q	a	q		'	i	±	Á	Ñ	á	ñ
2			"	2	B	R	b	r	,	'	ø	²	Â	Ò	â	ò
3		XOFF	#	3	C	S	c	s	f	“	£	³	Ã	Ó	ã	ó
4	EOT	DC4	\$	4	D	T	d	t	,,	”	⊙	´	Ä	Ô	ä	ô
5	ENQ		%	5	E	U	e	u	...	·	¥	μ	Å	Õ	å	õ
6			&	6	F	V	f	v	†			¶	Æ	Ö	æ	ö
7			'	7	G	W	g	w	‡	-	§	·	Ç	×	ç	÷
8		CAN	(	8	H	X	h	x	^	~	¨	,	È	Ø	è	ø
9	HT		)	9	I	Y	i	y	‰	™	©	´	É	Ù	é	ù
A	LF		*	:	J	Z	j	z	Š	š	ª	º	Ê	Ú	ê	ú
B		ESC	+	;	K	[	k	{	<	>	«	»	Ë	Û	ë	û
C	FF	FS	,	<	L	¥	l		Œ	œ	¬	¼	Ì	Ü	ì	ü
D	CR	GS	-	=	M	]	m	}			-	½	Í	Ý	í	ý
E		RS	.	>	N	^	n	~	Ž	ž	®	¾	Î	Þ	î	þ
F			/	?	O	_	o			ÿ	—	¿	Ï	Ɔ	ï	ÿ

### 3.1.12 Codepage 00H to 7FH & Thai Code 18

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0	NUL	DLE		0	@	P	`	p	Г	๖		ฐ	ภ	๕	ใ	๐
1		XON	!	1	A	Q	a	q	Г	๗	ภ	ท	ม	๖	แ	๑
2			"	2	B	R	b	r	L	๘	ช	ฒ	ย	๗	โ	๒
3		XOFF	#	3	C	S	c	s	J	๙	ช	ณ	ว	๘	ใ	๓
4	EOT	DC4	\$	4	D	T	d	t		๑๐	ศ	ต	ภ	๗	ไ	๔
5	END		%	5	E	U	e	u	-	๑๑	ศ	ต	ณ	๘	๗	๕
6			&	6	F	V	f	v		๑๒	ฆ	ภ	ภ	๘	๗	๖
7			'	7	G	W	g	w		๑๓	ง	ท	ว	๘	๘	๗
8		CAN	(	8	H	X	h	x	⊥	๑๔	จ	ธ	ศ	๗	๗	๘
9	HT		)	9	I	Y	i	y	T	๑๕	ฉ	น	ช	๗	๗	๙
A	LF		*	:	J	Z	j	z	+	๑๖	ช	บ	ส	๗	๗	๑๐
B		ESC	+	:	K	[	k	{	█	๑๗	ช	ป	ท	๗	+	๑๑
C	FF	FS	,	<	L	\	l		←	๑๘	ณ	ผ	พ	๗	๗	๑๒
D	CR	GS	-	=	M	]	m	}	↑	๑๙	ณ	ผ	อ	๗	๗	๑๓
E		RS	.	>	N	^	n	~	→	๒๐	ณ	พ	ฮ	๗	๗	๑๔
F			/	?	O	_	o		↓	๒๑	ณ	พ	ๆ	฿	๗	๑๕

## 3.2 International Character Code Table

	Country	23	24	40	5B	5C	5D	5E	60	7B	7C	7D	7E
0	U.S.A	#	\$	@	[	\	]	^	'	{		}	~
1	France	#	\$	à	°	ç	§	^	'	é	ù	è	¨
2	Germany	#	\$	§	Ä	Ö	Ü	^	'	ä	ö	ü	β
3	U.K.	£	\$	@	[	\	]	^	'	{		}	~
4	Denmark I	#	\$	@	Æ	Ø	Å	^	'	æ	ø	å	~
5	Sweden	#	¤	É	Ä	Ö	Å	Ü	é	ä	ö	å	ü
6	Italy	#	\$	@	°	\	é	^	ù	à	ò	è	ì
7	Spain I	Pt	\$	@	i	Ñ	¿	^	'	¨	ñ	}	~
8	Japan	#	\$	@	[	¥	]	^	'	{		}	~
9	Norway	#	¤	É	Æ	Ø	Å	Ü	é	æ	ø	å	ü
10	Denmark II	#	\$	É	Æ	Ø	Å	Ü	é	æ	ø	å	ü
11	Spain II	#	\$	á	i	Ñ	¿	é	'	ì	ñ	ó	ú
12	Latin America	#	\$	á	i	Ñ	¿	é	ü	ì	ñ	ó	ú
13	Korea	#	\$	@	[	₩	]	^	'	{		}	~
14	Croatia	#	\$	Ž	Š	Đ	Ć	Č	ž	š	đ	ć	č
15	China	#	¥	@	[	\	]	^	'	{		}	~

## 4. APPENDIX

### 4.1 Explanation on PAGE MODE

#### 4.1.1 Overview


The printer has two print modes: STANDARD and PAGE.

In STANDARD MODE, the printer prints or feeds paper each time it receives a print or paper feed command.

In PAGE MODE, when the printer receives print commands and/or form feed commands, it simply forwards them to the specified print area of memory. Only when an ESC FF or FF is executed, all the data mapped in the print area will then be printed in a batch.

For example, suppose you executed a print and line feed for data "ABCDEF"<LF>. In STANDARD MODE, the data "ABCDEF" is printed and paper is advanced one line. In PAGE MODE, the data "ABCDEF" is written in the specified print area of memory, and the memory location for the storage of the next print data is shifted one line.

The printer enters PAGE MODE with an ESC L, so that all commands received after that point are handled in PAGE MODE. When an ESC FF is executed, the data received until then is printed in a batch. When an FF is executed, the data received until then is printed in a batch, after which the printer returns to STANDARD MODE. An ESC S causes the printer to immediately return to STANDARD MODE; any print data, however, that has been stored in PAGE MODE is not printed. Instead it will be cleared.

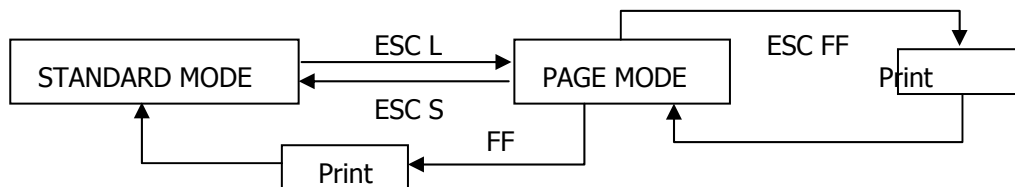

#### [Switching Between STANDARD MODE and PAGE MODE]

#### 4.1.2 Values Set by Each Command in STANDARD MODE and PAGE MODE

(1) The values set with commands are common to the STANDARD MODE and PAGE MODE. The values set with any of the commands listed below are, however, treated differently and stored separately for the STANDARD and PAGE MODES.

- ESC SP, ESC 2, ESC 3, FS S

(2) The maximum printable size of a bitmap image is 576 dots for STANDARD MODE. In PAGE MODE, the maximum printable size of a bitmap image is 831 dots in the "y" direction (paper feed direction). (However 831 dots are reserved for "y" of the print area set by ESC W and the value of print direction "n" specified by ESC T is 1 or 3.)


### 4.1.3 Mapping of Print Data in the Print Area

Print data is mapped in the print area as follows:


- (1) The print area is set by ESC W. When the printer has finished all of the print and paper feed actions specified before receiving an ESC W, the ESC W sets the right end (as viewed facing the printer) as the start point (x0, y0) of the print area. The print area is a rectangle defined by two edges extending from the start point (x0, y0): one edge running in the "x" (Horizontal) direction by "dx" pitch (inclusive of the start point), and the other running in the "y" (Vertical) direction by "dy" pitch. (If no ESC W is defined, the default values are used to define the print area.)
- (2) With a print area defined by ESC W and a print direction specified by ESC T, when the printer receives print data, the print data is mapped in the print area where point A (see the Figure 4-1 "Mapping Position for Character Data") is used as the initial value of the start point. If the print data consists of characters, this start point serves as the baseline.

If the print data is a downloaded bitmap image or a bar code, the print data is mapped with its lower-left point B aligned to the baseline. (See the Figure 4-2 "Mapping Positions for Print Data".) When attempting to map the HRI characters of a bar code, however, the section above the standard character height will not be printed.

- (3) If print data (or the space to the right of a character) extends beyond the print area before a command that involves a line feed (for example, LF or ESC J command) is received, a line feed is automatically executed in the print area, so that the mapping position of the print data is moved one line. The next mapping position will be the beginning of the line. In this case, the line feed width is as defined by a command such as ESC 2 or ESC 3.
- (4) By default, the line feed width is 1/6 inch, which is equivalent to 34 dots. If the print data for the next line includes a vertically doubled or taller character, a downloaded bitmap image extending two or more lines, or a bar code taller than the character height, the data, therefore, falls short of the line feed width, causing the upper dots of the character to overlap the print data of the current line. The line feed width needs to be increased.

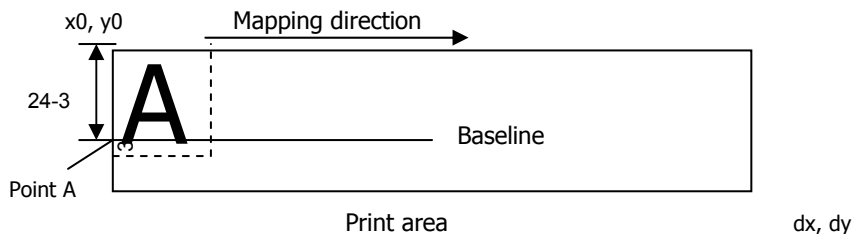

**Figure 4-1 Mapping Position for Character Data**

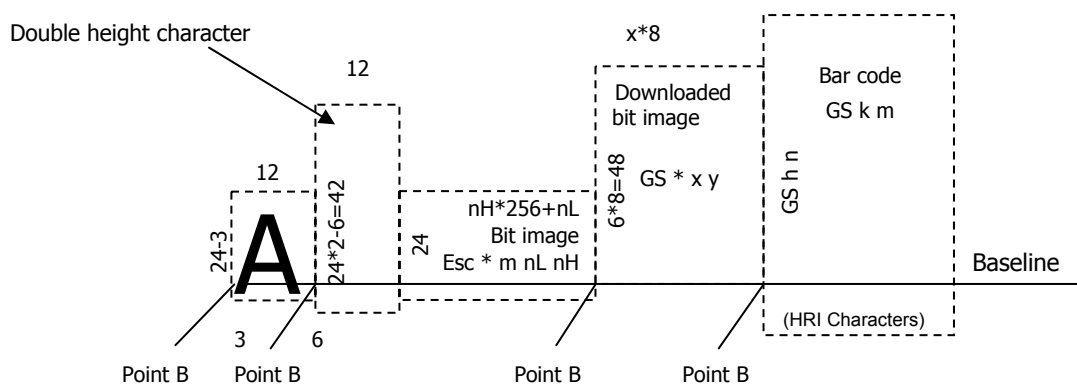

**Figure 4-2 Mapping Positions for Print Data**

#### 4.1.4 Example of Using PAGE MODE

The following explains specific uses of PAGE MODE.

When in PAGE MODE, the commands are typically sent from the host to the printer in the following sequence:

- (1) An ESC L puts the printer in PAGE MODE.
- (2) An ESC W specifies the print area.
- (3) An ESC T specifies the print direction.
- (4) Print data is sent.
- (5) An FF instructs the printer to print the print data in a batch.
- (6) After printing, the printer returns to STANDARD MODE.

##### < Example 1 >

```
100 PRINT #1, CHR$(&H1B);"L";  
110 PRINT #1, CHR$(&H1B);"W"; CHR$(0); CHR$(0); CHR$(0); CHR$(0);  
120 PRINT #1, CHR$(200); CHR$(0); CHR$(144); CHR$(1);  
130 PRINT #1, CHR$(&H1B);"T"; CHR$(0);  
140 PRINT #1, "Page mode lesson Test1"  
150 PRINT #1, CHR$(&HC);
```

The program in Example 1 reserves a print area of 200 ·400 pitches extending from the start point (0, 0), and then prints the text "Page Mode lesson Test 1" on the first line of the print area as shown in Figure 4-3 "Example 1: Results of Print".

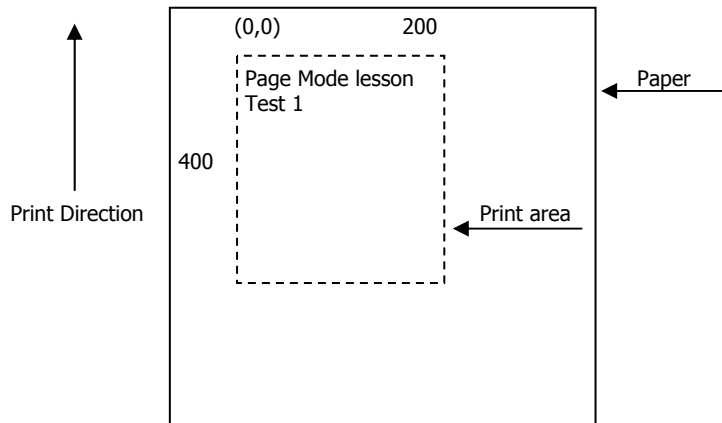


Figure 4-3 Example 1: Results of Print



In Figure 4-3, a line feed occurs between "lesson" and "Test 1" because the space " " next to "lesson" does not fit in the horizontal range of the 200 -400-pitch print area. The line feed width conforms to the value specified by a command such as ESC 3.

It is possible to set as many print areas as desired before executing FF. If print areas overlap each other, the print area setup data are ORed with the previous data.

If you want to erase a section of mapped data, use the CAN command. The CAN command erases all data in the print area being specified. You can, therefore, use an ESC W to define a print area that encloses the section you want to erase, and then execute the CAN command, so that the section of the data is erased.

It is important to remember that any part of a character that overlaps with the specified print area will be erased.

**< Example 2 >**


```

100 PRINT #1, CHR$(&H1B);"L";
110 PRINT #1, CHR$(&H1B);"W"; CHR$(0); CHR$(0); CHR$(0); CHR$(0);
120 PRINT #1, CHR$(200); CHR$(0); CHR$(144); CHR$(1);
130 PRINT #1, CHR$(&H1B);"T"; CHR$(0);
140 PRINT #1, "Page mode lesson2CAN command";
150 PRINT #1, CHR$(&HA);
160 PRINT #1, "ABCDEFGH IJKLMNOPQRST1234567890";
170 PRINT #1, CHR$(&HC);

```

First, an ESC L is sent to switch to PAGE MODE (100th line). Next, an ESC W is used to send eight arguments, n1 to n8, to reserve a print area. In this example, the arguments are sent in the sequence of 0, 0, 0, 0, 200, 0, 144, and 1, to reserve a print area that measures 200 from the start point (0, 0) in the "x" direction and 400 in the "y" direction (110th to 120th line). Furthermore, an ESC T is issued to specify the print direction to be "0" (130th line).

After the above setup, print data is sent (140th to 160th line). Finally, an FF is sent (170th line) to produce a print-out as shown in Figure 4-4 "Example 2: Result of Print".

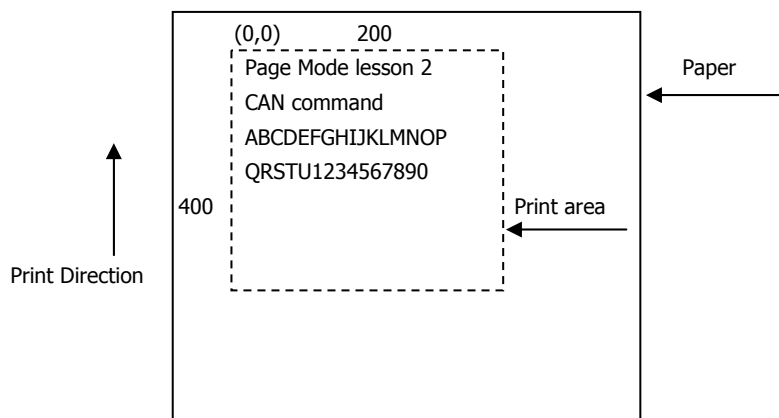


**Figure 4-4 Example 2: Result of Print**

Before an FF is sent (170th line), the following program code can be added to remove part of the data.

```
180 PRINT #1, CHR$(&H1B);"W";CHR$(72);CHR$(0);CHR$(120);CHR$(0);  
190 PRINT #1, CHR$(36);CHR$(0);CHR$(48)CHR$(0);  
200 PRINT #1, CHR$(&H18);
```

As a result of the additional program code, a print-out is executed as shown in Figure 4-5 "Print Result of Adding a Program of Example 3 to Example 2", where the string "GHI" is removed.

When strings are removed with CAN, the area where the string would have been is not used by the rest of the data, instead it is converted into a sequence of spaces.

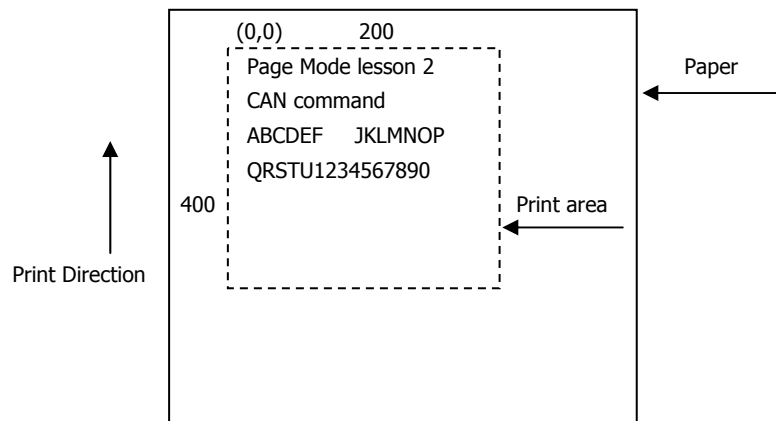

**Figure 4-5 Print Result of Adding a Program of Example 3 to Example 2**

## 4.2 Bidirectional Parallel Interface

### Overview

The interface of the printer is a Level-1 compatible device according to IEEE-P1284. It supports the communication modes described in 4.2.1 below.


### 4.2.1 Parallel Interface Communication Mode

The parallel interface of the printer provides three communication modes as outlined below. When the printer is turned on or reset, it defaults to Compatibility mode.

- **Compatibility Mode**  
Data is transmitted from the host to the printer in units of one byte. Usually, this mode is used for data transmission. You may switch to the other modes from Compatibility mode.
- **Nibble Mode**  
Data is transmitted from the printer to the host in units of four bits. The data transmission from the printer uses a status signal line. To send one byte of data in this mode, two sets of four-bit data are sent consecutively.
- **Byte Mode**  
Data is transmitted from the printer to the host in units of one byte. Data transmission from the printer uses an 8-bit data signal line. For Byte mode, the host must be capable of toggling the signal direction over the 8-bit data signal line. Communication from the host to the printer is called Forward mode, while communication from the printer to the host is called Reverse mode.

### 4.2.2 Interfacing Phases

Interfacing in each communication mode is divided into several phases. In addition, there is a phase for mode initialization, as well as a phase for mode switching. Interface signals may differ in name and function for different modes and different phases.

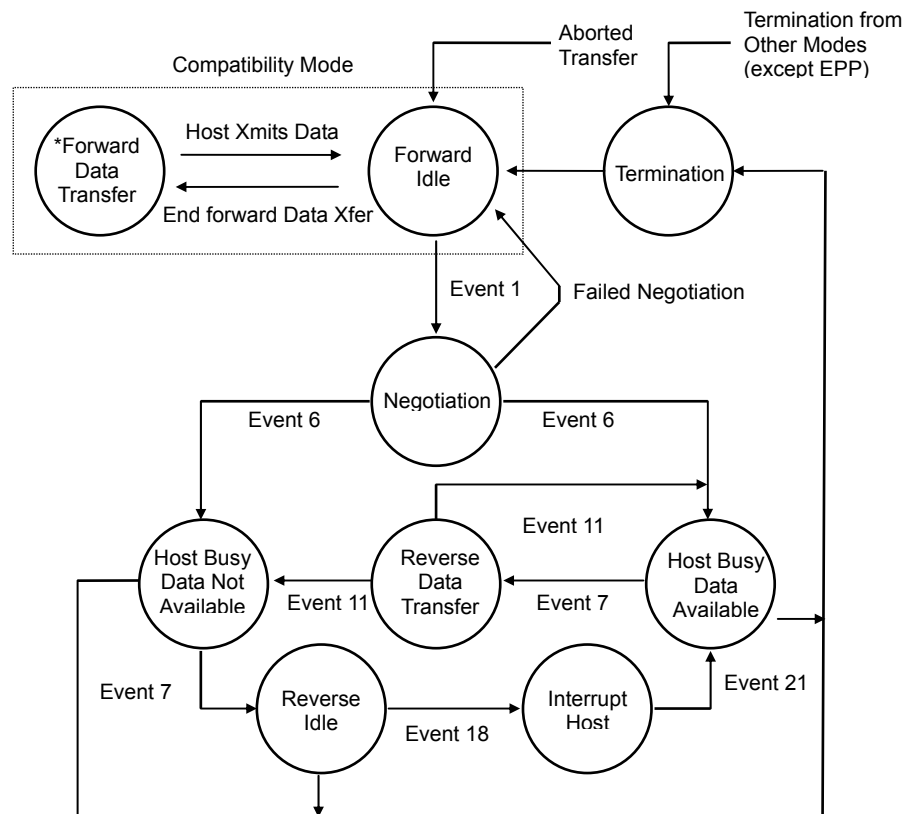

## 4.2.3 Negotiation

### Overview

Usually, the printer is started in Compatibility mode, which corresponds to the Centronics interface phase. When the host intends to switch to the Nibble or Byte mode, it sends a request and negotiates with the printer. A general flow of negotiations is given below.

- (1) The host sets the IEEE 1284 Active signal to High. In response, the printer moves into the Negotiation phase.
- (2) The printer replies whether it can execute the mode requested by the host.
- (3) The interface terminates the Negotiation phase and moves into the communication phase.

### Negotiation Procedure

The negotiations proceed as follows:

- (1) In IEEE 1284 communication mode, the host and printer are in Compatibility mode by default. They remain in Compatibility mode as long as the host recognizes the connected device as an IEEE 1284 compatible device.
- (2) To start negotiations, the host sets the communication mode request bit on the data path. (Event 0)
- (3) The host sets IEEE 1284 Active (nSelectIn) to High, and HostBusy (nAutoFd) to Low. (Event 1)
- (4) The printer responds by setting PtrClk (nAck) to Low, nDataAvail (nFault) to High, Xflag (Select) to High, and AckDatReq (PError) to High. (Event 2)
- (5) The host sets HostClk (nStrobe) to Low. In response, the printer latches the data of the communication mode request bit. (Event 3)
- (6) The host sets HostClk (nStrobe) and HostBusy (nAutoFd) to High. (Event 4)
- (7) If the printer has communication data to send to the host, it sets AckDataReq (PError) to Low, nDataAvail (nFault) to Low, and Xflag (Select) to the value corresponding to the communication mode. (Event 5)  
Xflag: Nibble Mode : Low  
Byte Mode : High
- (8) The printer sets PtrClk (nAck) to High to indicate that it is ready to read status lines. (Event 6)
- (9) If the printer has communication data to send to the host, the host moves into the Host Busy Available phase or Termination phase, and then returns to the Compatibility mode.
- (10) If the printer has no communication data to send to the host, the host moves into the Host Busy Data Not Available phase or Termination phase, and then returns to the Compatibility mode.
- (11) If the printer cannot support the communication mode requested by the host, it sets Xflag (Select) as follows:  
When Nibble mode is requested : High  
When Byte mode is requested : Low

**Precautions**

- (1) The Negotiation phase is triggered when the IEEE 1284 Active signal sent by the host becomes High.
- (2) In Compatibility mode, the time when the negotiation process begins is, as a general rule, after the host sets nStrobe to High and then the printer outputs an nAck pulse.

Once the nStrobe signal is set to High, however, the printer immediately moves into the Negotiation phase when the high state of IEEE 1284 Active is detected, even if the nAck pulse has yet to be output or is being output. In this case, if the printer has returned to Compatibility mode after Termination, no nAck pulse will be output.

- (3) Negotiations can be entered from the Busy or Error state of the Compatibility mode. In this case, the printer will not return to the Busy or Error state before the negotiations, but still remains in the printer state just after Termination.
- (4) If the host requested a communication mode that is not supported by the printer, it must move into the Termination phase and return to the Compatibility mode.

**Table 2.4.1 Definitions of Request Bits in IEEE 1284 Communication Mode**

Bit	Definition	Bit Values (76543210)	Hex. Code	Xflag	
				When Supported	In the Printer
7	Request Extensibility Link	10000000	80H	High	Low
6	Request EPP Mode	01000000	40H	High	Low
5	Request ECP Mode with RLE	00110000	30H	High	Low
4	Request ECP Mode	00010000	10H	High	Low
3	Reserved	00001000	08H	High	Low
2	Request Device ID: Return Data Using Nibble Mode Rev Channel Transfer	00000100	04H	High	High
	Byte Mode Rev Channel Transfer	00000101	05H	High	High
	ECP Mode Transfer without RLE	00010100	14H	High	Low
	ECP Mode Transfer with RLE	00110100	34H	High	Low
1	Reserved	00000010	02H	High	Low
0	Byte Mode Reverse Channel Transfer	00000001	01H	High	High
None	Nibble Mode Reverse Channel Transfer	00000000	00H	Low	Low
	Illegal or Contradictory Request	Other than above	Other than above	—	Low

The printer only supports the Nibble and Byte modes. For a request for any other mode, Xflag is set to Low.

## Data Communication from Printer to Host

### Nibble Mode

In this mode, data is transferred between the printer and the host through the procedure described below. The steps beginning from (1) are applicable when the Negotiation phase has switched to the Host Busy Data Available phase. If the Negotiation phase has switched to the Host Busy Data Not Available phase, the procedure starts at step (9).

- (1) After the negotiations for the entry into Nibble mode are completed, the host sets HostBusy (nAutoFd) to Low to indicate that it is ready to receive data from the printer. (Event 7)
- (2) The printer places the low-order four bits on the reverse channel data line and sets PtrClk (nAck) to Low. (Events 8 and 9)
- (3) The host sets HostBusy (nAutoFd) to High to indicate that it has latched data and received the signal in Event 9. (Event 10)
- (4) The printer sets PtrClk (nAck) to High. This completes transfer of the first nibble. (Event 11)
- (5) Steps (1) to (3) are repeated to transfer the high-order four bits, before proceeding to steps (6) and on.
- (6) After the host has set HostBusy (nAutoFd) to High (Event 10) and received data, the printer must set the four status lines as shown below. (Event 13)
  - PtrBusy (Busy) : Returned to the status given in Forward mode.
  - nDataAvail (nFault) : Set to Low if there is data to be sent.
  - AckDataReq (PError) : Set to Low if there is data to be sent.
  - Xflag (Select) : Set to the current mode (i.e., set to Low).
- (7) The printer sets PtrClk (nAck) to High. (Event 11)
- (8) After Event 11, the host checks the signals set by the printer in Event 13. With this check the host determines:
  1. Whether there is more data to be sent from the printer to the host;
  2. And whether data can be transferred from the host to the printer.
- (9) If there is no more data to be sent from the printer after the transfer of one byte (two nibbles), the host chooses one of three status selections:
  1. Performing Termination and returning to the Compatibility mode.
  2. Remaining in the Host Busy Data Not Available phase.
  3. Setting HostBusy (nAutoFd) to Low (Event 7) and moving to the Reverse Idle phase.
- (10) If there is more data to be received from the printer, the host chooses one of three status selections:
  1. Setting HostBusy (nAutoFd) to Low and indicating that the host is ready to receive.
  2. Remaining in the Host Busy Data Available phase.
  3. Performing Termination and returning to the Compatibility mode.
- (11) If the host selected the Host Busy Data Available phase and set HostBusy (nAutoFd) to Low, the printer repeats the steps from (2) onwards.
- (12) If the host selected the Reverse Idle phase and new data becomes available to be sent from the printer, the printer sets PtrClk to Low to request the host for an interrupt. (Event 18)
- (13) The printer sets PtrClk back to High. (Event 19)
- (14) Upon receiving a request for interrupt from the printer, the host responds by setting HostBusy (nAutoFd) to High. (Event 20)
- (15) Finally, the printer responds to the host by setting AckDataReq (PError) to Low, and then the host moves to the Host Busy Data Available phase. (Event 21)

## Byte Mode

In this mode, data is transferred between the printer and the host through the procedure described below. The steps beginning from (1) are applicable when the Negotiation phase has switched to the Host Busy Data Available phase. If the Negotiation phase has switched to the Host Busy Data Not Available phase, the procedure starts at step (9).

- (1) After the negotiations for the entry into the Byte mode are complete, the host indicates that it is ready to receive data from the printer. This is indicated by switching the data bus to a high-impedance state and setting HostBusy (nAutoFd) to Low. (Events 14 and 7)
- (2) The printer places communication data on the data bus. (Event 15)
- (3) The printer sets PtrClk (nAck) to Low. (Event 9)
- (4) The host sets HostBusy (nAutoFd) to High to indicate that it has latched data and received the signal in Event 9. (Event 10)
- (5) The printer must set the four status lines as shown below. (Event 13)
  - PtrBusy (Busy): Returned to the status given in the Forward mode.
  - nDataAvail (nFault): Set to Low if there is data to be sent.
  - AckDataReq (PError): Set to Low if there is data to be sent.
  - Xflag (Select): Set to the status given during the last negotiation (i.e., set to Low).
- (6) The printer sets PtrClk (nAck) to High (Event 10) and ends the Byte handshake. (Event 11)
- (7) The host indicates that it has succeeded in receiving the data. This is indicated by setting HostClk (nStrobe) to Low (Event 16) and then to High. (Event 17)
- (8) Events 10 and 16 may occur simultaneously, and Events 7 and 17 may occur simultaneously. (Such as when HostBusy and HostClk are used together.)
- (9) After transferring one byte of data, the printer signals to the host whether it has more data to transfer. When there is no more data to be received by the host from the printer, the host chooses one of three status selections:
  1. Performing Termination and returning to the Compatibility mode.
  2. Remaining in the Host Busy Data Not Available phase.
  3. Setting HostBusy (nAutoFd) to Low and moving to the Reverse Idle phase. (Event 7)
- (10) When more data is to be received from the printer, the host chooses one of three status selections:
  1. Setting HostBusy (nAutoFd) to Low and indicating that the host is ready to receive.
  2. Remaining in the Host Busy Data Available phase.
  3. Performing Termination and returning to the Compatibility mode.

## Device ID

The device ID is a character string that provides the ID, the type, and other information regarding the printer connected to the interface. When the printer receives a request for a device ID from the host, it replies with the following device ID:

```
<00>H<2E>H  
MFG : CITIZEN;  
CMD : ESC/POS;  
MDL : CT-S2000  
CLS : PRINTER;
```

The first two bytes of the device ID indicate the length of the entire device ID. For a description of a request for a device ID, refer to the "Negotiation" section.

When the host receives the device ID string of the length indicated by the first two bytes, it must do so consecutively, without terminating the process until the entire device ID is received. If the process is terminated halfway, the printer discards the rest of the string; when the printer receives a new request for the device ID, it sends the device ID beginning from the first character of the ID. After receiving the ID of the length indicated by the first two bytes, the host must carry out the termination even if the printer has data to send (Data Available). If the host does not carry out Termination and tries to receive data, the printer sends the printer status.

## Termination

Termination is the process of returning to Compatibility mode from the Nibble or Byte modes. When performing Termination, the host sets the signals as follows:

- IEEE 1284 Active (nSelectIn): Low
- HostBusy (nAutoFd): High (Event 22)

There are two methods of Termination:

- (1) Termination through a handshake between the host and the printer
- (2) Immediate termination

(1) Termination through a handshake between the host and the printer:

When switching from Reverse mode to Compatibility mode, this termination method can be used if the interface is activated (IEEE 1284 Active: High) and Event 22 has taken place.

- 1) The printer responds to IEEE 1284 Active by setting PtrBusy (Busy) and nDataAvail (nFault) to High. (Event 23)
- 2) The printer then inverts Xflag (Select) and sets PtrClk (nAck) to Low. (Event 24)
- 3) The host sets HostBusy (nAutoFd) to Low. (Event 25)
- 4) The printer returns nDataAvail (nFault), Xflag (Select), and AckDataReq (PError) to the status given in the Compatibility mode, and sets PtrClk (nAck) to High. (Events 26 and 27)
- 5) The host sets HostBusy (nAutoFd) to High to terminate the handshake and return the interface to the Compatibility Mode Idle phase. (Event 28)
- 6) The printer changes PtrBusy (Busy) to be able to receive data from the host.



(2) Immediate termination:

- 1) If the interface is deactivated (IEEE 1284 Active: Low) without Event 22 having taken place, the printer immediately performs Termination. In this termination, the data is not guaranteed, and the printer switches the data bus from output to input within 1 µsec.

In the Reverse Idle phase, the printer can notify the host that it has data to transfer to the host. The notification may occur simultaneously with termination in order for the host to move from the Idle phase to the Compatibility mode.

If the printer has data to send, it initiates the Interrupt phase indicated by Events 8 and 9. In this case, if 1284 - Active (nSelectIn) was set to Low before HostBusy (nAutoFd) changed from High to Low, the printer interprets that the host has switched to the Termination phase, and then completes the normal termination through handshaking.

## 4.3 Identification of Send Status

Because the status sent from the printer has certain fixed bits, it is possible to identify to which command the status belongs.

When using ASB (Automatic Status Back), however, the first byte of ASB should be checked, and then the three consecutive bytes except for XOFF should be treated as ASB data.

### Identification of Send Status

Command and Function	Status
GS I	<0**0****>B
GS r	<0**0****>B
XON	<00010001>B
XOFF	<00010011>B
DLE EOT	<0**1**10>B
ASB (1st byte)	<0**1**00>B
ASB (2nd - 4th bytes)	<0**0****>B

## 4.4 Memory Switch

Memory switch is a function to save the user selected settings into NV memory, where memory switch setting will be held unless memory switch is changed.

Memory switch is changed by manual setting or by command in the memory switch change mode.

\* Hereafter, memory switch is referred to as MSW.

### 4.4.1 Memory Switches

●: Factory setting

Switch No.	Setting	0 (OFF)	1 (ON)
MSW1-1	Power ON Info	● Valid	Not send
MSW1-2	Buffer Size	● 4K bytes	45 bytes
MSW1-3	Busy Condition	● Full/Err	Full
MSW1-4	Receive Error	● Print ?	No Print
MSW1-5	CR mode	● Ignored	LF
MSW1-6	Reserved	● Fixed	—
MSW1-7	DSR Signal	● Invalid	Valid
MSW1-8	Init Signal	● Invalid	Valid
MSW2-1	Reserved	—	● Fixed
MSW2-2	Auto Cutter	Invalid	● Valid
MSW2-3	Spool Print	● Invalid	Valid
MSW2-4	Full Col Print	● LineFeed	WaitData
MSW2-5	Resume aft PE	● Next	Top
MSW2-6	Reserved	● Fixed	—
MSW2-7	Reserved	● Fixed	—
MSW2-8	PNE Sensor	● Valid	Invalid
MSW3-1	Resum Ctrr Err	● Valid	Invalid
MSW3-2	Reserved	● Fixed	—
MSW3-3	Parallel 31 Pin	● Valid	Invalid
MSW3-4	Reserved	● Fixed	—
MSW3-5	Reserved	● Fixed	—
MSW3-6	No use	● Fixed	—
MSW3-7	CBM1000 Mode	Invalid	● Valid
MSW3-8	Resum Open Err	● Close	Command
MSW4-1	BM Measure	● Invalid	Valid
MSW4-2	Reserved	● Fixed	—
MSW4-3	Feed&Cut at TOF	Invalid	● Valid
MSW4-4	Reserved	● Fixed	—
MSW4-5	Reserved	● Fixed	—
MSW4-6	Reserved	● Fixed	—
MSW4-7	Reserved	● Fixed	—
MSW4-8	Partial only	Invalid	● Valid
MSW5-1	Buzzer	● Valid	Invalid
MSW5-2	Line Pitch	● 360	406
MSW5-3	USB Mode	Virtual COM	● Printer Class
MSW5-4	Reserved	● Fixed	—
MSW5-5	No use	● Fixed	—
MSW5-6	No use	● Fixed	—
MSW5-7	No use	● Fixed	—
MSW5-8	No use	● Fixed	—

Switch No.	Setting	Default	Set Values
MSW7-1	Baud Rate	19200 bps	1200 bps, 2400 bps, 4800 bps, 9600 bps, 19200 bps, 38400 bps, 57600 bps, 115200 bps
MSW7-2	Data Length	8 bits	7 bits, 8 bits
MSW7-3	Stop Bit	1 Bit	1 Bit, 2 Bits
MSW7-4	Parity	NONE	NONE, ODD, EVEN
MSW7-5	Flow Control	DTR/DSR	DTR/DSR, XON/XOFF
MSW7-6	DMA control	Valid	Valid, Invalid
MSW7-7	VCom Protocol	PC setting	PC setting, DTR/DSR, XON/XOFF
MSW8-1	Print Width	576 dots	640 dots, 576 dots, 512 dots, 436 dots, 432 dots, 420 dots, 384 dots, 360 dots
MSW8-2	Paper Type	1 Color Normal	1 Color Normal, 1 Color B.M, 1 Color Label, 2 Color Normal, 2 Color B.M
MSW9-1	Code Page	PC437	PC437, Katakana, PC850,858, PC860, PC863, PC865, PC852, PC866, PC857, WPC1252, PC864, ThaiCode18
MSW9-2	Int'Char Set	USA	USA, France, Germany, England, Denmark, Sweden, Italy, Spain, Japan, Norway, Denmark 2, Spain 2, Latin America, Korea
MSW9-3	Kanji	OFF	ON, OFF
MSW9-4	JIS/Shift JIS	JIS	JIS, Shift JIS
MSW10-1	Print Density	100%	70%, 75%, 80%, 85%, 90%, 95%, 100%, 105%, 110%, 115%, 120%, 125%, 130%, 135%, 140%
MSW10-2	Print Speed	Level 9	Level 1, Level 2, Level 3, Level 4, Level 5, Level 6, Level 7, Level 8, Level 9
MSW10-3	ACK Timing	Before BUSY	Before Busy, Same Period, After Busy

## 4.4.2 Details of Memory Switches

This section describes the function of memory switch.

Memory switches with no function settings are omitted the description, though default setting shall not be changed.

If memory switch is manually set, Error LED is lighted if MSW1 to 5 is set to on, or unlighted if set to off. For MSW7 to 10, only lighted if factory setting is used.

### MSW1

- MSW1-1: Setting the power ON notify

[Outline] At power ON, to notify the host of the printer power ON, printer can send to host 3 byte power ON notify's status data (<3B>H <31>H <00>H).

Set to enable/disable for sending the power ON notify's status data.

	<b>OFF (0)</b>	<b>ON (1)</b>
Power ON Info	Valid	Not send

ON (1) OPERATION:

Function to notify power ON is disabled, sending no status to host.

OFF (0) OPERATION:

Function to notify power ON is enabled, sending status to host.

[Default] OFF (0) [Valid]

- MSW1-2: Input buffer

[Outline] Select the input buffer (receive buffer) size.

	<b>OFF (0)</b>	<b>ON (1)</b>
Buffer Size	4k bytes	45 bytes

ON (1) OPERATION: Input buffer size is set to 45 bytes.

From when free area decreases to 16 bytes until it increases to 26 bytes, receive buffer is full with printer BUSY status.

OFF (0) OPERATION: Input buffer size is set to 4K bytes.

From when free area decreases to 128 bytes until it increases to 256 bytes, receive buffer is full with printer BUSY status.

[Default] OFF (0) [4k bytes]

\* For USB I/F, 4k bytes setting only enabled.

- MSW1-3: Busy condition

[Outline] Select the condition that printer is BUSY. Automatic status send function also runs.

	<b>OFF (0)</b>	<b>ON (1)</b>
Busy Condition	Buffer full/Off-line	Buffer full

ON (1) OPERATION: If receive buffer is full, printer is BUSY.

Automatic status send (ASB) function is enabled.

OFF (0) OPERATION: If receive buffer is full or off-line, printer is BUSY.

Automatic status send (ASB) function is disabled.

[Additional Description]

Even if ON is selected, printer enters BUSY status when power is turned on or reset by I/F or at self test print.

<b>Printer Status</b>		<b>MSW1-3 OFF</b>	<b>MSW1-3 ON</b>
Off-line	Power-up or reset used by I/F	•	•
	Self-print	•	•
	Cover open	•	—
	Paper-feed by FEED SW	•	—
	Paper-end (including print stop in PNE)	•	—
	Error generation	•	—
	Waiting during macro run by FEED SW	•	—
Buffer full	Receive buffer full	•	•

[Default] OFF (0) [Buffer full/off-line]

- MSW1-4: Receive error character

[Outline] Select handling of data detected where the serial communication detects the receive data framing error, overrun error and parity error.

	<b>OFF (0)</b>	<b>ON (1)</b>
Receive Error	Print ?	No Print

ON (1) OPERATION: Not printed as "?"

OFF (0) OPERATION: Printed as "?"

[Default] OFF (0) [Print ?]

- MSW1-5: CR code

[Outline] Select the printer when receiving CR(<0D>H) code.

	<b>OFF (0)</b>	<b>ON (1)</b>
CR mode	Ignored	LF

ON (1) OPERATION:

Select the same operation with LF when receiving CD code.

Print data in print buffer and put linefeeds as specified.

OFF (0) OPERATION:

CR code may be ignored with no actions if receiving CR code.

[Default] OFF (0) [Ignored]

- MSW1-6: Reserved [Fixed to OFF (0)]
- MSW1-7: DSR signal

[Outline] Printer can be reset with DSR (serial I/F-6pin) signal. Select enable/disable of reset function with this signal.

	<b>OFF (0)</b>	<b>ON (1)</b>
DSR Signal	Invalid	Valid

ON (1) OPERATION: Used as reset signal  
 OFF (0) OPERATION: Not used as reset signal

[Default] OFF (0) [Invalid]  
 \* Serial I/F specification only enabled.

- MSW1-8: INIT signal

[Outline] Printer can be reset with INIT (serial I/F-25Pin) signal. Select enable/disable of reset function with this signal.

	<b>OFF (0)</b>	<b>ON (1)</b>
INIT Signal	Invalid	Valid

ON (1) OPERATION: Used as reset signal  
 OFF (0) OPERATION: Not used as reset signal

[Default] OFF (0) [Invalid]  
 \* Serial I/F specification only enabled.

## **MSW2**

- MSW2-1: Reserved [Fixed to ON(1)]
- MSW2-2: Auto-cutter operation

[Outline] Select auto-cutter enable/disable.

	<b>OFF (0)</b>	<b>ON (1)</b>
Auto Cutter	Invalid	Valid

ON (1) OPERATION: Auto-cutter enabled  
 OFF (0) OPERATION: Auto-cutter disabled

[Default] ON (1) [Valid]

• MSW2-3: Buffering

[Outline] Select buffering print enable/disable.

	<b>OFF (0)</b>	<b>ON (1)</b>
Spool Print	Invalid	Valid

ON (1) OPERATION: Buffering print is enabled.

- Save a certain amount of print buffer to internal RAM for collective printing.
- If cut command is entered, print starts even before the specified amount is reached.
- If no cut command is entered and the entered data does not reach the specified amount, data entered to print buffer is not printed.

OFF (0) OPERATION: Buffering print is disabled.

[Default] OFF (0) [Valid]

• MSW2-4: Full Columns print

[Outline] Select the processing if print data closes to the end of line or the right of print width.

	<b>OFF (0)</b>	<b>ON (1)</b>
Full Col print	Line Feed	Wait Data

ON (1) OPERATION:

If printer receives data/command exceeding the full column, printer further waits for print data. If data exceeding the full column is a command, printer operates following the command.

OFF (0) OPERATION:

If printer receives data/command exceeding the full column, it automatically prints data in buffer followed by a line-feed.

<Example>

If the first data after exceeding the full column is a control code such as<ESC !>;  
 If OFF (0) is set, print data within buffer and put a line feed, or  
 If ON (1) is set, print no data within buffer and further wait for print data.

[Default] OFF (0) [Line Feed]

• MSW2-5: Cover close return

[Outline] Select the operating taken after printer cover is opened during printing, paper is refilled with no-paper (PE) is detected, then cover is closed to restart printing.

	<b>OFF (0)</b>	<b>ON (1)</b>
Resume aft PE	Next	Top

ON (1) OPERATION:

Restart printing from the heading of remaining data.  
 During printing image, bar code, vertically-doubled character or page mode, if cover open or PE is detected, then after return, restart printing from heading of the remaining data.

OFF (0) OPERATION:

Print data continued from the previous printing. During printing, if cover open or PE is detected, then after return, restart printing data immediately after an error data.

[Default] OFF (0) [Next]

- MSW2-6: Reserved [Fixed to OFF (0)]
- MSW2-7: Reserved [Fixed to OFF (0)]
- MSW2-8: PNE sensor

[Outline] Select paper near-end enable/disable.

	<b>OFF (0)</b>	<b>ON (1)</b>
PNE Sensor	Valid	Invalid

ON (1) OPERATION: Disable paper near-end  
 OFF (0) OPERATION: Enable paper near-end

[Default] OFF (0) [Valid]

### **MSW3**

- MSW3-1: Auto-cutter return

[Outline] Select return method from cutter lock error.

	<b>OFF (0)</b>	<b>ON (1)</b>
Resum Cctr Err	Valid	Invalid

ON (1) OPERATION: Return by command.  
 After removing error cause, return with command <DLE ENQ n>.  
 OFF (0) OPERATION: Return with FEED switch.  
 After removing error cause, return by long pressing FEED SW (1 sec or longer).

[Default] OFF (0) [Valid]

- MSW3-2: Reserved [Fixed to OFF (0)]
- MSW3-3: Parallel 31 pin

[Outline] Printer can be reset by parallel I/F –31 Pin signal. Select the handling of this signal.

	<b>OFF (0)</b>	<b>ON (1)</b>
Parallel 31 pin	Valid	Invalid

ON (1) OPERATION: Used as reset signal  
 OFF (0) OPERATION: Not used as reset signal

[Default] OFF (0) [Valid]  
 \* Parallel I/F specification only enabled.

- MSW3-4: Reserved [Fixed to OFF (0)]
- MSW3-5: Reserved [Fixed to OFF (0)]
- MSW3-6: Reserved [Fixed to OFF (0)]



- MSW3-7: CBM-1000 compatible mode

[Outline] Select enable/disable of CBM-1000 compatible mode.

	<b>OFF (0)</b>	<b>ON (1)</b>
CBM1000 Mode	Invalid	Valid

ON (1) OPERATION: Enable CBM1000 compatible mode.

Control code <ESC ~ J> becomes available.

OFF (0) OPERATION: CBM1000 compatible mode is disabled.

[Default] ON (1) [Valid]

- MSW3-8: Cover open during printing

[Outline] Select the release method of cover open error during printing.

	<b>OFF (0)</b>	<b>ON (1)</b>
Resum Open Err	Close	Command

ON (1) OPERATION: Cover open error during printing becomes a return allowed error.

Returned with command <DLE ENQ n> after cover is closed.

OFF (0) OPERATION: Cover open error during printing becomes an automatic return error.

Automatically returned from cover open error by closing the cover.

[Default] OFF (0) [Close]

## **MSW4**

- MSW4-1: Automatic length measurement

[Outline] In selecting black mark paper, set the enable/disable of automatic length measurement.  
(Black mark/label support model only)

	<b>OFF (0)</b>	<b>ON (1)</b>
BM Measure	Invalid	Valid

ON (1) OPERATION: Automatic length measurement is enabled.

At power-up, measurement operation is taken.

OFF (0) OPERATION: Automatic length measurement is disabled.

Operation follows the value set by <GS I>.

[Default] OFF (0) [Invalid]

- MSW4-2: Reserved [Fixed to OFF(0)]

- MSW4-3: Paper heading cut

[Outline] When cover is closed, feed paper about 13mm before cut.

	<b>OFF (0)</b>	<b>ON (1)</b>
Feed & Cut at TOF	Invalid	Valid

ON (1) OPERATION: Paper heading cut is enabled.

OFF (0) OPERATION: Paper heading cut is disabled.

[Default] ON (1) [Valid]

- MSW4-4: Reserved [Fixed to OFF (0)]
- MSW4-5: Reserved [Fixed to OFF (0)]
- MSW4-6: Reserved [Fixed to OFF (0)]
- MSW4-7: Reserved [Fixed to OFF (0)]
- MSW4-8: Forcible partial cut

[Outline] Select the operation taken when full cut command is received.

	<b>OFF (0)</b>	<b>ON (1)</b>
Partial only	Invalid	Valid

ON (1) OPERATION: When full cut command is received, partial cut, not full cut, is taken.

OFF (0) OPERATION: When full cut command is received, full cut is taken.

[Default] ON (1) [Valid]

## **MSW5**

- MSW5-1: Buzzer

[Outline] Select the enable/disable of buzzer.

	<b>OFF (0)</b>	<b>ON (1)</b>
Buzzer	Valid	Invalid

ON (1) OPERATION: Disable buzzer

When an error occurs or memory switch setting is changed manually, no buzzer sounds.

OFF (0) OPERATION: Enable buzzer.

When an error occurs or memory switch setting is changed manually, the buzzer sounds.

[Default] OFF (0) [Valid]

- MSW5-2: Basic vertical calculation pitch

[Outline] Select the basic calculation pitch in the paper feed direction.

	<b>OFF (0)</b>	<b>ON (1)</b>
Line Pitch	360	406

ON (1) OPERATION: Basic vertical calculation pitch is set to 1/406 inch.

Line-feed length is 3.75mm by default.

OFF (0) OPERATION: Basic vertical calculation pitch is set to 1/360 inch.

Line-feed length is 4.23mm by default.

[Default] OFF (0) [360]

- MSW5-3: USB mode

[Outline] Select USB mode.

	<b>OFF (0)</b>	<b>ON (1)</b>
USB Mode	Virtual COM	Printer Class

ON (1) OPERATION: Operated as Printer class

OFF (0) OPERATION: Operated as virtual COM class

[Default] ON (1) [Printer Class]

- MSW5-4: Reserved [Fixed to OFF (0)]
- MSW5-5: Reserved [Fixed to OFF (0)]
- MSW5-6: Not defined [Fixed to OFF (0)]
- MSW5-7: Not defined [Fixed to OFF (0)]
- MSW5-8: Not defined [Fixed to OFF (0)]

## **MSW7**

- MSW7-1: Baud rate

[Outline] Select baud rate which is serial interface communication condition.  
Enabled if DSW1-1 OFF is set [following memory switch setting].

	<b>Setting Value</b>
Baud Rate	1200bps, 2400 bps, 4800 bps, 9600 bps, 19200 bps, 38400 bps, 57600 bps, 115200 bps

[Default] 19200 bps

- MSW7-2: Data length

[Outline] Select the data length, which is a serial interface communication condition.  
Enabled if DSW1-1 OFF is set [following memory switch setting].

	<b>Setting Value</b>
Data Length	7 bits, 8 bits

[Default] 8 bits

- MSW7-3: Stop bit

[Outline] Select the stop bit, which is a serial interface communication condition.  
Enabled if DSW1-1 OFF is set [following memory switch setting].

	<b>Setting Value</b>
Stop Bit	1 Bit, 2 Bits

[Default] 1 bit

- MSW7-4: Parity

[Outline] Select the parity, which is a serial interface communication condition.  
Enabled if DSW1-1 OFF is set [following memory switch setting].

	<b>Setting Value</b>
Parity	NONE, ODD, EVEN

[Default] None

- MSW7-5: Busy control

[Outline] Select the busy control, which is a serial interface communication condition.  
Enabled if DSW1-1 OFF is set [following memory switch setting].

	<b>Setting Value</b>
Flow Control	DTR/DSR, XON/XOFF

[Default] DTR/DSR

- MSW7-6: DMA control

[Outline] Select the enable/disable of DMA (Direct Memory Access) control.

	<b>Setting Value</b>
DMA control	Valid, Invalid

[Default] Valid

- MSW7-7: VCom flow control

[Outline] In MSW5-3, select the flow control when virtual COM is set.

	<b>Setting Value</b>
VCom Protocol	PC setting, DTR/DSR, XON/XOFF

[Default] PC setting

## **MSW8**

- MSW8-1: Print width

[Outline] Select the print width in dots.

	<b>Setting Value</b>
Print Width	640 dots, 576 dots, 512 dots, 436 dots, 432 dots, 420 dots, 384 dots, 360 dots

[Default] 576 dots

- MSW8-2: Paper type

[Outline] Select the paper type used.

	<b>Setting Value</b>
Paper Type	1 Color Normal, 1 Color BM, 1 Color Label, 2 color Normal, 2 Color BM

[Default] 1 Color Normal

## **MSW9**

- MSW9-1: Code page

[Outline] Select the code page.

	<b>Setting Value</b>
Code Page	PC437, Katakana, PC850, PC858, PC860, PC863, PC865, PC852, PC866, PC857, WPC1252, PC864, ThaiCode18

[Default] PC437

- MSW9-2: International character

[Outline] Select the international character.

	<b>Setting Value</b>
Int'Char Set	USA, France, Germany, UK, Denmark, Sweden, Italy, Spain, Japan, Norway, Denmark 2, Spain2, Latin America, Korea

[Default] USA

- MSW9-3: Kanji

[Outline] Select the enable/disable of Kanji.

	<b>Setting Value</b>
Kanji	ON, OFF

[Default] OFF

- MSW9-4: JIS

[Outline] Select the kanji code system.

	<b>Setting Value</b>
JIS/Shift JIS	JIS, Shift JIS

[Default] JIS

## **MSW10**

- MSW10-1: Print density

[Outline] Select the print density.

	<b>Setting Value</b>
Print Density	70%, 75%, 80%, 85%, 90%, 95%, 100%, 105%, 110%, 115%, 120%, 125%, 130%, 135%, 140%

[Default] 100%

- MSW10-2: Print speed

[Outline] Select the print speed.

	<b>Setting Value</b>
Print Speed	Level 1, Level 2, Level 3, Level 4, Level 5, Level 6, Level 7, Level 8, Level 9

[Default] Level 9

- MSW10-3: ACK output timing

[Outline] Select the ACK signal output timing in parallel interface.

	<b>Setting Value</b>
ACK Timing	Before Busy, Same Period , After Busy

[Default] Before Busy